


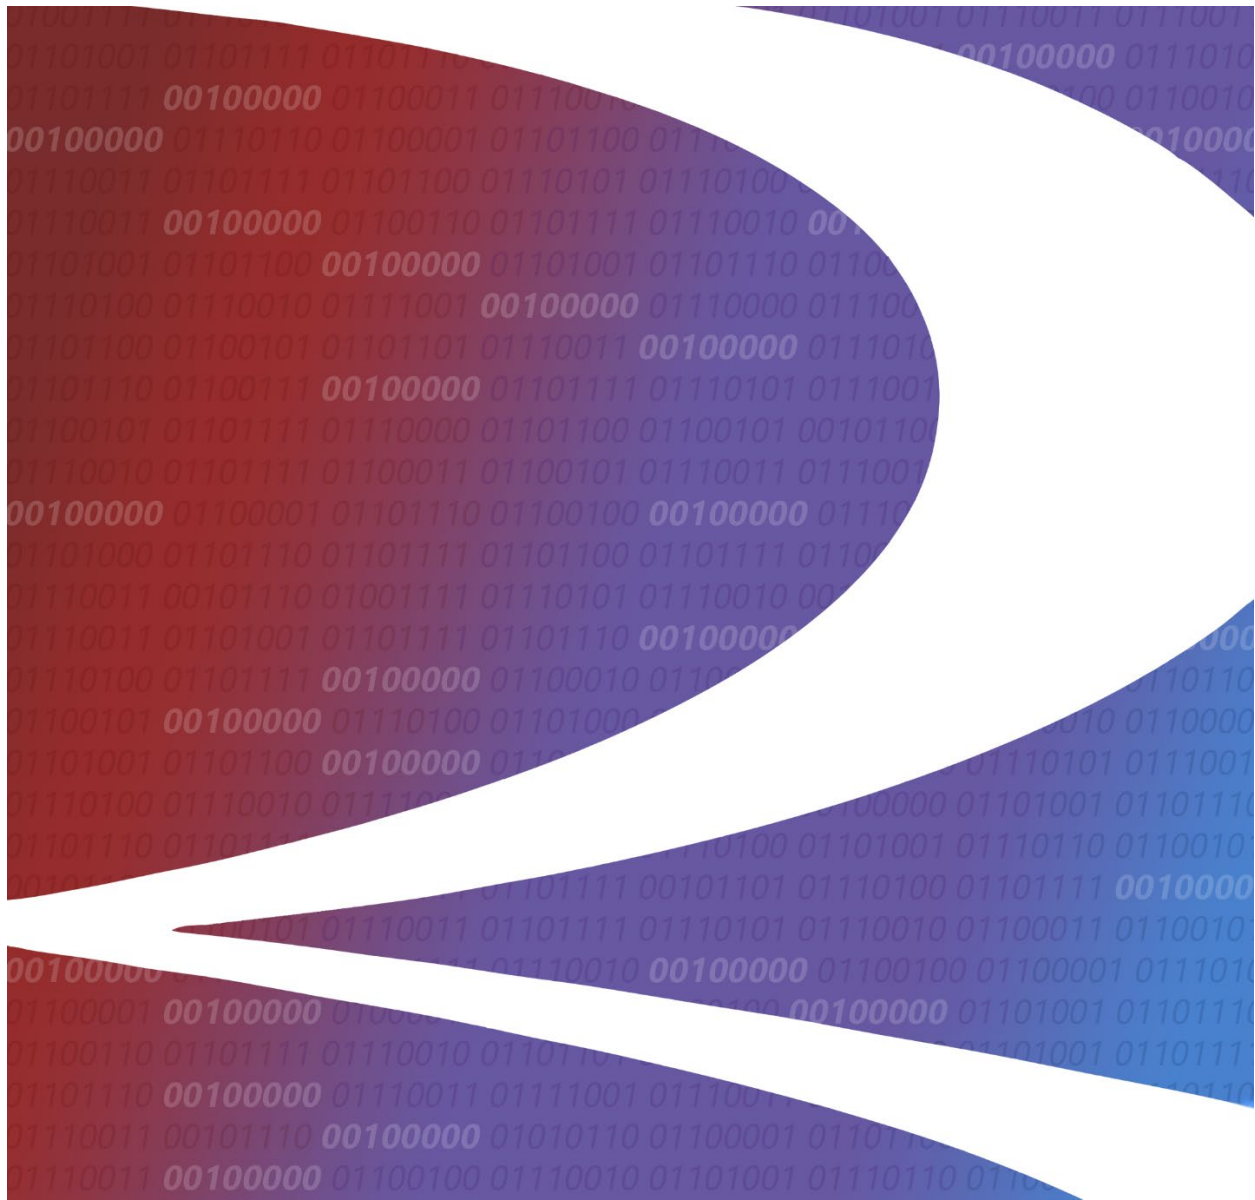

Junction Interchange (JUNC) User Guide



© 2024 Railinc. All Rights Reserved.

Last Updated: January 2024

Legal Disclaimer: Any actions taken in reliance on or pursuant to this document are subject to Railinc's Terms of Use, as set forth in <https://public.railinc.com/terms-use>, and all AAR rules.

Table of Contents

Welcome to Junction Interchange (JUNC).....	1
Overview	1
Getting Started	2
Register to Use Railinc SSO	2
System Requirements	2
Accessing the Railinc Customer Success Center	2
Learning about User Roles	2
Logging In	2
Logging Out	3
Query.....	4
Browsing Junctions	4
Browsing Junction Settlements	5
Browsing Interchanges	7
Browsing Car Hire Liability Limits	8
Manage Junctions.....	11
Managing Junction Details.....	11
Editing a JUNC.....	12
Expiring a JUNC.....	12
Voiding a JUNC	13
Resending a JUNC.....	13
Managing Junction Settlement Details.....	14
Expiring a JUNC Settlement.....	14
Voiding a JUNC Settlement.....	15
Resending a JUNC Settlement	15
Managing Interchange Details	16
Cloning an Interchange	17
Editing an Interchange.....	17
Expiring an Interchange	18
Voiding an Interchange	19
Resending an Interchange	19
Managing Car Hire Liability Limit Details	20
Editing a Car Hire Liability Limit	20
Expiring a Car Hire Liability Limit	21
Add JUNCs, Interchanges, etc.	22
Adding a Junction.....	22
Query a SPLC.....	23
Adding a Junction Settlement	24
Adding an Interchange	25
Adding a Car Hire Liability Limit	27
Summary of Interchange Types.....	29
Forms.....	31
Junction Settlement/Handling Carrier Form (AD-102).....	31
Junction Interchange Update Form (AD-103).....	31
Car Hire Rule 5 Table Update Request for Transfer Of Car Hire Liability (AD-104)	31

List of Exhibits

Exhibit 1. User Roles and Tasks	2
Exhibit 2. MidRange IRF Home Page	3
Exhibit 3. Browse Junction	4
Exhibit 4. Junction Search Results	5
Exhibit 5. Browse Junction Settlements	5
Exhibit 6. Browse Junction Settlement Search Results	6
Exhibit 7. Browse Interchange	7
Exhibit 8. Browse Interchange Search Results	8
Exhibit 9. Browse Car Hire Liability Limits	9
Exhibit 10. Browse Car Hire Liability Limits Search Results.....	9
Exhibit 11. Car Hire Liability Limits Details.....	10
Exhibit 12. JUNC Details.....	11
Exhibit 13. Edit Junction.....	12
Exhibit 14. Expire a JUNC.....	13
Exhibit 15. JUNC Settlement Details.....	14
Exhibit 16. Expire a JUNC Settlement.....	15
Exhibit 17. Interchange Details.....	16
Exhibit 18. Add Interchange Page (for a Cloned Interchange).....	17
Exhibit 19. Edit Interchange.....	18
Exhibit 20. Expire an Interchange	18
Exhibit 21. Car Hire Liability Limit Details	20
Exhibit 22. Edit Car Hire Liability Limit	21
Exhibit 23. Add Junction.....	22
Exhibit 24. Query SPLC.....	23
Exhibit 25. SPLC Search Results.....	24
Exhibit 26. Add Junction Settlement.....	24
Exhibit 27. Commodity Restrictions	25
Exhibit 28. Add Interchange	26
Exhibit 29. Add Car Hire Liability Limit.....	27

Welcome to Junction Interchange (JUNC)

Overview

The Junction Interchange File (JUNC) is the basis for identification of inter-carrier activities. This file contains records for each junction abbreviation and pairs of reporting marks that interchange at that junction. It also describes physical locations and defines the types of activities which occur at that location including:

- Boundary crossings
- Per diem relief points
- Rail to rubber interchange
- Shop interchange
- Water interchange
- Traditional rail to rail interchange

A Junction is a description of a geographical location that includes the state or province in which it is located, the associated 6 or 9-digit Standard Point Location Code (JUNC), and the name by which this location is known. In addition, each Junction is assigned a unique 3 or 5-character Junction abbreviation. In the transportation industry, a Junction is a location at which an Interchange of equipment and/or freight may take place.

Getting Started

The JUNC application uses Railinc Single Sign-On (SSO) to manage permissions. It can be accessed from the Railinc portal at <http://public.railinc.com>. The **Customer Login** link is located at the upper right of the page.

Register to Use Railinc SSO

To use JUNC, you must register to use Railinc SSO. Refer to the [Railinc Single Sign-On User Guide](#) for details. Once you have access to Railinc SSO, you must request access to JUNC within SSO.

System Requirements

For information about the system requirements of Railinc web applications and for information about downloading compatible web browsers and file viewers, refer to the [Railinc UI Dictionary](#).

Accessing the Railinc Customer Success Center

The Railinc Customer Success Center provides reliable and timely high-level support for Railinc customers. Representatives are available to answer calls and respond to emails from 7:00 a.m. to 7:00 p.m. Eastern time, Monday through Friday, and provide on-call support via pager for all other hours to ensure support 24 hours a day, 7 days a week. Contact us toll-free by phone at 877- RAILINC (1-877-724-5462) or send an email directly to csc@railinc.com.

Learning about User Roles

Your assigned user role determines what functions you can perform. User roles are assigned by Railinc or by your company administrator through the SSO interface.

Exhibit 1. User Roles and Tasks

Task	Description
MRIRF Application Admin	Allows Railinc personnel to manage MRIRF permissions for users.
MRIRF Read Only	Allows users to have read only access to JUNC.
MRIRF JUNC Maintainer	Provides users with the maintenance capability in JUNC to add, update, and expire JUNCs. For Railinc personnel only (Interline Product Support).


Logging In

To log into the JUNC system:

Getting Started

1. Open your internet browser and enter <https://public.railinc.com> to open the Railinc website.
2. Select the Customer Login link in the upper right of the page. The Account Access page is displayed.
3. Enter your **User ID** and **Password**. Select **Sign in**. The Railinc Launch Pad is displayed.
4. Under My Applications, select **MRIRF**. The MRIRF Home page is displayed.

Exhibit 2. MidRange IRF Home Page

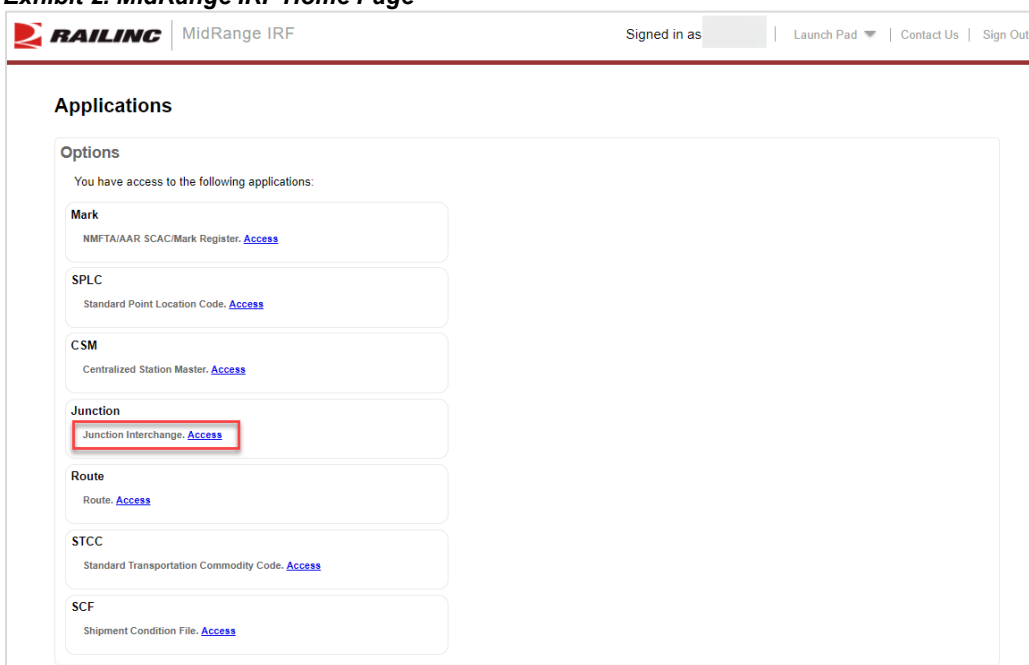

5. Select the **Access** link for Junction. The Browse Junction page is displayed ([Exhibit 3](#)).

Logging Out

Select the **Sign Out** link to end a JUNC session and return to the SSO Login Page.

Query

The JUNC application allows users to query for Junctions, Junction Settlements, Interchanges and Car Hire Liability Limits.

Browsing Junctions

Use the following procedure to browse for Junctions:

1. Log into the JUNC application. The Browse Junction page is displayed. This page is also viewable by selecting **Query > Query Junction** from the main menu.

Exhibit 3. Browse Junction

The screenshot shows the RAILINC Junction Interchange search interface. At the top, there is a header bar with the RAILINC logo, the text 'Junction Interchange', and user information 'Signed in as document'. Below the header is a navigation bar with 'Query', 'Add', and 'Documentation' tabs. The main content area is titled 'Browse Junction' and contains a 'Junction Search' form. The form has five input fields: 'Junction Code', 'Junction Name', 'SPLC', 'St/Prov' (a dropdown menu), and 'Country'. Below these fields is a 'Status' dropdown menu set to 'ALL'. At the bottom right of the form are two buttons: 'Clear' (orange) and 'Search' (green).

2. Complete one or more of the following fields:
 - a. **Junction Code:** Enter one or more of the 3 to 5 alphabetic characters assigned to a location.
 - b. **Junction Name:** Enter one or more characters of the city or common name for the location.
 - c. **SPLC:** Enter one or more digits of the six (or nine) Standard Point Location Code used to identify geographic places.
 - d. **State/Province:** Select the 2 digit State/Province abbreviation from the drop-down.
 - e. **Country:** Enter one or more characters of a two digit Country Code (US, CA or MX).
3. Along with the selected query criteria, use the **Status** field to help filter results. Select ALL, Active and Future, or Historical.
4. Select **Search** to initiate the search for Junction records. All found records are displayed.

Exhibit 4. Junction Search Results

RAILINC Junction Interchange Signed in as document Launch Pad Contact Us Sign Out

Query Add Documentation

Browse Junction

Junction Search
 Junction Code: Junction Name:
 SPLC: St/Prov: Country:
 Status:

Showing 1 to 3 of 3 entries

Junction Code	SPLC	Name	St/Prov	Country	Flags	Effective Date	Expiration Date	Maintained By	AAR Maintenance Date
SAXMA	802130000	SAXMAN	AK	US	B	1991-01-01	9999-12-31	EFPR01	1996-11-20 16.35.20
WHITT	808155000	WHITTIER	AK	US	B	1991-01-01	9999-12-31	EFPR01	1997-06-26 14.00.33
NENAN	818040000	NENANA	AK	US	B	1991-01-01	9999-12-31	EFPR01	1996-11-20 16.35.20

5. As needed, the headings above the columns can be selected to sort the data ascending or descending.
6. Perform one of the following additional actions:
 - a. To clear the results and begin a new search, select the **Clear** button.
 - b. Select a record by clicking on the row to view full details of that record. The Junction Details page is displayed ([Exhibit 12](#)). See [Managing Junction Details](#) for additional actions.

Browsing Junction Settlements

A Junction Settlement Road is defined as a road that is identified as a party to the rate and/or is identified on the waybill in order to show actual origin or destination. Use the following procedure to browse for Junction Settlements:

1. Log into the JUNC application. Select **Query > Junction Settlement**. The Browse Junction Settlements page is displayed.

Exhibit 5. Browse Junction Settlements

RAILINC Junction Interchange Signed in as document Launch Pad Contact Us Sign Out

Query Add Documentation

Browse Junction Settlements

Junction Settlement Search
 Mark Only ☐
 Junction Code:
 Mark 1: Role Type 1:
 Mark 2: Role Type 2:
 Status:

2. Complete one or more of the following fields:
 - a. **Mark Only:** Select this field to grey-out the Mark2 and Role Type 2 fields so that only the Mark field is considered in the search.
 - b. **Junction Code:** Enter one or more of the 3 to 5 alphabetic characters assigned to a location.
 - c. **Mark 1:** Enter one or more of the 2 to 4 characters in the MARK or SCAC (Standard Carrier Alpha Code) that identifies the transportation entity identified as Mark 1 in a junction settlement.
 - d. **Role Type 1:** Enter one or more of the 2 characters used to indicate the role of Mark 1 in the junction settlement (Junction Settlement (JS) or Line Haul (LH)). Only a road capable of interline settlement is given the role of LH.
 - e. **Mark 2:** Enter one or more of the 2 to 4 characters in the MARK or SCAC (Standard Carrier Alpha Code) that identifies the transportation entity identified as Mark 2 in the junction settlement.
 - f. **Role Type 2:** Enter one or more of the 2 characters used to indicate the role of Mark 2 in the junction settlement (Junction Settlement (JS) or Line Haul (LH)). Only a road capable of interline settlement is given the role of LH.
3. Along with the selected query criteria, use the **Status** field to help filter results. Select ALL, Active and Future, or Historical.
4. Select **Search** to initiate the query. All found records are displayed.

Exhibit 6. Browse Junction Settlement Search Results


Junction Interchange
Signed in as document | Launch Pad ▼ | Contact Us | Sign Out

Query ▼ | Add ▼ | Documentation ▼

Browse Junction Settlements

Junction Settlement Search
Mark Only ☐
Junction Code:
Mark 1: Role Type 1:
Mark 2: Role Type 2:
Status:

Showing 1 to 7 of 7 entries

Junction Code	Mark 1	Role Type 1	Mark 2	Role Type 2	Effective Date	Expiration Date	Maintained By	AAR Maintenance Date
ANGJC	NS	LH	CISD	JS	1994-06-01	1996-01-01	EFPPXR01	1996-09-11 14.00.40
DOTHA	NS	LH	HS	JS	1994-06-01	1995-12-05	EFPPXR01	1996-09-11 14.00.40
HUNTS	NS	LH	HMCRC	JS	1994-06-01	9999-12-31	EFPPXR01	1996-04-19 03.58.19
IUKA	NS	LH	TISH	JS	2000-07-07	2011-08-16	EFPPXR01	2011-08-17 14.01.49
STAVL	NS	LH	ARC	JS	1994-06-01	1996-01-01	EFPPXR01	1996-09-11 14.00.40
WADLY	NS	LH	LW	JS	1994-06-01	1995-12-05	EFPPXR01	1996-09-11 14.00.40
NUMBE	NSHR	JS	CR	LH	1994-06-01	1999-05-31	EFPPXR01	1999-03-10 14.00.16

5. As needed, the headings above the columns can be selected to sort the data ascending or descending.

6. Perform one of the following additional actions:
 - a. To clear the results and begin a new search, select the **Clear** button.
 - b. To view full details for a record click on the row containing that record. The JUNC Settlement Details page is displayed ([Exhibit 15](#)). See [Managing Junction Settlement Details](#) for additional actions.

Browsing Interchanges

Use the following procedure to browse for Interchanges:

1. Log into the JUNC application. Select **Query > Interchange**. The Browse Interchange page is displayed.

Exhibit 7. Browse Interchange

The screenshot shows the 'Browse Interchange' page in the JUNC application. The page layout includes a top header with the RAILINC logo, the page title 'Junction Interchange', and user information 'Signed in as document'. Below the header is a navigation bar with three tabs: 'Query', 'Add', and 'Documentation'. The main content area is titled 'Browse Interchange' and contains a search form. The form is titled 'Interchange Search' and includes a 'Mark Only' checkbox. Below this are several input fields: 'Mark 1', 'Junction Code', 'Mark 2', 'FSAC 1', 'FSAC 2', 'Reporting Mark 1', and 'Reporting Mark 2'. There is also a dropdown menu for 'Interchange Type' and a 'Status' dropdown menu currently set to 'ALL'. At the bottom right of the form are two buttons: 'Clear' (orange) and 'Search' (green).

2. Complete one or more of the following fields:
 - a. **Mark Only:** Selecting this option updates the screen to remove the Mark2 input fields. This allows interchanges to be searched irrespective of whether a Mark 1 is identified as 1 or 2 in an interchange agreement.
 - b. **Mark 1:** Enter the 2 to 4 characters in the MARK or SCAC (Standard Carrier Alpha Code) that identifies the transportation entity identified as Mark 1 in the interchange agreement.
 - c. **FSAC 1:** Enter the up to 5 digit Freight Station Accounting Code (FSAC) Number identified as FSAC 1 in the interchange.
 - d. **Reporting Mark 1:** Enter the 2 to 4 characters in the MARK or SCAC (Standard Carrier Alpha Code) that identifies the transportation entity identified as Reporting Mark 1 in the interchange agreement.
 - e. **Junction Code:** Enter one or more of the 3 to 5 alphabetic characters assigned to a location.
 - f. **Interchange Type:** Use the drop-down to select a specific interchange type. Details of each listed code are available by hovering the mouse pointer over each code. The

descriptions are also available in the [Summary of Interchange Types](#).

- g. **Mark 2:** Enter the 2 to 4 characters in the MARK or SCAC (Standard Carrier Alpha Code) that identifies the transportation entity identified as Mark 2 in the interchange agreement.
 - h. **FSAC 2:** Enter the up to 5 digit Freight Station Accounting Code (FSAC) Number identified as FSAC 2 in the interchange.
 - i. **Reporting Mark 2:** Enter the 2 to 4 characters in the MARK or SCAC (Standard Carrier Alpha Code) that identifies the transportation entity identified as Reporting Mark 2 in the interchange agreement.
3. Along with the selected query criteria, use the **Status** field to help filter results. Select ALL, Active and Future, or Historical.
 4. Select **Search** to initiate the query. All found records are displayed.

Exhibit 8. Browse Interchange Search Results

Browse Interchange

Interchange Search

Mark Only ☐

Mark 1: FSAC 1: Reporting Mark 1:

Junction Code: Interchange Type:

Mark 2: FSAC 2: Reporting Mark 2:

Status:

Showing 1 to 3 of 3 entries

Junction Code	Mark 1	FSAC 1	Mark 2	FSAC 2	Effective Date	Expiration Date
QABAC	BNSF	88888	NS	33333	2012-06-01	9999-12-31
QAAAR	CSXT	88888	INRD	88888	2012-08-01	2012-07-31
LINCO	UP	57098	CN	57984	2012-07-25	9999-12-31

5. As needed, the headings above the columns can be selected to sort the data ascending or descending.
6. Perform one of the following additional actions:
 - a. To clear the results and begin a new search, select the **Clear** button.
 - b. To view full details for a record click on the row containing that record. The Interchange Details page is displayed ([Exhibit 17](#)). See [Managing Interchange Details](#) for additional actions.

Browsing Car Hire Liability Limits

Use the following procedure to browse for Car Hire Liability Limits:

1. Log into the JUNC application. Select **Query > Car Hire**. The Browse Car Hire Liability Limits page is displayed.

Exhibit 9. Browse Car Hire Liability Limits

RAILINC Junction Interchange Signed in as document | Launch Pad | Contact Us | Sign Out

Query Add Documentation

Browse Car Hire Liability Limits

Car Hire Search

SPLC: Carrier ID 1: Carrier ID 2:

Status:

2. Complete one or more of the following fields:
 - a. **SPLC:** Enter one or more digits of the six (or nine) Standard Point Location Code used to identify geographic places.
 - b. **Carrier ID 1:** Enter one or more of the 2 to 4 characters in the MARK or SCAC (Standard Carrier Alpha Code) that identifies the transportation entity identified as Carrier ID 1 in the Car Hire Liability Limits agreement.
 - c. **Carrier ID 2:** Enter one or more of the 2 to 4 characters in the MARK or SCAC (Standard Carrier Alpha Code) that identifies the transportation entity identified as Carrier ID 2 in the Car Hire Liability Limits agreement.
3. Along with the selected query criteria, use the **Status** field to help filter results. Select ALL, Active and Future, or Historical.
4. Select **Search** to initiate the query. All found records are displayed.

Exhibit 10. Browse Car Hire Liability Limits Search Results

RAILINC Junction Interchange Signed in as document | Launch Pad | Contact Us | Sign Out

Query Add Documentation

Browse Car Hire Liability Limits

Car Hire Search

SPLC: Carrier ID 1: Carrier ID 2:

Status:

Showing 1 to 1 of 1 entries

SPLC	Loc Name	St / Prov	Carrier 1	Term Lim Eff Date	Carrier 2	Inter Lim Eff Date	Term Lim Hours To	Term Lim Hours From	Inter Lim Hours To	Inter Lim Hours From	Expiry Date	Maintained By	AAR Maint Date
689100000	CORPUS CHRISTI	TX	UP	2012-01-01	CPRS	2012-01-01	999	1	100	5	2012-07-20	MRKSPT	2012-07-20 10:19:05

5. As needed, the headings above the columns can be selected to sort the data ascending or descending.
6. Perform one of the following additional actions:
 - a. To clear the results and begin a new search, select the **Clear** button.

- b. To view full details for a record click on the row containing that record. The Car Hire Liability Limits Details page is displayed.

Exhibit 11. Car Hire Liability Limits Details

689100000 / UP / CPRS	
SPLC: 689100000	
Location Name: CORPUS CHRISTI	
State/Prov: TX	
Carrier ID 1: UP	
Terminal Limit Effective Date: 2012-01-01	
Carrier ID 2: CPRS	
Intermediate Limit Effective Date: 2012-01-01	
Terminal Limit Hours To: 999	
Terminal Limit Hours From: 1	
Intermediate Limit Hours To: 100	
Intermediate Limit Hours From: 5	
Expiration Date: 2012-07-20	
Maintained By: MRKSPT	
AAR Maintenance Date: 2012-07-20 10:19:05	

7. The Car Hire Liability Limits Details page is view-only. When done viewing the page, select the **X** to close it.

Manage Junctions

Managing Junction Details

Use the following procedure to perform various management functions from within the JUNC Details page.

1. Perform a query for the JUNC that you want to manage (see [Browsing Junctions](#)). Select the JUNC that you want to manage. The JUNC Details page is displayed.

Exhibit 12. JUNC Details

SAXMA	
Junction Code:	SAXMA
SPLC:	802130000
Junction Name:	SAXMAN
Junction Flags:	B
Effective Date:	1991-01-01
Expiration Date:	9999-12-31
State/Prov:	AK
Country:	US
Last Updated By:	EFPIXR01
Last Updated Date:	1996-11-20 16:35:20

[Edit](#)
[Expire](#)
[Void](#)
[Resend](#)

[Lookup Stations](#)
[Lookup Interchanges](#)

2. Perform one of the following actions:
 - a. Select **Edit** to edit the displayed JUNC (see [Editing a JUNC](#)).
 - b. Select **Expire** to expire the displayed JUNC (see [Expiring a JUNC](#)).
 - c. Select **Void** to void the displayed JUNC (see [Voiding a JUNC](#)).
 - d. Select **Resend** to resend the displayed JUNC (see [Resending a JUNC](#)).
 - e. Select the [Lookup Stations](#) link to access the CSM application. The Browse CSM page is displayed populated with the stations associated with the displayed JUNC. See the CSM User Guide available from the Documentation menu in the CSM application for user instructions.
 - f. Select the [Lookup Interchanges](#) link to access the Browse Interchange page. The page is populated with interchanges associated with the displayed JUNC. See [Browsing Junctions](#) for details.

Editing a JUNC

Use the following procedure to edit a JUNC:

1. Perform a query for the JUNC that you want to edit and then access its details page (see [Managing Junction Details](#)).
2. Select **Edit**. The Edit Junction page is displayed.

Exhibit 13. Edit Junction

The screenshot shows the 'Edit Junction' page in the RAILINC Junction Interchange system. The page header includes the RAILINC logo, 'Junction Interchange', and user information 'Signed in as document'. A navigation bar contains 'Query', 'Add', and 'Documentation' tabs. The main form is titled 'Edit Junction' and contains the following fields:

Junction Code:	ADKJC
SPLC:	028707000
Junction Name:	ADIRONDACK JCT
State/Province:	PQ
Country:	CA
Junction Flags:	B - BOTH
Effective Date:	2012-08-15
Expiration Date:	9999-12-31
Submit	

3. Make edits as needed to the available input fields. See [Adding a Junction](#) for details.
4. Select **Submit** to submit the edited record. A confirmation message is displayed asking to confirm the edit. Select **OK** to continue. If the edits successfully pass validation, a message is displayed: "JUNC Edited Successfully."

Expiring a JUNC

Use the following procedure to expire a JUNC:

1. Perform a query for the JUNC that you want to expire and then access its details page (see [Managing Junction Details](#)).
2. Select **Expire**. An input pop-up is displayed allowing you to specify the expiration date.

Exhibit 14. Expire a JUNC



The screenshot shows a dialog box titled "Expire Junction ADKJC?". Inside, there is a label "Expiration Date:" followed by a text input field containing "2012-08-14". Below this is a calendar widget for "August 2012". The calendar shows days of the week (Su, Mo, Tu, We, Th, Fr, Sa) and dates. The date "14" is highlighted in yellow. To the right of the calendar are two buttons: "Expire" and "Cancel".

3. Either directly enter an expiration date or use the provided calendar to select one. The system allows a JUNC to be expired in the past.
4. Select **Expire** to complete the process. A message is displayed asking you to confirm the decision. Select **OK**. A message is displayed: "JUNC Expired Successfully."

Voiding a JUNC

Use the following procedure to void a JUNC:

1. Perform a query for the JUNC that you want to void and then access its details page (see [Managing Junction Details](#)).
2. Select **Void**. A message is displayed asking you to confirm your decision. Select **OK**. If successful, a message is displayed: "JUNC Voided Successfully."

Resending a JUNC

Use the following procedure to resend a JUNC:

1. Perform a query for the JUNC that you want to resend and then access its details page (see [Managing Junction Details](#)).
2. Select **Resend**. A message is displayed asking you to confirm your decision. Select **OK**. If successful, a message is displayed stating that the Junction was resent successfully.


Manage Junction Settlement

Managing Junction Settlement Details

Use the following procedure to perform various management functions from within the JUNC Settlement Details page.

1. Perform a query for the JUNC Settlement that you want to manage (see [Browsing Junction Settlements](#)). Select the JUNC Settlement that you want to manage. The JUNC Settlement Details page is displayed.

Exhibit 15. JUNC Settlement Details

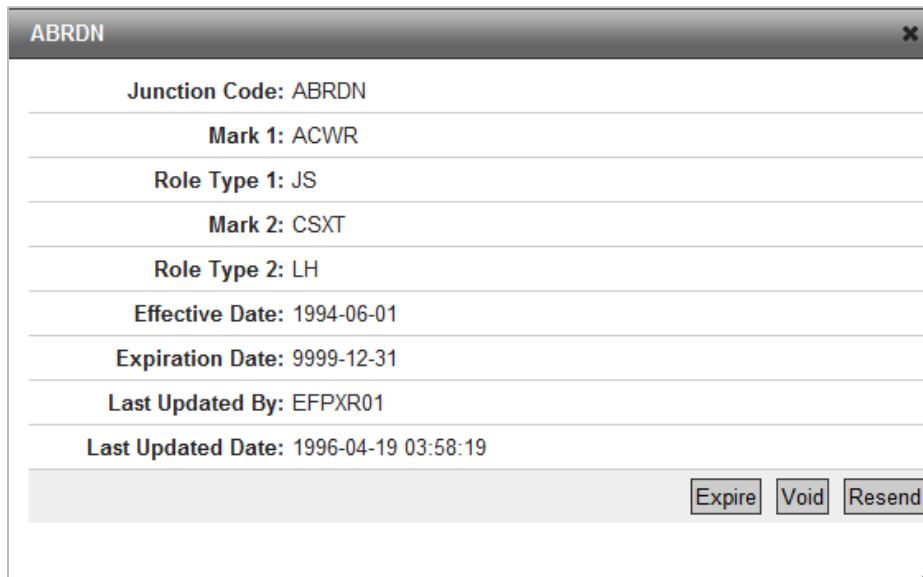

ABRDN	
Junction Code: ABRDN	
Mark 1: ACWR	
Role Type 1: JS	
Mark 2: CSXT	
Role Type 2: LH	
Effective Date: 1994-06-01	
Expiration Date: 9999-12-31	
Last Updated By: EFPXR01	
Last Updated Date: 1996-04-19 03:58:19	
Expire Void Resend	

2. Perform one of the following actions:
 - a. Select **Expire** to expire the displayed JUNC Settlement (see [Expiring a JUNC Settlement](#)).
 - b. Select **Void** to void the displayed JUNC Settlement (see [Voiding a JUNC Settlement](#)).
 - c. Select **Resend** to resend the displayed JUNC Settlement (see [Resending a JUNC Settlement](#)).

Expiring a JUNC Settlement

Use the following procedure to expire a JUNC Settlement:

1. Perform a query for the JUNC Settlement that you want to expire and then access its details page (see [Managing Junction Settlement Details](#)).
2. Select **Expire**. An input pop-up is displayed allowing you to specify the expiration date.

Exhibit 16. Expire a JUNC Settlement

The screenshot shows a dialog box titled "Expire Junction ADKJC?". Inside, there is a text field for "Expiration Date:" containing "2012-08-14". Below this is a calendar for "August 2012". The calendar grid shows days from Sunday to Saturday. The 14th is highlighted in yellow. To the right of the calendar are two buttons: "Expire" and "Cancel".

3. Either directly enter an expiration date or use the provided calendar to select one. The system allows a JUNC to be expired in the past.
4. Select **Expire** to complete the process. A message is displayed asking you to confirm the decision. Select **OK**. If successful, a message is displayed: "JUNC Settlement Expired Successfully."

Voiding a JUNC Settlement

Use the following procedure to void a JUNC Settlement:

1. Perform a query for the JUNC Settlement that you want to void and then access its details page (see [Managing Junction Settlement Details](#)).
2. Select **Void**. A message is displayed asking you to confirm your decision. Select **OK**. If successful, a message is displayed: "JUNC Settlement Voided Successfully."

Resending a JUNC Settlement

Use the following procedure to resend a JUNC Settlement:

1. Perform a query for the JUNC Settlement that you want to resend and then access its details page (see [Managing Junction Settlement Details](#)).
2. Select **Resend**. A message appears asking you to confirm your decision to resend the JUNC Settlement. Select **OK**. A message appears stating that the Junction Settlement resend was successful.

Manage Interchanges

Managing Interchange Details

Use the following procedure to perform various management functions from within the Interchange Details page.

1. Perform a query for the Interchange that you want to manage (see [Browsing Interchanges](#)).
Select the Interchange that you want to manage. The Interchange Details page is displayed.

Exhibit 17. Interchange Details

Junction Code: ANGYD		
Interchange Type: R		
Mark 1: UP	FSAC 1:	Reporting Mark 1: UP
Mark 2: VTRZ	FSAC 2:	Reporting Mark 2: UP
Delivery Receipt: N		
Inhibit Junction Advices: N		
Effective Date: 2001-03-07		
Expiration Date: 9999-12-31		
Last Updated By: EFPXR01		
Last Updated Date: 2001-03-08 14:12:02		
Clone Edit Expire Void Resend		

2. Perform one of the following actions:
 - a. Select the link on the [Junction Code](#) to display the search results for that Junction Code (see [Browsing Interchanges](#)).
 - b. Select the link on the [Mark](#) (1 or 2) to display the search results for that Mark in the CSM module. See the CSM User Guide for instructions and field definitions.
 - c. Select the link on the [FSAC](#) to display the search results for stations with that Mark and SCAC in the CSM module. See the CSM User Guide for instructions and field definitions.
 - d. Select **Clone** to clone the displayed Interchange (see [Cloning an Interchange](#)).
 - e. Select **Edit** to edit the displayed Interchange (see [Editing an Interchange](#)).
 - f. Select **Expire** to expire the displayed Interchange (see [Expiring an Interchange](#)).
 - g. Select **Void** to void the displayed Interchange (see [Voiding an Interchange](#)).
 - h. Select **Resend** to resend the displayed Interchange (see [Resending an Interchange](#)).

Cloning an Interchange

Use the following procedure to clone an Interchange:

1. Perform a query for the Interchange that you want to clone and then access its details page (see [Managing Interchange Details](#)).
2. Select **Clone**. The Add Interchange page is displayed with selected fields pre-filled based on the displayed record.

Exhibit 18. Add Interchange Page (for a Cloned Interchange)

The screenshot shows the 'Add Interchange' page in the RAILINC system. The page header includes the RAILINC logo, the title 'Junction Interchange', and user options: 'Signed in as document', 'Launch Pad', 'Contact Us', and 'Sign Out'. Below the header is a navigation bar with 'Query', 'Add', and 'Documentation' tabs. The main content area is titled 'Add Interchange' and contains a form with the following fields:

Junction Code:	ALBY		
Interchange Type:	N		
Mark 1:	UP	FSAC 1:	71830
Reporting Mark 1:	UP		
Mark 2:	WPRR	FSAC 2:	02000
Reporting Mark 2:	WPRR		
Delivery Receipt:	☐		
Inhibit Junction Advices:	☐		
Effective Date:	1998-05-01		
Expiration Date:	1998-04-30		
Submit			

3. Complete or edit the displayed fields as needed (see [Adding an Interchange](#) for details).

Editing an Interchange

Use the following procedure to edit an Interchange:

1. Perform a query for the Interchange that you want to edit and then access its details page (see [Managing Interchange Details](#)).
2. Select **Edit**. The Edit Interchange page is displayed.

Exhibit 19. Edit Interchange

The screenshot shows the RAILINC Junction Interchange Edit form. At the top, there is a header with the RAILINC logo, the text "Junction Interchange", and user information: "Signed in as document | Launch Pad | Contact Us | Sign Out". Below the header is a navigation bar with tabs: "Query", "Add", and "Documentation". The main form is titled "Edit Interchange". It contains several input fields and checkboxes:

- Junction Code: ALFLF
- Interchange Type: P (with a help icon)
- Mark 1: UP, FSAC 1: 58654, Reporting Mark 1: UP
- Mark 2: XTRA, FSAC 2: (empty), Reporting Mark 2: UP
- Delivery Receipt: ☐
- Inhibit Junction Advices: ☐
- Effective Date: 2012-08-24
- Expiration Date: 9999-12-31
- Submit button

3. Make edits as needed to the available input fields. See [Adding an Interchange](#) for details.
4. Select **Submit** to submit the edited record. A confirmation message is displayed asking to confirm the edit. Select **OK** to continue. If the edits successfully pass validation, a message is displayed: "Interchange Edited Successfully."

Expiring an Interchange

Use the following procedure to expire an Interchange:

1. Perform a query for the Interchange that you want to expire and then access its details page (see [Managing Interchange Details](#)).
2. Select **Expire**. An input pop-up is displayed allowing you to specify the expiration date.

Exhibit 20. Expire an Interchange

The screenshot shows the "Expire Interchange?" dialog box. It has a title bar with a close button. Inside, there is an "Expiration Date" field with the value "2012-08-23". Below it is a "Skip Route Check" checkbox. At the bottom right, there are two buttons: "Expire" and "Cancel".

3. Either directly enter an expiration date or use today's date which is the default. The system allows an Interchange to be expired in the past or with future expiration date

4. Select the **Skip Route Check** option to bypass the validation that typically prevents expiring an active route. When checked, this means that if there are any revenue routes in this interchange, the system ignores it and lets it expire.
5. Select **Expire** to complete the process. A message is displayed asking you to confirm the decision. Select **OK**. A message is displayed: “Interchange Expired Successfully.”

Voiding an Interchange

Use the following procedure to void an Interchange:

1. Perform a query for the Interchange that you want to void and then access its details page (see [Managing Interchange Details](#)).
2. Select **Void**. A message is displayed asking you to confirm your decision. Select **OK**. If successful, a message is displayed: “Interchange Voided Successfully.” A voided record will be expired with the expiration date automatically set to one day before the effective date (expiration date cannot be manually changed in the void process).

Resending an Interchange

Use the following procedure to resend an Interchange:

1. Perform a query for the Interchange that you want to resend and then access its details page (see [Managing Interchange Details](#)).
2. Select **Resend**. A message appears asking you to confirm your decision to resend the Interchange. Select **OK**. A message appears stating that the Interchange resend was successful.
3. The resend option will generate an EDI 437 message that is distributed to all carriers/subscribers set up to receive or receiving an EDI transaction

Manage Car Hire Liability Limits

Managing Car Hire Liability Limit Details

Use the following procedure to perform various management functions from within the Car Hire Liability Limit Details page.

1. Perform a query for the Car Hire Liability Limit record that you want to manage (see [Browsing Car Hire Liability Limits](#)). Select the Car Hire Liability Limit record that you want to manage. The Car Hire Liability Limit Details page is displayed.

Exhibit 21. Car Hire Liability Limit Details

SPLC: 547500000	
Location Name: SIOUX CITY	
State/Prov: IA	
Carrier ID 1: CN	
Terminal Limit	Effective Date: 2000-10-01
Carrier ID 2: UP	
Intermediate Limit	Effective Date: 2000-10-01
Terminal Limit	Hours To: 192
Terminal Limit	Hours From: 120
Intermediate Limit	Hours To: 0
Intermediate Limit	Hours From: 0
Expiration Date: 9999-12-31	
Maintained By: EFPXR01	
AAR Maintenance Date: 2000-09-07 09:56:00	
Edit Expire	

2. Perform one of the following actions:
 - a. Select **Edit** to edit the displayed Car Hire Liability Limit (see [Editing a Car Hire Liability Limit](#)).
 - b. Select **Expire** to expire the displayed Car Hire Liability Limit (see [Expiring a Car Hire Liability Limit](#)).

Editing a Car Hire Liability Limit

Use the following procedure to edit a Car Hire Liability Limit:

1. Perform a query for the Car Hire Liability Limit that you want to edit and then access its details page (see [Managing Car Hire Liability Limit Details](#)).

2. Select **Edit**. The Edit Car Hire Liability Limit page is displayed.

Exhibit 22. Edit Car Hire Liability Limit

The screenshot shows the 'Edit Car Hire Liability Limit' page in the RAILINC system. The page has a header with the RAILINC logo, 'Junction Interchange', and a user login 'Signed in as tilydawg'. Below the header is a navigation bar with 'Query', 'Add', and 'Documentation' tabs. The main content area is titled 'Edit Car Hire Liability Limit'. It contains a form with the following fields:

SPLIC: 380000000	
Carrier ID 1: BNSF	Terminal Limit Effective Date: 2012-08-24
Carrier ID 2: BOCT	Intermediate Limit Effective Date: 2012-08-24
Terminal Limit Hours To: 144	Terminal Limit Hours From: 144
Intermediate Limit Hours To: 0	Intermediate Limit Hours From: 0

A 'Submit' button is located at the bottom right of the form.

3. Make edits as needed to the available input fields. See [Adding a Car Hire Liability Limit](#) for details.
4. Select **Submit** to submit the edited record. A confirmation message is displayed asking to confirm the edit. Select **OK** to continue. If the edits successfully pass validation, a message is displayed: “Car Hire Liability Limit Edited Successfully.”

Expiring a Car Hire Liability Limit

Use the following procedure to expire a Car Hire Liability Limit:

1. Perform a query for the Car Hire Liability Limit that you want to expire and then access its details page (see [Managing Car Hire Liability Limit Details](#)).
2. Select **Expire**. An input pop-up is displayed allowing you to specify the expiration date.
3. Either directly enter an expiration date or use the provided calendar to select one. The system allows a Car Hire Liability Limit to be expired in the past.
4. Select **Expire** to complete the process. A message is displayed: “Car Hire Liability Limit Expired Successfully.”

Add JUNCs, Interchanges, etc.

Adding a Junction

Use the following procedure to add a Junction:

1. Select **Add > Junction**. The Add Junction page is displayed.

Exhibit 23. Add Junction

The screenshot shows the RAILINC Junction Interchange page. The top navigation bar includes the RAILINC logo, the page title 'Junction Interchange', and user status 'Signed in as document'. Below the navigation bar is a tabbed interface with 'Query', 'Add', and 'Documentation' tabs. The 'Add' tab is selected, displaying the 'Add Junction' form. The form contains the following fields:

- Junction Code:** A text input field.
- SPLC:** A text input field with a magnifying glass icon.
- Junction Name:** A text input field.
- State/Province:** A text input field.
- Country:** A text input field.
- Junction Flags:** A dropdown menu with 'B - BOTH' selected.
- Effective Date:** A date input field showing '2012-08-23'.
- Expiration Date:** A date input field showing '9999-12-31'.
- Submit:** A button at the bottom right of the form.

2. Complete the available input fields:
 - a. **Junction Code:** Junction abbreviation; a unique 3 to 5 character alphabetic code.
 - b. **SPLC:** Standard Point Location Code. The six (or nine) numeric digit code used to identify geographic places. The SPLCs are assigned by the National Motor Freight Traffic Association (NMFTA) for points in the United States and Mexico, and by the Canadian Transportation Agency (CTA) for points in Canada.
 - c. **Junction Name:** The city or common name for the location.
 - d. **State/Province:** The US or Mexican state or the Canadian province in which this location can be found.
 - e. **Country:** Country Code (US, MX, or CA).
 - f. **Junction Flags:** Select if the junction is for Railroad (R), Truck (T) or Both (B).
 - g. **Effective Date:** Defaults to today's date. Can be back or future dated.
 - h. **Expiration Date:** Defaults to 9999-12-31, which is the default future expiration date.

3. Select **Submit**.
4. A confirmation message is displayed. Select **OK**.
5. If all validation rules pass, a message is displayed: “JUNC Added Successfully.”

Query a SPLC

The Junction application allows you to query for SPLCs from a magnifying glass icon in order to automatically fill in this field. Use the following procedure to query for SPLCs:

1. Access a page that has a SPLC lookup field. See example below.
2. Select the magnifying glass icon (🔍). The Query SPLC page is displayed.

Exhibit 24. Query SPLC

The screenshot shows a web application window titled "Query Splc". Inside the window, there is a section titled "SPLC Search". This section contains several input fields: "SPLC:" (a text box), "Name:" (a text box), "Alias:" (a text box), "County:" (a text box), "State:" (a text box), and "Trans Code:" (a dropdown menu currently showing "RAIL - R"). Below these fields is a "Status:" dropdown menu currently showing "Active and Future". To the right of the status dropdown are two buttons: a red "Clear" button and a green "Search" button.

3. Complete the available input fields:
 - a. **SPLC:** Standard Point Location Code. The six (or nine) numeric digit code used to identify geographic places. The SPLCs are assigned by the National Motor Freight Traffic Association (NMFTA) for points in the United States and Mexico, and by the Canadian Transportation Agency (CTA) for points in Canada. Enter between 2 and 9 digits for the SPLC Number.
 - b. **Name:** Enter at least 3 initial letters for the Location Name.
 - c. **Alias:** Enter at least 3 initial letters for the Alias Name.
 - d. **County:** Enter a full or partial County Name.
 - e. **State:** Enter the 2 digit State abbreviation.
 - f. **Trans Code:** Select BOTH-B, RAIL-R or NONRAIL-N.
 - g. **Status:** Select Active and Future, Historical or Both.
4. Select **Search** to initiate the search. Search results are displayed.

Exhibit 25. SPLC Search Results

Query Splc

SPLC Search

SPLC: Name: Alias:

County: State: Trans Code:

Status:

Showing 1 to 8 of 8 entries

Source	SPLC	Name	Effective Date	Expiration Date	St/Prov	County
NMFTA	124194000	DURHAM	1973-08-20	9999-12-31	NH	STRAFFORD
NMFTA	194226000	DURHAM	1973-08-20	9999-12-31	NJ	MIDDLESEX
NMFTA	411860000	DURHAM	1973-08-20	9999-12-31	NC	DURHAM
NMFTA	539145000	DURHAM	1973-08-20	9999-12-31	IA	MARION
NMFTA	585927000	DURHAM	1973-08-20	9999-12-31	KS	MARION
NMFTA	756476000	DURHAM	1998-01-02	9999-12-31	CO	MESA
NMFTA	853572000	DURHAM	1973-08-20	9999-12-31	OR	WASHINGTON
NMFTA	872773000	DURHAM	1973-08-20	9999-12-31	CA	BUTTE

5. Select the desired SPLC by clicking on the row containing that SPLC. The field on the corresponding lookup field is filled with the selected code.

Adding a Junction Settlement

Use the following procedure to add a Junction Settlement:

1. Select **Add > Junction Settlement**. The Add Junction Settlement page is displayed.

Exhibit 26. Add Junction Settlement

 Junction Interchange Signed in as document | Launch Pad | Contact Us | Sign Out

Query Add Documentation

Add Junction Settlement

Junction Code:

Mark 1:

Role Type 1:

Mark 2:

Role Type 2:

Effective Date:

Expiration Date:


Commodity Restrictions: 

2. Complete the available input fields:

Add JUNCs, Interchanges, etc.

- a. **Junction Code:** Enter the Junction abbreviation; a unique 3 to 5 character alphabetic code.
- b. **Mark 1:** Enter the two or four-character MARK or SCAC that identifies Mark 1 in the Junction Settlement.
- c. **Role Type 1:** Select the role for Mark 1: Line Haul (LH); Junction Settlement (JS); or Handling Carrier (HX).
- d. **Mark 2:** Enter the two or four-character MARK or SCAC that identifies Mark 2 in the Junction Settlement.
- e. **Role Type 2:** Select the role for Mark 2: Line Haul (LH); Junction Settlement (JS); or Handling Carrier (HX).
- f. **Effective Date:** Defaults to today's date. Can be back or future dated.
- g. **Expiration Date:** Defaults to 9999-12-31, which is the default future expiration date.
- h. **Commodity Restrictions:** Select the plus sign to open these fields for entry, pictured below. Enter a range of appropriate STCC Codes in the available fields. Select the plus sign again to add additional ranges, as needed.

Exhibit 27. Commodity Restrictions

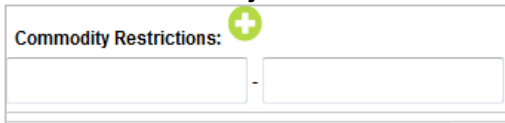

The screenshot shows a form element labeled "Commodity Restrictions:" with a green plus sign icon to its right. Below the label are two input fields separated by a minus sign, representing a range of STCC codes.

3. Select **Submit**.
4. A confirmation message is displayed. Select **OK**.
5. If all validation rules pass, a message is displayed: "Junction Settlement Added Successfully."

Adding an Interchange

Use the following procedure to add an Interchange:

1. Select **Add > Interchange**. The Add Interchange page is displayed.

Exhibit 28. Add Interchange

The screenshot shows the 'Add Interchange' form in the RAILINC system. The header includes the RAILINC logo, the page title 'Junction Interchange', and user information 'Signed in as document'. Below the header is a navigation bar with 'Query', 'Add', and 'Documentation' tabs. The main form area is titled 'Add Interchange' and contains the following fields:

- Junction Code:** A text input field.
- Interchange Type:** A dropdown menu with a help icon (?) to its right.
- Mark 1:** A text input field.
- FSAC 1:** A text input field.
- Reporting Mark 1:** A text input field.
- Mark 2:** A text input field.
- FSAC 2:** A text input field.
- Reporting Mark 2:** A text input field.
- Delivery Receipt:** A checkbox.
- Inhibit Junction Advices:** A checkbox.
- Effective Date:** A date field with the value '2012-08-23'.
- Expiration Date:** A date field with the value '9999-12-31'.
- Submit:** A button at the bottom right of the form.

2. Complete the available input fields:

- a. **Junction Code:** Enter the Junction abbreviation; a unique 3 to 5 character alphabetic code.
- b. **Interchange Type:** Use the drop-down to select a specific interchange type. Details of each listed code are available by hovering the mouse pointer over each code. The descriptions are also available in the [Summary of Interchange Types](#)
- c. **Mark 1:** Enter the two or four-character MARK or SCAC that identifies Mark 1 in the Interchange.
- d. **FSAC 1:** Enter the up to five position Freight Station Accounting Code Number for Mark 1.
- e. **Reporting Mark 1:** Enter the two or four-character MARK or SCAC that identifies Reporting Mark 1 in the Interchange.
- f. **Mark 2:** Enter the two or four-character MARK or SCAC that identifies Mark 2 in the Interchange.
- g. **FSAC 2:** Enter the up to five position Freight Station Accounting Code Number for Mark 2.
- h. **Reporting Mark 2:** Enter the two or four-character MARK or SCAC that identifies Reporting Mark 2 in the Interchange.
- i. **Delivery Receipt:** This flag is used when the Interchange participants want to report on "delivery" only to TRAIN II and any report of a "receipt" would be rejected by TRAIN II. The default value is unchecked (no). When checked (yes), then both Reporting Marks must be different; one-road reporting is not allowed.

- j. **Inhibit Junction Advices:** This flag is checked when the Interchange participants want TRAIN II to NOT send notice of an Interchange when it is requested by an equipment owner for Interchanges that occur between these two carriers at this Junction location. The default value is unchecked (no).
- k. **Effective Date:** Defaults to today's date. Can be back or future dated.
- l. **Expiration Date:** Defaults to 9999-12-31, which is the default future expiration date.
3. Select **Submit**.
4. A confirmation message is displayed. Select **OK**.
5. If all validation rules pass, a message is displayed: "Interchange Added Successfully."

Adding a Car Hire Liability Limit

Terminal and switching carriers moving loaded and empty cars per AAR Code of Car Hire Rules and interpretations - Freight, Car Hire Rule 5, are subject to Car Hire Transfer of Liability.

Switching hours are limited to a maximum of 120 hours in terminal switch service and 24 hours in intermediate switch service, unless a specific number of hours have been agreed to by the roads performing switching service and their connecting carriers.

Use the following procedure to add a Car Hire Liability Limit:

1. Select **Add > Car Hire**. The Add Car Hire Liability Limit page is displayed.

Exhibit 29. Add Car Hire Liability Limit

The screenshot shows the RAILINC Junction Interchange interface. At the top, there's a navigation bar with the RAILINC logo, 'Junction Interchange', and links for 'Signed in as document', 'Launch Pad', 'Contact Us', and 'Sign Out'. Below this is a menu bar with 'Query', 'Add', and 'Documentation'. The main content area is titled 'Add Car Hire Liability Limit'. It contains a form with several input fields: 'SPLC:' with a search icon, 'Carrier ID 1:', 'Carrier ID 2:', 'Terminal Limit Effective Date:' (pre-filled with 2012-08-23), 'Intermediate Limit Effective Date:' (pre-filled with 2012-08-23), 'Terminal Limit Hours To:', 'Terminal Limit Hours From:', 'Intermediate Limit Hours To:', and 'Intermediate Limit Hours From:'. A 'Submit' button is located at the bottom right of the form.

2. Complete the available input fields:
 - a. **SPLC:** Standard Point Location Code. The six (or nine) numeric digit code used to identify geographic places. The SPLCs are assigned by the National Motor Freight Traffic Association (NMFTA) for points in the United States and Mexico, and by the

- Canadian Transportation Agency (CTA) for points in Canada. Enter between 2 and 9 digits for the SPLC Number.
- b. **Carrier ID 1:** Enter the two or four-character MARK or SCAC that identifies Carrier 1 in the Car Hire Liability Limits agreement.
 - c. **Terminal Limit Effective Date:** If agreement is for terminal switching service, enter effective date for the record. Effective date format is YYYY-MM-DD.
 - d. **Carrier ID 2:** Enter the two or four-character MARK or SCAC that identifies Carrier 2 in the Car Hire Liability Limits agreement.
 - e. **Intermediate Limit Effective Date:** If agreement is for intermediate switching service, enter effective date for the record. Effective date format is YYYY-MM-DD.
 - f. **Terminal Limit Hours To:** If agreement is for terminal switching service, this field reflects the number of hours in car hire that the switch carrier can pass back to the interline carrier (based on agreement between switch and interline carrier) expressing number of hours.
 - g. **Terminal Limit Hours From:** If agreement is for terminal switching service, this field reflects the number of hours in car hire that the switch carrier can pass back to the interline carrier (based on agreement between switch and interline carrier) expressing number of hours.
 - h. **Intermediate Limit Hours To:** If agreement is for intermediate switching service, this field reflects the number of hours in car hire that the switch carrier can pass back to the interline carrier (based on agreement between switch and interline carrier) expressing number of hours.
 - i. **Intermediate Limit Hours From:** If agreement is for intermediate switching service, this field reflects the number of hours in car hire that the switch carrier can pass back to the interline carrier (based on agreement between switch and interline carrier) expressing number of hours.
- 3. Select **Submit**.
 - 4. A confirmation message is displayed. Select **OK**.
 - 5. If all validation rules pass, a message is displayed: "Car Hire Liability Added Successfully."

Summary of Interchange Types

Interchange type	Car Hire (loaded and empty car hire liability)	Revenue Price Documents (linehaul rates, routes and divisions)	Operating Issues (physical interchanges)	Special Conditions
C – Indirect Haulage	Transfer of liability for some carriers	Used for linehaul revenue interchange by some carriers	Would be used like a normal interchange, except accomplished indirectly using a third carrier	Must be supported by appropriate operating capable interchanges with the carrier physically accomplishing indirect service
E – End of Train (EOT) Device (Direct)	FROM railroad does not shift liability – TO railroad does shift liability.	Not Applicable	Direct connection between road and other transportation mode	Can only be used for EOT reporting
I – Joint Motor Rail (Direct) (Linehaul Revenue Only)	Not Applicable	Required for Joint Motor-Rail linehaul prices	Not Applicable	Must involve Joint Motor-Rail rates/routes where motor carrier is a line haul participants in rate and divisions
N – Normal (Direct)	Shifts Liability	Used for linehaul revenue movements	Direct connection	Must be used in case of multiple interchange types at same location
O – Operating Only (Direct)	Shifts Liability	Cannot be used	Direct connection	Multiple non-revenue uses
P – Per Diem Relief (Direct)	Transfer Hire Relief (empty trailers only)	Not Applicable	Storage only	Trailer hire status message
R – Rubber (Indirect)	Shifts Liability	Not Applicable	Indirect connection via drayman or interchange to owner	Must only be used for intermodal interchanges via drayman or interchange to owner where this is the only situation at this SPLC between these two entities
S – Shop (Direct)	May or may not effect car hire	Not Applicable	Condition code gives handling instructions (can or can't load); To shop: car being placed for repairs; From shop: changes condition code	Not valid SCAC
V – Revenue Only (Linehaul)	Not Applicable	Used for linehaul revenue interchange by some carriers	Physical interchange occurs someplace other than the division point	Cannot be used at operating only locations
W – Water (Direct)	Shifts Liability	Required for Joint Water-Rail linehaul prices	Physical interchange does occur	Interchange with "PORT" is shown when water carrier is unknown

Summary of Interchange Types

Interchange type	Interchange Descriptions	Special SCAC can be used?	Required Signature?	1 or 2 Road Reporting in Train II?	CSM (FSAC) Station Required?
C – Indirect Haulage	Indirect Rail to or from Rail	No – use 2 rail SCACs	Bilateral agreement 2 signatures	Either	Station required for BOTH railroads (station types must include R)
E – End of Train (EOT) Device (Direct)	Rail to or from Other (non-rail) Transportation Mode	No – use rail & other (non-rail) transportation SCAC	Signature required from railroad only	1 road reporting (road SCAC or other (non-rail) transportation SCAC)	Station are NOT required
I – Joint Motor Rail (Direct) (Revenue Only)	Joint Motor Rail Movements	No – use a rail & motor carrier SCAC	No agreement required 1 signature	1 road reporting	Station required for railroad only (station types must include R)
N – Normal (Direct)	Direct Rail to or from Rail (for BOTH operating and linehaul revenue purposes)	No – use 2 rail SCACs	Bilateral agreement 2 signatures	Either	Stations required for BOTH railroads (station types must include R&O or R&H)
O – Operating Only (Direct)	Rail to or from Rail (for operating, NOT for linehaul revenue purposes)	No – use 2 rail SCACs	Bilateral agreement 2 signatures	Either	Stations are required for BOTH railroads. (station types must include O or H)
P – Per Diem Relief (Direct)	Rail to or from Intermodal Storage	Yes – use rail & “STOR” or actual non-rail SCAC	No agreement required 1 signature	1 road reporting	Stations are not required
R – Rubber (Indirect)	Rail to or from Owner -or- Rail to or from Rail via drayman	No – use 2 rail or a rail & an owner SCAC	Signature required from railroad only	Either	Stations are not required
S – Shop (Direct)	Rail to or from Shop -or- TTX to or from Shop	Yes – use rail & “SHOP” or “TTX” & “SHOP”	No agreement required 1 signature	1 road reporting (either road SCAC, TTX or “SHOP”)	Stations required for railroad only (station types must include O or H)
V – Revenue Only (Direct)	Rail to or from Rail (for linehaul revenue, NOT for operating purposes)	No – use 2 rail SCACs	Bilateral agreement 2 signatures	Either	Stations required for BOTH railroads (station types must include R)
W – Water (Direct)	Rail to or from Water Carrier	No – use rail & “PORT” or actual SCAC (if used in revenue route)	No agreement required 1 signature	1 road reporting	Station required for railroad only (station types must include R)

Forms

Embedded are copies of the latest versions of the update forms.

NOTE: These forms appear as attachments in the PDF.

Junction Settlement/Handling Carrier Form (AD-102)



FORM AD-102.doc

Junction Interchange Update Form (AD-103)



FORM AD-103.doc

Car Hire Rule 5 Table Update Request for Transfer Of Car Hire Liability (AD-104)



FORM AD-104.docx