



Umler[®] User Guide



© 2026 Railinc. All Rights Reserved.

Version 6.5 Last Updated: May 2026

Legal Disclaimer: Any actions taken in reliance on or pursuant to this document are subject to Railinc's Terms of Use, as set forth in <https://public.railinc.com/terms-use>, and all AAR rules.

Table of Contents

Welcome to Umler.....	9
Overview.....	9
User Guide Structure	9
General User Interface and System Requirements	9
Requesting Changes to Umler	10
Supporting Documentation	10
Umler Data Specifications Manual.....	10
Railinc Customer Success Center	10
User Interface.....	10
Railinc Page Layout.....	11
Umler-Specific Interface Elements.....	13
Getting Started.....	16
Register to Use Railinc SSO	16
Requesting Umler Access	16
Logging In.....	16
Logging Off	17
Home Page.....	17
Single Equipment Search.....	18
View/Update Equipment Units in Conflict.....	18
Equipment Validation Requests.....	19
Email Umler Administrators for MARK.....	21
Find Other Company Contacts.....	21
Query.....	22
Menu & Options	22
Display Unit.....	23
Create Blue Card PDF	25
Equipment Query	28
View Query Results	39
Export Query Results to CSV	40
Request Counts for Query.....	41
Viewing Saved Queries	41
Save Query.....	42
Car Management Query.....	43
Equipment View	43
Pool View	48
Transaction Log	52
View Transaction Results Online	57
Inspection History.....	59
View Inspection History Summary Results Online	62
View Inspection History Detail Results Online.....	63
Historical Lineage Query.....	63
Historical Locomotive Blue Card Query	65
Equipment Unit Comparison	66
Maintenance	68
Menu & Options	68
Add/Change/Delete.....	69
Add Equipment.....	71

Clone Equipment	75
Add-Back Equipment	77
Add-Back Multiple Equipment.....	79
Modify Single Equipment.....	81
Modify Multiple Equipment	84
Single Restencil	87
Multiple Restencil.....	89
Change Equipment Group	90
Update Equipment Maintenance Party	93
Delete Equipment	94
Add Addition and Betterment.....	96
Car Management.....	98
Create Pool Header	99
Delete Pool Header	102
Remove Lessee	103
Report Car Grade Inspection	103
Update Equipment Management Codes.....	103
Update Pool Assignments	108
Inspections	111
AMFC Inspection	114
Air Brake Test.....	115
Autorack Inspection.....	119
Car Grade Inspection	120
Locomotive Air Brake L1 Inspection	122
Locomotive Inspection Due Date Update.....	123
Locomotive Storage Event.....	124
Company-Specific Equipment Groups	125
Search Group	126
Create Group.....	135
Add Equipment to Group.....	137
Remove Equipment from Group.....	140
Move Equipment Between Groups.....	141
Notice Management	142
Online Notice Search Results	147
View Notice Details.....	148
CVS Notice Search Results	149
Suspended Work	152
Resume Suspended Work	153
Delete Suspended Work.....	154
Manage Future Transactions	155
Upload/Download.....	158
Bulk Upload Transactions.....	159
Upload Corrected Notices	160
Request Umler 3.2 Refresh	161
Request Umler 3.1 Refresh	162
Account Administration	163
Security Management	163
Administer Access Rights Internal to My Company	166
Administer Access Rights Involving Other Companies	185
Search User Access Rights	200

Transfer Access Rights Between Companies	205
Configure Ticklers	210
Usage Statistics	211
Contact List	213
Component Tracking/Registry	214
Semi-Annual Billing.....	215
Umler Semi-Annual Registration Fee.....	215
AAR Technical Services User Fee.....	215
AAR Intermodal User Fee	216
Help	217
Field Help.....	217
References.....	218
Index.....	219

List of Exhibits

Exhibit 1. Railinc Application Layout	11
Exhibit 2. User Mark Selection.....	11
Exhibit 3. Launch Pad Drop-Down Menu	12
Exhibit 4. Umler Application Menu	13
Exhibit 5. Umler Application Menu Functions.....	13
Exhibit 6. Umler-Specific Command Buttons	14
Exhibit 7. Umler-Specific Icons	15
Exhibit 8. Umler Welcome/Home	17
Exhibit 9. Single Equipment Search	18
Exhibit 10. Equipment Units in Conflict Auto Query	19
Exhibit 11. Equipment Validation Request.....	19
Exhibit 12. Equipment Validation Request History.....	20
Exhibit 13. Query Menu	22
Exhibit 14. Query Menu Items and Descriptions.....	22
Exhibit 15. Display Unit	23
Exhibit 16. Display Unit Search Results – Default Expanded View	23
Exhibit 17. Display Unit Search Results – Collapsed View	24
Exhibit 18. Display Unit – Flat View	25
Exhibit 19. Display Unit Search Results for a Locomotive.....	26
Exhibit 20. Blue Card PDF	26
Exhibit 21. Equipment Query – Top.....	28
Exhibit 22. Equipment Query Field Descriptions.....	28
Exhibit 23. Equipment ID Formats/Delimiters/Wildcards.....	30
Exhibit 24. Equipment Query – Bottom	31
Exhibit 25. Equipment Query Field Descriptions (cont'd).....	31
Exhibit 26. Equipment Query – Customize Query Output Tab	34
Exhibit 27. Equipment Query Example – Top.....	35
Exhibit 28. Equipment Query Example – Bottom	36
Exhibit 29. Equipment Query Example – Customize Query Output	37
Exhibit 30. Query Processing Options.....	37
Exhibit 31. Equipment Query Reports (CSV Downloads) Tab	38
Exhibit 32. Equipment Query Results.....	39

Exhibit 33. File Download for CSV Output	40
Exhibit 34. CSV Query Output in MS Excel	40
Exhibit 35. Equipment Query With Count.....	41
Exhibit 36. Saved Queries Tab	41
Exhibit 37. Save Query Attributes	42
Exhibit 38. Pool/Equipment Search.....	43
Exhibit 39. Car Management Query Field Descriptions.....	44
Exhibit 40. Station Lookup	45
Exhibit 41. Station Lookup Results	46
Exhibit 42. Car Management Query Processing Options	46
Exhibit 43. Pool/Equipment Search Results – Equipment View	47
Exhibit 44. Pool/Equipment Search Results – CSV Results.....	48
Exhibit 45. Pool/Equipment Search Results – Pool View	48
Exhibit 46. View Pool Header	49
Exhibit 47. View Pool Header Processing Options	49
Exhibit 48. Assigned Equipment	49
Exhibit 49. Update Pool Header	50
Exhibit 50. Future Date Fields	51
Exhibit 51. Update Pool Header Processing Options	51
Exhibit 52. Search Transaction Log – Top	52
Exhibit 53. Transaction Log Field Descriptions	53
Exhibit 54. Search Transaction Log – Bottom.....	54
Exhibit 55. Transaction Log Field Descriptions (cont'd)	54
Exhibit 56. View Transaction Log Processing Options	56
Exhibit 57. Transaction Log Reports (CSV Downloads) Tab	56
Exhibit 58. Transaction Log Search Results.....	57
Exhibit 59. Transaction Details.....	57
Exhibit 60. Company Contact Info	58
Exhibit 61. User Contact Info	58
Exhibit 62. Search Inspection History – Top.....	59
Exhibit 63. Inspection History Field Descriptions.....	59
Exhibit 64. Search Inspection History – Bottom	60
Exhibit 65. Inspection History Field Descriptions (cont'd).....	60
Exhibit 66. View Transaction Log Processing Options	61
Exhibit 67. Inspection History Search Results – Browser Summary.....	62
Exhibit 68. Search Inspection History Summary Details	62
Exhibit 69. Search Inspection History – Detailed List.....	63
Exhibit 70. Historical Lineage Query	64
Exhibit 71. Historical Lineage Query Results	64
Exhibit 72. Historical Locomotive Blue Card Query	65
Exhibit 73. Historical Locomotive Blue Card Record.....	65
Exhibit 74. Equipment Unit Comparison.....	66
Exhibit 75. Equipment Unit Comparison Expanded.....	67
Exhibit 76. Equipment Unit Comparison Differences Only View	67
Exhibit 77. Maintenance Menu	68
Exhibit 78. Maintenance Menu Items and Descriptions	68
Exhibit 79. Add/Change/Delete Submenu	69
Exhibit 80. Add/Change/Delete Submenu Items and Descriptions	69
Exhibit 81. Add Equipment	71
Exhibit 82. Equipment Group.....	71
Exhibit 83. Add Equipment Example	72

Exhibit 84. Suspend Work	73
Exhibit 85. Equipment Updates Successfully Submitted to the System	74
Exhibit 86. Clone Equipment.....	75
Exhibit 87. Clone Equipment Example.....	76
Exhibit 88. Add-Back Equipment.....	77
Exhibit 89. Add-Back Equipment Search Results	78
Exhibit 90. Multiple Equipment Add-Back	79
Exhibit 91. Multiple Equipment Add-Back Results	80
Exhibit 92. Single Equipment Modify	81
Exhibit 93. Single Equipment Modify - Components by Element View.....	82
Exhibit 94. Single Equipment Modify - Components By Location View	83
Exhibit 95. After Adding Second Truck Component	83
Exhibit 96. Modify Multiple Equipment Units.....	84
Exhibit 97. Modify Multiple Equipment Units – Select Elements	84
Exhibit 98. Modify Multiple Equipment Units – Update Elements.....	85
Exhibit 99. Equipment Updates Successfully Submitted.....	86
Exhibit 100. Restencil Single Equipment	87
Exhibit 101. Restencil Equipment Update Record	88
Exhibit 102. Restencil Multiple Equipment.....	89
Exhibit 103. Restencil Multiple Equipment Update Record.....	90
Exhibit 104. Change Equipment Group.....	90
Exhibit 105. Change Equipment Group.....	91
Exhibit 106. Change Equipment Group - Modify Equipment Task	91
Exhibit 107. Equipment Updates Successfully Submitted.....	92
Exhibit 108. Equipment Query Results - Verify Change Equipment Group.....	92
Exhibit 109. Update Equipment Maintenance Party.....	93
Exhibit 110. Delete Equipment.....	94
Exhibit 111. Confirm Deletion of Equipment.....	94
Exhibit 112. Delete Reasons	95
Exhibit 113. Delete Confirmation.....	95
Exhibit 114. Delete Equipment Summary	95
Exhibit 115. Add Addition and Betterment.....	96
Exhibit 116. Addition and Betterment Confirmation and Email Summary.....	97
Exhibit 117. Car Management Submenu	98
Exhibit 118. Car Management Submenu Items and Descriptions	98
Exhibit 119. Create Pool Header	99
Exhibit 120. Pool Header Fields	100
Exhibit 121. Delete Pool Header	102
Exhibit 122. Enter Equipment IDs for Lessee Removal	103
Exhibit 123. Equipment Management Codes	104
Exhibit 124. Update Equipment Management Codes.....	104
Exhibit 125. Pool/Equipment Search Results - Equipment View.....	105
Exhibit 126. Update Equipment Management Codes.....	105
Exhibit 127. User Defined Routing (UR)	106
Exhibit 128. Mechanical Restriction (MR).....	106
Exhibit 129. Mechanical Restriction Reason (MRR)	106
Exhibit 130. Pool/Equipment Search Results Showing Updated Codes.....	107
Exhibit 131. Pool Assignment	108
Exhibit 132. Pool Assignment From a Query	109
Exhibit 133. Confirm Pool Unassignment.....	110
Exhibit 134. Inspections.....	111

Exhibit 135. Inspection/Service Processing.....	112
Exhibit 136. AMFC Inspection.....	114
Exhibit 137. Inspection Processing Options	114
Exhibit 138. Air Brake Test.....	115
Exhibit 139. SPLC Lookup.....	116
Exhibit 140. SPLC Lookup Results	116
Exhibit 141. Air Brake Test.....	117
Exhibit 142. Air Brake Test With Repeated Columns.....	117
Exhibit 143. Air Brake Test Results Submitted.....	118
Exhibit 144. Autorack Inspection	119
Exhibit 145. Car Grade Inspection.....	120
Exhibit 146. Locomotive Air Brake L1 Inspection.....	122
Exhibit 147. Update Locomotive Inspection Due Dates.....	123
Exhibit 148. Report Locomotive Storage Event	124
Exhibit 149. Company-Specific Equipment Groups Submenu	125
Exhibit 150. Company-Specific Equipment Groups Items and Descriptions.....	125
Exhibit 151. Basic Search for Company-Specific Equipment Groups	127
Exhibit 152. Company-Specific Equipment Groups Field Descriptions	128
Exhibit 153. Group Fields Search for Company-Specific Equipment Groups	129
Exhibit 154. Search for Company-Specific Equipment Groups Processing Options	130
Exhibit 155. Group View Company-Specific Equipment Groups Search Results	130
Exhibit 156. Confirm Delete of Company-Specific Equipment Group(s).....	131
Exhibit 157. Company-Specific Equipment Groups Links.....	131
Exhibit 158. View Company-Specific Equipment Group.....	132
Exhibit 159. Edit Company-Specific Equipment Group.....	133
Exhibit 160. User Contact Info	134
Exhibit 161. Equipment View Company-Specific Equipment Groups Search Results.....	134
Exhibit 162. Create Company-Specific Equipment Group.....	135
Exhibit 163. Add Equipment to Company-Specific Equipment Groups	137
Exhibit 164. Company-Specific Equipment Group Lookup.....	138
Exhibit 165. Company-Specific Equipment Group Lookup Search Results	139
Exhibit 166. Add Equipment to Company-Specific Equipment Groups Example	139
Exhibit 167. Remove Equipment from Company-Specific Equipment Groups	140
Exhibit 168. Confirm Removal of Equipment from Company-Specific Equipment Groups	140
Exhibit 169. Move Equipment to Another Company-Specific Equipment Group	141
Exhibit 170. Search Notices – Top Mandatory Fields	142
Exhibit 171. Search Notices Field Descriptions – Top.....	143
Exhibit 172. Search Notices – Bottom Optional Fields	144
Exhibit 173. Search Notices Field Descriptions – Bottom	145
Exhibit 174. Event/Response Codes.....	145
Exhibit 175. Element ID Lookup Using Find.....	146
Exhibit 176. Search Notices Processing Options.....	146
Exhibit 177. Online Notice Search Results.....	147
Exhibit 178. Notice Details With Active Error.....	148
Exhibit 179. Notice Processing Options	149
Exhibit 180. CSV Notice Search Results in Excel.....	149
Exhibit 181. CSV Notice Search Results CSV File Column Key	150
Exhibit 182. Suspended Work	152
Exhibit 183. Update Pool Header Transaction Retrieved	153
Exhibit 184. Confirm Delete Suspended Tasks	154
Exhibit 185. Search Future Effective Transactions	155

Exhibit 186. Search Future Effective Transaction Descriptions.....	155
Exhibit 187. Search Future Transaction Processing Options.....	156
Exhibit 188. Future Effective Transaction Search Results	156
Exhibit 189. Future Effective Transaction Details.....	157
Exhibit 190. Upload/Download Menu.....	158
Exhibit 191. Upload/Download Menu Items and Descriptions	158
Exhibit 192. Upload Umler Transactions	159
Exhibit 193. Upload Corrected Error Notices.....	160
Exhibit 194. Refresh	161
Exhibit 195. Account Administration.....	163
Exhibit 196. Account Administration Menu Items and Descriptions.....	163
Exhibit 197. Security Management.....	165
Exhibit 198. View a User's Access Rights	166
Exhibit 199. Pool Access Right – View Only.....	167
Exhibit 200. Update a User's Access Rights	168
Exhibit 201. Update a User's Access Rights for Selected User.....	168
Exhibit 202. Pool Access Right for User ID.....	169
Exhibit 203. Pool Access Right Field Descriptions.....	169
Exhibit 204. Equipment Access Right for User ID.....	171
Exhibit 205. Equipment Access Right Field Descriptions.....	171
Exhibit 206. Count for Access Rights.....	172
Exhibit 207. Inspection Access Right for User ID.....	173
Exhibit 208. Inspection Access Right Field Descriptions.....	173
Exhibit 209. Confirm - Delete an Access Right.....	176
Exhibit 210. Select Access Right Source.....	176
Exhibit 211. Confirm Clone Access Rights.....	177
Exhibit 212. Manage Security Profiles	178
Exhibit 213. Add Security Profile.....	178
Exhibit 214. Edit Security Profile for New Profile.....	179
Exhibit 215. Edit Security Profile for Existing Profile	180
Exhibit 216. Clone a Security Profile	181
Exhibit 217. Confirm Delete of Security Profile(s).....	182
Exhibit 218. Add/Remove User To/From Security Profiles	183
Exhibit 219. Add/Remove User To/From Security Profiles Add/Remove Windows.....	183
Exhibit 220. Inter-Company Access Rights Granted by My Company.....	185
Exhibit 221. Add a Company.....	186
Exhibit 222. Update Access Rights.....	186
Exhibit 223. Access Rights Statuses.....	187
Exhibit 224. View Confidential Data Access Right	187
Exhibit 225. Manage Security Profiles	188
Exhibit 226. Inter-Company Access Rights Granted to My Company.....	189
Exhibit 227. Delete Confirmation.....	189
Exhibit 228. View <Type> Access Right	190
Exhibit 229. Status-Based Actions for View	190
Exhibit 230. Intra-Company Users List	191
Exhibit 231. View <Type> Access Right User Assignment Example.....	192
Exhibit 232. Intra-Company Security Profile List	193
Exhibit 233. <Type> Access Right.....	193
Exhibit 234. Manage Security Profiles for Inter-Company	194
Exhibit 235. Manage Security Profiles Updated.....	195
Exhibit 236. Edit Security Profile for Inter-Company	195

Exhibit 237. Inter Company Authorization Request.....	197
Exhibit 238. Inter Company Authorization Request Confirmation	198
Exhibit 239. Search Special Umler SSO Requests	198
Exhibit 240. Search Special Umler SSO Requests Results.....	199
Exhibit 241. Search Access Rights	200
Exhibit 242. Search Access Right(s) Field Descriptions	200
Exhibit 243. Search Access Rights Results For a Specific User.....	201
Exhibit 244. Edit Security Profile For a Specific ID	202
Exhibit 245. Equipment Access Right Read-Only.....	203
Exhibit 246. Search Access Rights – Locomotive Inspection Example	204
Exhibit 247. Search Access Right Results – Locomotive-related Inspections	204
Exhibit 248. Access Rights Transferred by My Company	205
Exhibit 249. Transfer Access Right	206
Exhibit 250. Confirm Transfer.....	206
Exhibit 251. Transfer Pending	207
Exhibit 252. Access Rights Transferred to My Company	208
Exhibit 253. Accept or Decline Transfer of Access Rights	208
Exhibit 254. Access Right Transfer	209
Exhibit 255. Configure Ticklers	210
Exhibit 256. Usage Statistics	211
Exhibit 257. Usage Statistics Search Results.....	212
Exhibit 258. FindUs.Rail	213
Exhibit 259. Umler Elements Field Help.....	217
Exhibit 260. The Umler Product Page on Railinc.com.....	218

Welcome to Umler

Railinc's Umler® is a web application that provides a variety of enhanced equipment management functions. This chapter presents an overview of Umler, its system requirements, descriptions, and references to supporting documentation, contacts, as well as a description of standard Railinc user interface elements and Umler-specific interface elements.

Overview

Umler is the industry's central repository for registered rail and intermodal equipment in North America. This system rests at the heart of nearly all railway activities. It is critical for effective industry interline operations. It provides the physical characteristics of equipment and the inspection data needed for the safe routing, loading capabilities, and rating information for car hire accounting. Virtually all the electronic exchange of rail equipment data relies in one form or another on Umler. It serves as the industry's database for equipment management and inspection information.

Industry leaders commissioned the development of Railinc's Umler to facilitate the industry's ever-changing business rules and government regulations.

Railinc's Umler allows users to access and manage rail equipment information through an internet application. The Umler user interface promotes greater efficiency by providing web-based access to the Umler database, allowing users to query and to make real-time updates to their data. This system has been designed to meet the data integrity needs of our customers by providing this greater flexibility in a fully secure environment.

User Guide Structure

This document has been organized to reflect the application menu order of Umler. It describes use and interpretation of the interface elements in Umler.

Dictionary-like retrieval text appears in the headers. A full index is included.

Screen captures generally show only the content area of the web pages (headers and footers have been removed).

Railinc Single Sign-On (SSO) information has been removed, and references to the [Single Sign-On User Guide](#) and [Single Sign-On Administrator Guide](#) were added where needed.

Whenever possible the term "select" is used to indicate making a choice using either the mouse or keyboard. Left click with your mouse to activate a control or select an item.

Links in this document may take you to another section of the user guide, open a document, website page, or email.

General User Interface and System Requirements

General user interface information (typical keyboard selection equivalents and shortcuts), as well as system requirements are available in the [Railinc UI Dictionary](#). Application-specific interface information is described in the next section.

Requesting Changes to Umler

Use the following procedure to request changes to Umler:

1. Open the [Umler Change Request](#).
2. Complete the document and save it to your computer (leave open).
3. Select the link at the top of the form. This opens an email to the Railinc Customer Success Center with the subject line “Umler Change Request.”
4. Attach the saved document.
5. Send the email.

Supporting Documentation

Umler Data Specifications Manual

The [Umler Data Specifications Manual](#) provides the data requirements and input formats to register equipment into the Umler system and is needed when registering equipment. It also contains tables of business rules and field definitions. The current version of the [Umler Data Specifications Manual](#) and other reference materials can be downloaded from [Umler product page](#) on Railinc.com. Select the **References** menu item from any page to open the Umler product page.

AAR Field Manual

Published by the Association of American Railroads (AAR), this manual contains all rules dealing with the care and repair, responsibility for, disposition of, settlement of freight equipment. It includes the procedures for the operating and billing of maintenance pools.

Information for ordering this manual can be found on the AAR’s publication website at <https://aarpublishings.com/>.

Railinc Customer Success Center

The Railinc Customer Success Center (CSC) is a free service to Umler users and is operational twenty-four hours a day, every day of the year. Call **(877) 724-5462** or email csc@railinc.com to report problems accessing Umler. Password, User ID and other issues related to access will be solved as soon as possible.

User Interface

The Umler interface provides the same navigational tools found in most Windows applications and internet sites. This section provides basic explanations of the elements and components that assist in moving through the various pages of the application to complete tasks.

Railinc Page Layout

Each page in a Railinc web application has the same structure.

Exhibit 1. Railinc Application Layout

The screenshot shows the Railinc application interface. The top navigation bar includes the Railinc logo (1), the application title 'Umler' (2), the user ID 'USERID: RAIL' (3), and links for 'Launch Pad' and 'Sign Out'. The main navigation menu contains links for 'Home', 'Query', 'Maintenance', 'Upload / Download', 'Railinc Admin Functions', 'Account Administration', 'Contact List', 'Component Register', 'References', and 'Sign Out'. The main content area displays 'Historical Lineage Query Results' (8) with a search criteria section and a table of results. The table has columns for EIN, Equipment ID, Prior Equip..., Equip Group, ETC, IMD, Built Date, Rebuilt Date, Effective Date, Status, Expiration Date, and Most. The table shows 16 items found, displaying all items (9). The bottom of the page includes links for 'Legal Notices', 'Privacy Rights', 'Contact Us', 'Terms of Use' (11), and 'Copyright 2023 Railinc® All rights reserved.' (12).

EIN	Equipment ID	Prior Equip...	Equip Group	ETC	IMD	Built Date	Rebuilt Date	Effective Date	Status	Expiration Date	Most
0010716371	RAIL6100		GOND	G510	GB	8/2022		2023-05-10 22:46:08	Deleted	9999-12-31 00:00:00	Y
0010716371	RAIL6100		GOND	G510	GB	10/18/2022		2023-05-10 22:45:41	Active	2023-05-10 22:46:08	
0010536781	RAIL6100		BOXC	A403	XP	02/24/2010		2023-03-16 03:43:04	Deleted	9999-12-31 00:00:00	Y
0010536781	RAIL6100		BOXC	A403	XP	02/24/2010		2023-02-02 02:33:42	Active	2023-03-16 03:43:04	
0010536781	RAIL6100		BOXC	A403	XP	02/24/2010		2022-05-05 08:30:21	Inactive	2023-02-02 02:33:42	
0010536781	RAIL6100		BOXC	A403	XP	02/24/2010		2022-03-17 10:11:16	Active	2022-05-05 08:30:21	
0010536781	RAIL6100		BOXC	A403	XP	02/24/2010		2022-02-25 08:35:24	Pre-Registered	2022-03-17 10:11:16	
0009976857	RAIL6100	RAIL2500	HOPP	K384	HMA	01/01/1992		2016-01-20 09:53:10	Deleted	9999-12-31 00:00:00	
0009976857	RAIL2500		HOPP	K384	HMA	01/01/1992		2016-01-20 09:52:28	Deleted	9999-12-31 00:00:00	Y
0009976857	RAIL6100	RAIL2500	HOPP	K384	HMA	01/01/1992		2014-12-09 08:42:59	Pre-Registered	2016-01-20 09:53:10	
0009976857	RAIL2500		HOPP	K384	HMA	01/01/1992		2014-12-09 08:42:38	Active	2016-01-20 09:52:28	
0009976857	RAIL2500		HOPP	K384	HMA	01/01/1992		2014-12-09 08:42:22	Pre-Registered	2014-12-09 08:42:38	


- 1 Logo**—Railinc logo. The logo is a link to the Railinc Corp website.
- 2 Application Title**—Name of the application. This is also a link to the Home page of the application.
- 3 User ID**—Logged in user.
- 4 Company**—Company the user represents. This is for individuals representing more than one road. Selecting this link while logged in (RAIL is shown in the example below) opens the **User Mark Selection** pop-up. Enter or select the company on whose behalf you'll be working—without logging out.

Exhibit 2. User Mark Selection

The screenshot shows the 'User Mark Selection' pop-up. It has a title bar 'User Mark Selection' and a dropdown menu labeled 'Select a Mark *' with 'RAIL' selected. Below the dropdown are 'Cancel' and 'Select' buttons. The background shows the application interface with the user ID 'USERID: RAIL' and navigation links.

- 5 Launch Pad**— Clicking on this provides a drop-down menu of Launch Pad links in order to switch to other authorized Railinc applications (top) or go to User Services functions (bottom), e.g., change passwords, request other applications ([Exhibit 3](#)).

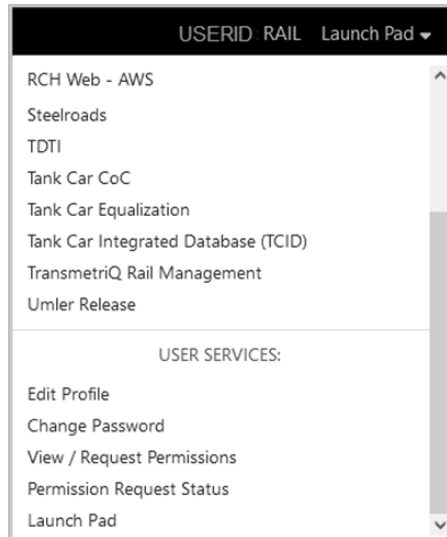Exhibit 3. Launch Pad Drop-Down Menu



- 6 Sign Out**—Logs out of current application and returns to the Railinc SSO login page.
- 7 Application Menu**—The top of the Railinc page displays the application menu options. The options on this menu allow you to perform the various functions of the application. Some specific options include:
- **References**—Opens a page with links to various reference training materials (e.g., quick guides, specification manual, task videos, webinars, etc.).
- 8 Page Title**—The title of the specific application task page.
- 9 Message Area**—Area under the page title which displays messages as needed (shown outlined in blue).
- 10 Page content area**—The area of the page where tasks are executed (shown outlined in red). These vary and may include a number of different elements, which are described in the next sections.
- 11 Legal Links**—This area at the bottom left of each page contains links to applicable legal notices, privacy rights and terms of use.
- Contact Us**—Opens a page of contact information (local road, Railinc support).
- 12 Copyright**—This area at the bottom right of each page displays copyright information.

Umler-Specific Interface Elements

This section describes the Umler-specific interface elements.

Umler Application Menu

[Exhibit 4](#) show the Umler application menu.

Exhibit 4. Umler Application Menu



The Umler application menu provides the following functions:

Exhibit 5. Umler Application Menu Functions

Menu Item	Function
Home	Displays the Umler Home page
Query	Displays the Query menu
Maintenance	Displays the Maintenance menu
Upload/Download	Displays the Upload/Download menu
Railinc Admin Functions	Displays the Railinc Admin Functions menu (for Railinc Administrators only)
Account Administration	Displays the Account Administration menu (for Company Administrators only)
Contact List	Opens the FindUs.Rail application
Component Tracking/Registry	Displays the Component Registry menu as described in the Component Tracking User Guide (also see References)
References	Opens the Umler product page in Railinc.com

Umler Checkbox Toggles

On certain pages, Umler uses a checkbox to modify the appearance or display of data. Unchecking the checkbox returns the data to its default appearance. These include:

- ☐ **Use Spanish for error messages and form labels**—check to toggle to Spanish language ([Exhibit 8](#))
- ☐ **Show database values**—check to show unformatted database values ([Exhibit 16](#))
- ☐ **Flat View**—check to display truck components grouped by element in location order ([Exhibit 16](#))
- ☐ **Differing elements only**—check to removing matching elements ([Exhibit 75](#))

Umler Command Buttons

Umler uses some application-specific command buttons.

Exhibit 6. Umler-Specific Command Buttons

Name	Function
Accept	Accepts a pending access right granted by another company (Exhibit 228).
Add Equipment Right	Opens the Equipment Access Right page (Exhibit 204).
Add Inspection Right	Opens the Inspection Access Right page (Exhibit 207).
Add Pool Right	Opens the Pool Access Right page (Exhibit 202).
Add View Confidential Data Right	Opens the View Confidential Data Access Right page (Exhibit 224).
Assign to Profile	Opens the Manage Security Profiles (Exhibit 212).
Assign to User	Opens the Intra-Company User List (Exhibit 230).
Clone	Clones an existing security management profile (Exhibit 212).
Clone Rights	Selects the user whose rights are being cloned. (Exhibit 210)
Clone Rights from Another User	Opens the Select Access Right Source page (Exhibit 210).
Collapse All	Causes table structure to collapse to headings only. Used with + and – icons.
Confirm Clone Rights	Applies cloned rights to the recipient (user) (Exhibit 211).
Count Equipment	Provides an equipment count for rights being assigned to a user.
Decline	Declines a pending access right granted by another company (Exhibit 228).
Element Selection	Toggles back to the Select Elements for Update page for Modify Multiple Equipment Units (Exhibit 98).
Expand All	Causes table structure to expand to headings and subheadings only.
Go	While in view by location after incrementing the component count, adds an additional component location (Exhibit 94).
Grant Access Rights	Opens the Update Access Rights page for the selected company (Exhibit 222).
Grant Profiles	Opens the Manage Security Profiles page for the selected company (Exhibit 225).
Relinquish	Surrenders a previously accepted right from another company (Exhibit 229)
Restore	Restores (activates) a deleted notice (Exhibit 177 and Exhibit 178).
Revoke	Revokes access right granted to another company (Exhibit 222) or a security profile granted to another company (Exhibit 225).

Name	Function
Show Equipment	Shows list of equipment assigned to a specific pool (when viewing a pool header). See Exhibit 48 .
Switch View	Toggles Equipment details page (e.g., modify, etc.) to show components by physical location on car (Exhibit 93 and Exhibit 94).
Transfer	Requests (and confirms) the transfer of specified access rights from one company to another (Exhibit 249). Railinc Administrators only.

Umler Icons and Indicators

Umler uses application-specific icons and indicators to assist you:

Exhibit 7. Umler-Specific Icons

Icon	Umler-Specific Description
	ETC Generation field
	Mandatory Element field
	Rating field
	Identifies blue card elements
	Element in conflict indicator. Record needs attention to remove the conflict
	Copy entry in field to all fields below (notably for Inspections), or change query results display order (move selected item down)
	Move entry into field at right (Query Output Attribute options)
	Move entry into field at left (Query Output Attribute options)
	Change query results display order (move selected item up or down)
	Assigns selected security profile to user ID
	Assigns all available security profiles to user ID
	Unassigns selected security profile from user ID
	Unassigns all security profiles from user ID
	Expands directory (table) structure
	Collapses directory (table) structure
	Opens calendar for date fields
	Calculates due date for related date fields (Inspections).
	Copy entry in field to all fields below (in Modify Multiple Equipment)

Getting Started

The Umler application is accessed using the Railinc Single Sign-On (SSO), which can be accessed from the Railinc portal at <https://public.railinc.com>. The SSO log in is located at the upper right of the page. Refer to [Register to Use Railinc SSO](#).

Register to Use Railinc SSO

Each Umler user must register to use Railinc Single Sign-On. It is beyond the scope of this document to describe the use of Railinc Single Sign-On. Refer to [Railinc SSO and Launch Pad User Guide](#).

Once SSO registration is complete, you must request access to Umler within SSO.

Requesting Umler Access

After authorization to use Railinc SSO is received, you must request general access to Umler following instruction in the [Railinc SSO and Launch Pad User Guide](#).

When you receive the email notification that you have access to Umler, you can login and begin using Umler. Refer to [Logging In](#).

Access to certain functions within Umler are handled by your local Umler administrator who has the SSO rights to specify local Umler user's tasks (and menu items). Some advanced Umler tasks are billable from Railinc to the requesting road, so access is carefully controlled via SSO.

Logging In

Use the following procedure to log into Umler:

1. Open your internet browser and enter <https://public.railinc.com> to open the Railinc website.
2. Select the **Customer Login** link in the upper right of the page. The Account Access page is displayed.
3. Enter your **User ID** and **Password**. Select **Sign In**. The Railinc Launch Pad is displayed.
4. Select **Umler** in the **My Applications** section.
 - a. If you are authorized to act on behalf of just one company, the Umler Home/Welcome page is displayed ([Exhibit 8](#)).

If you are authorized to act on behalf of more than one company, the User Mark Selection pop-up displays ([Exhibit 2](#)). Enter or select the company you want to represent and click the **Select** button. The Umler Home page is displayed ([Exhibit 8](#)).

Logging Off

If the SSO Login is still needed for other SSO applications, select the **Launch Pad** link, which closes Umler and returns to the Launch Pad/SSO Welcome page where other applications can be selected.

On any Umler page, select the **Sign Out** link at the upper right of the page. The Railinc SSO login page is displayed.

Home Page

Exhibit 8. Umler Welcome/Home

RAILINC | Umler

USERID: RAIL Launch Pad Sign Out

Home Query Maintenance Upload / Download Railinc Admin Functions Account Administration Contact List Component Registry Help References

Welcome to the Umler® System

The Railinc **Umler®** system is the mission-critical source for reliable rail equipment data. The Umler equipment registry contains the physical characteristics, inspection history, transportation management and pool assignments of nearly two million pieces of rail equipment in North America. This registry is the base file for other industry reference files and industry equipment accounting files.

The Umler system provides rail carriers, equipment owners and shippers with real-time access to detailed equipment data, providing for the safe movement of traffic and smooth interchange of shipments between carriers. Umler allows the rail industry to provide customers with the right pieces of equipment for their shipment.

The Umler system enables better communication and collaboration among rail partners for enhanced asset management and improved rail safety.

☐ Use Spanish for error messages and form labels

Release Docs

- Umler User Guide
- Umler Data Specification Manual
- Umler Change Request Form
- Component Registry User Guide
- Component Registry Data Specification Manual

Umler Contacts for RAIL

External users are not currently provided Umler contacts for RAIL when searching Findus.Rail. Providing contacts in Findus.Rail makes it easy for the rail industry to contact your company.

Umler Company Administrator(s) for RAIL Equipment, Pool, and Inspection Rights:

[Umler Company Admin](#)

To search for contacts at other companies [click here](#)

Equipment

Single Equipment Search

Equipment units in conflict: 99

[Download Equipment in Conflict](#)

Equipment with component ID conflicts: 21

Equipment Validation Requests: 10

Functions on this page include:

- Check the box under the information window to view error messages, page titles, instructions, and command buttons in Spanish.
- Select an Umler application menu item (refer to [Exhibit 5](#)).
- Use the Single Equipment Search function as described in [Single Equipment Search](#).
- View/update equipment in conflict by selecting the **Equipment units in conflict** link. See [View/Update Equipment Units in Conflict](#).
- View/Accept/Reject Equipment Validation Requests by selecting the Equipment Validation Requests link. See [Equipment Validation Requests](#).
- Send an email to your company (MARK) Umler contacts.
- Search for other company's contacts.

Single Equipment Search

While on the Home/Welcome page, type an equipment ID in the **Single Equipment Search** text box and select **Search**. The Single Equipment Search page is displayed ([Exhibit 9](#)).

Exhibit 9. Single Equipment Search

Equipment

Single Equipment Search

RAIL6100

Search

Single Equipment Search

Search

Search Result

Equipment Id	RAIL 4152	Mechanical Designation	XM
Equipment Type Code	B634	Mechanical Restriction	X
Air Brake Test Date Done		Mechanical Restriction Reason	B
ABT Due Date (Repair Track)		Car Grade	A
ABT 5/8 Year Due Date	05/12/2023	Load Limit	208500
Outside Length	67' 2"		

Done

This page is for viewing only. Select the **Search** tab to perform another search.

To exit the page, select **Done** to return to the Home/Welcome page, or select an Umler application menu item (refer to [Exhibit 5](#)).

View/Update Equipment Units in Conflict

When the **Equipment Units in Conflict** link is selected, a query with those units is automatically executed ([Exhibit 10](#)).

Exhibit 10. Equipment Units in Conflict Auto Query

Equipment Query Results

Search Criteria Search Results

Select one or more equipment IDs, and an action, for pool management/equipment management. You may also click an equipment ID to display it.

100 matches found. 100 available for display. 100 matches displayed on this page.

AFMC Inspection Apply Clear Filters

☐	Equipment Id	Pool Number	Equipment Group	Equipment Type Code	Mechanical Designation	Stenciled Mark Owner	Lessee
☐	AARX 5555	0000000	GOND	G510	GB	AARX	
☐	AARX 6657	0000000	TANK	T054	T	AARX	
☐	AARX 8880	0000000	GOND	G510	GB	AARX	
☐	AARX 8881	0000000	GOND	G510	GB	AARX	
☐	AARX 8882	0000000	GOND	G510	GB	AARX	
☐	AARX 8883	0000000	GOND	G510	GB	AARX	
☐	AARX 8884	0000000	GOND	G510	GB	AARX	
☐	AARX 8886	0000000	GOND	G510	GB	AARX	
☐	AARX 45826	0000000	BOXC	A403	XP	AARX	

30 100 500 1000 5000

Use the Equipment ID link to display the unit or select the checkbox beside the unit(s), and if authorized, choose **Modify Equipment** from the Action drop-down to edit those units in conflict. Refer to [Exhibit 32](#). Refer also to [Modify Single Equipment](#) for modification instructions.

Equipment Validation Requests

When the **Equipment Validation Requests** link is selected on the Umler Home page ([Exhibit 8](#)), the list of Equipment Validation Requests opens. These equipment IDs are associated with your MARK(s) and Equipment Validation Requests records have been created for them based on four consecutive 'Bad' readings, Mismatched AEI Tag Detector readings and Umler information for Axle Count and or Equipment Group of that equipment.



When an Equipment Validation Request is created on active equipment, an Umler Tickler notification should be created and sent to the equipment (car) owner for the equipment. See [Configure Ticklers](#) for details.

Exhibit 11. Equipment Validation Request

View/Manage Equipment Validation Requests

View History

Accept Apply Number of Request(s): 9 Clear Filters

☐	Equipment Id	Date Report...	Source	Element Name	Description
☐	RAIL0000011341	03/10/2023	TCID	B526 - Stub Sill Design Variation	Umler Value is '' and CSV Value is 'Non-Continuous'
☐	RAIL0000011341	03/10/2023	TCID	A251 - Stub Sill Design Type	Umler Value is 'FCA002' and CSV Value is 'CNC002'
☐	RAIL0000011341	03/10/2023	TCID	A072 - Shipping Container Specification (Design)	Umler Value is '111A100W' and CSV Value is '111A100W1'
☐	RAIL0000011341	03/10/2023	TCID	BLDT - Built Date	Umler Value is '20130801' and CSV Value is '20150901'
☐	RAIL0000011341	03/10/2023	TCID	A237 - Shipping Container Specifications (Stencil...	Umler Value is '111A100W5' and CSV Value is '103'
☐	RAIL0000011341	03/10/2023	TCID	B240 - Year Tank Qualified	Umler Value is '2023' and CSV Value is '2008'
☐	RAIL0000011341	03/10/2023	TCID	A052 - Compartment Count	Umler Value is '1' and CSV Value is '2'
☐	RAIL0000011341	03/10/2023	TCID	B204 - Jacket Material Category	Umler Value is 'U' and CSV Value is '1'

View Equipment Validation Requests

An active **Equipment Validation Request** record is created when:

- Detectors log 4 or more bad reads for Axle Count (A024) when comparing equipment to Umler data
- Detectors log 4 or more bad reads for AEI tag mismatch of Equipment Group (0002)

An **Equipment Validation Request** record is moved to History when:

- Records in Umler are Accepted or Rejected
- A record is older than 90 days and no action has been taken

An **Equipment Validation Request** record is deleted when:

- Detectors log 3 or more good reads (following 4 or more bad reads)
- A record is deleted from History after 90 days, see [View History](#).

The **Equipment ID** link opens the **Display Unit** page with the equipment details. For more information about **Display Unit**, see [Exhibit 16](#).

Accept/Reject Validation Requests

User the follow procedure to accept/reject equipment validation requests:

1. Select the **Equipment ID** by clicking the appropriate checkbox(es).
2. From the drop-down list in the upper right side of the page, select **Accept** or **Reject** from the list. Click **OK**.
 - a. Selecting **Accept** means that you have corrected the issue, whether it required a manual update in the Umler Modify Equipment page or fix of the AEI tag.
 - b. Selecting **Reject** means that the equipment or tag has already been corrected or is not a validation issue.

View History

Click the **View History** link to view the history of all equipment IDs that have been Accepted or Rejected or are older than 90 days without any action being taken.

Exhibit 12. Equipment Validation Request History

Equipment Validation Request History							
View/Manage Equipment Validation Requests							
Number of Request(s): 1						✖ Clear Filters	
Equipment Id	Date Report...	Source	Element Na...	Description	Disposition	Disposition By	Disposition ...
RAIL0000011341	03/10/2023	TCID	Equipment Builder	Umler Value is 'UTLX' and CSV Value is 'ACFX'	Accepted	AUTOUMLR	05/24/2023

Email Umler Administrators for MARK

To email an Umler administrator for the login mark, select the **name link** in the contact column. An email for that administrator is opened. Indicate the Umler needs and send the email.

Find Other Company Contacts


When the **Click here** link at the bottom of the Home page is selected, the FindUs.Rail application opens. Refer to [Contact List](#) for additional information.

Query

When **Query** is selected from the Umler menu, the Query menu displays ([Exhibit 13](#)).

Menu & Options

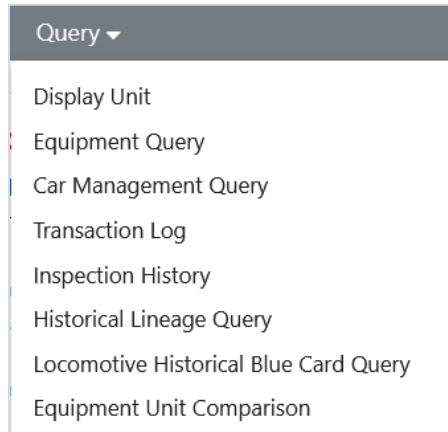Exhibit 13. Query Menu



[Exhibit 14](#) describes the tasks available in the Query menu.

Exhibit 14. Query Menu Items and Descriptions

Menu Item	Description
Display Unit	Allows you to view the entire Umler record for a specified equipment ID.
Equipment Query	Allows you to query for equipment unit information. Provides access to saved queries.
Car Management Query	Allows you to search for specific pools and equipment in order to view pool header and assignment data and perform edits.
Transaction Log	The transaction log provides a history of all activity (related to equipment and pool data) successfully applied to the system. This page provides a search engine that allows you to query transaction records by various criteria such as transaction type and equipment group. You can view the details of found transaction records.
Inspection History	Allows a user to request inspection history of equipment or by inspection types.
Historical Lineage Query	Allows a user to request and view a lineage query for a single piece of equipment.
Equipment Unit Comparison	Allows a user to view the differences between any two pieces of equipment in the same equipment category.

Display Unit

This function is used to view all details of an Umler record for a specified equipment ID. Based on user permissions, some confidential fields may not be displayed.

Use the following procedure to display a record:

1. From the main menu, select **Query > Display Unit**. The Display Unit page is displayed ([Exhibit 15](#)).

Exhibit 15. Display Unit

Display Unit

Equipment ID *

RAIL0000003410

☒ Submit

2. Enter a valid **Equipment ID** and select **Submit**. If the Equipment ID is not valid, an error message is displayed, otherwise the Display Unit Search Results (read-only) page is displayed ([Exhibit 16](#)).

Exhibit 16. Display Unit Search Results – Default Expanded View

Display Unit

Select Search tab to view another Equipment ID

Search

Search Result

Equipment is in conflict, click to view.

Select buttons to expand or collapse the displayed table

Check this box to show unformatted database values

Check this box to show components grouped by element

Link to Equipment Health View (EHV)

☒ Collapse All ☒ Expand All

Equipment ID: RAIL0000003410 Equipment Group: BOXC Stenciled Mark Owner: RAIL

Show database values: ☐ Flat View: ☐

[Equip PDF](#) [Equipment Health View](#)

[General](#) [Weight](#) [Dimension](#) [Door](#) [Specification](#) [Feature](#) [Cost](#) [Car Management](#) [Train Service](#) [Truck Components](#) [Draft System Components](#) [Unit Segment Components](#)

[Brake System Components](#) [Miscellaneous](#) [Inspection](#) [Default Presentation Group](#)

Select +/- to expand or collapse each section

Links to jump to each section of the record

Link to generate a PDF

Element Name	ID	Flag	Value	Conflict
Status Code	USCD	●	A - ACTIVE	
Mechanical Designation	UMMD	● ▲	XM - Box-General Service	
Equipment Type Code	UMET			
Maint of Way Service Type	B403			
Built Date	BLDT	● 📅	01/01/2005	
Rebuilt / ILS Date	RBDT			
Owner	UMOW	●	RAIL	
Lessee	LESE			
Maintenance Party	MNPT		RAIL	

Select ID links for a pop-up of details about the element

- Scroll the table using the scroll bar or the navigation links above the table

Use the **Collapse All** button to collapse the table to headings only ([Exhibit 17](#)):

- | | |
|-------------------------------|------------------------------|
| – General | – Train Service |
| – Weight | – Truck Components |
| – Dimension | – Draft System Components |
| – Specification | – Unit Segment Components |
| – Feature | – Intermodal |
| – Cost | – Miscellaneous |
| – Blue Card (locomotive only) | – Inspection |
| – Car Management | – Default Presentation Group |

Use the **Expand All** button to fully expand the table.

- Use the + and - icons beside the headings to open or close them individually.

Check **Show database values** to see unformatted database values (this is a toggle—uncheck to return to the formatted view).

Check **Flat View** to see Components grouped by similar element for easier comparisons ([Exhibit 18](#)).

Select the **Equip PDF** link to open a printable version of the record in another window/tab. The PDF can be saved or printed. To return, close the PDF window/tab.

- Select the **Equipment Health View** link to open the Equipment Health View (EHV) portal (see the [Equipment Health View User Guide](#) for details).
- For locomotives, select the **Blue Card PDF** link to display a PDF version of a blue card Locomotive Inspection and Repair Record (see [Create Blue Card PDF](#)).

Select the **Search** tab to submit a different Equipment ID.

Exhibit 17. Display Unit Search Results – Collapsed View

Display Unit

Search Search Result

Equipment is in conflict, click to view. [Modify Equipment](#) [Cancel](#)

Equipment ID: RAIL0000003410 Equipment Group: BOXC Stenciled Mark Owner: RAIL

Show database values: ☐ Flat View: ☐ [Equip PDF](#) [Equipment Health View](#)

[General](#) [Weight](#) [Dimension](#) [Door](#) [Specification](#) [Feature](#) [Cost](#) [Car Management](#) [Train Service](#) [Truck Components](#) [Draft System Components](#) [Unit Segment Components](#) [Brake System Components](#) [Miscellaneous](#) [Inspection](#) [Default Presentation Group](#)

+ General
 + Weight
 + Dimension
 + Door
 + Specification
 + Feature
 + Cost

Exhibit 18. Display Unit – Flat View

Display Unit

Search Search Result

[Equipment is in conflict, click to view.](#)
Modify Equipment
Cancel

Collapse All
Expand All

Equipment ID: RAIL0000003410 Equipment Group: BOXC Stenciled Mark Owner: RAIL
Show database values: ☐ Flat View: ☒ [Equip PDF](#) [Equipment Health View](#)

[General](#) [Weight](#) [Dimension](#) [Door](#) [Specification](#) [Feature](#) [Cost](#) [Car Management](#) [Train Service](#) [Miscellaneous](#) [Inspection](#) [Default Presentation Group](#) [Components](#)

Components

Element Name	Location	ID	Flag	Value	Conflict	Component
Axle Spacing Distance	01	B020	 	70 - 70 Inches in		AXLESPACE
Axle Spacing Distance	02	B020	 	70 - 70 Inches in		AXLESPACE
Truck Axle Count	B	B252		2		TRUCK
Truck Axle Count	A	B252		2		TRUCK
Journal Size	B	A147	 	K - 6-1/2 X 9		TRUCK
Journal Size	A	A147	 	K - 6-1/2 X 9		TRUCK
Wheel Diameter	B	A294	 	36 - 36 Inches		TRUCK
Wheel Diameter	A	A294	 	36 - 36 Inches		TRUCK
Stability Device Equipped	B	B199		Y - Yes		TRUCK
Stability Device Equipped	A	B199		Y - Yes		TRUCK
Bolster Component ID	B	B351		RAIL0062323001		BOLSTER

The same elements (e.g., B252) are listed in component location order (**B**-brake end, **C**-middle component, **D**-next component, and **A**-nonbrake end).

When finished viewing the record, select **Cancel**, or select another Umler application menu item (refer to [Exhibit 5](#)).

Create Blue Card PDF

For locomotives, the Display Unit Search Results page contains an additional link to create a Blue Card PDF.

Use the following procedure to display a Blue Card PDF:

1. From the main menu, select **Query > Display Unit**. The Display Unit page is displayed ([Exhibit 15](#)).
2. Enter the appropriate **Equipment ID** of a locomotive and select **Submit**. The Display Unit Search Results page for a locomotive is displayed ([Exhibit 19](#)).

Display Unit

3. Select the **Blue Card PDF** link. The Blue Card PDF downloads to your machine and is displayed as a PDF ([Exhibit 20](#)).

OMB No.2130-0004

* 15. Item Code: 1. Brakes 2. Running Gear 3. Cab Equip 4. Mech Equip 5. Elect Equip 6. Steam Gen 7. Safety Appl

TESTS	18. H&H Test Pressure NA	19. Waiver Part 229		20. Waiver - Other		
Type	Interval Not more than:	21. Person Conducting	22. Test Date & Place	23. Certified by	24. Previous Test Date & Place	
Event Recorder 229.25(d) or 229.27(c)	No. of days :	NA				
Annual Tests 229.27	368 days	NA				
Hand Brake 232.105(c)	368 days	NA				
Air Brakes: Level 1 229.29(c)(1)	368 days	NA				
Level 2 229.29(c)(2)	No. of days :	NA				
Level 3 229.29(c)(3)	No. of days :	NA				
Hammer and Hydro 229.31	736 days	DRILLED				

In accordance with the Locomotive Inspection Act, 49 USC Chapter 207 and the regulations issued pursuant to that Act, the parts and appurtenances of the locomotive unit have been inspected and all defects disclosed by the inspection have been properly repaired.

Certification of true copy: I certify that this is a true copy of the inspection and repair record of locomotive no. _____
Attention: A false entry on this form is punishable by fine or imprisonment (18 USC Sec1001)

Officer-in-charge _____ **Date** _____

AAR Substitute Form FRA F6180-49A (11/2012) Government property do not remove. **OMB Approval Expires 11/30/2015**

4. Where appropriate, use the options with the PDF Viewer to print the Blue Card.

Equipment Query

The Equipment Query allows you to search for equipment unit information. You can also save queries to be used again later. Choosing unique or precise criteria provides results in less time. If looking for a single equipment with limited information, consider the Single Equipment Search on the Umler Home page (refer to [Single Equipment Search](#)).

Use the following procedure to search for equipment:

1. From the main menu, select **Query > Equipment Query**. The Equipment Query page is displayed ([Exhibit 21](#) and [Exhibit 24](#)).

Exhibit 21. Equipment Query – Top

The third tab at the top of the page shows saved equipment queries. See [Viewing Saved Queries](#) and [Save Query](#).

2. Enter the appropriate search criteria. At least one search parameter is required to perform a search. ***Red** fields are mandatory.

Field Descriptions for the top of the page are shown in [Exhibit 22](#):

Exhibit 22. Equipment Query Field Descriptions

Field	Description
Equipment ID(s)	Enter the specific equipment ID and number (e.g., ABCD123) or search with a range (e.g., ABCD123-999) or a wildcard. See Exhibit 23 for more information.

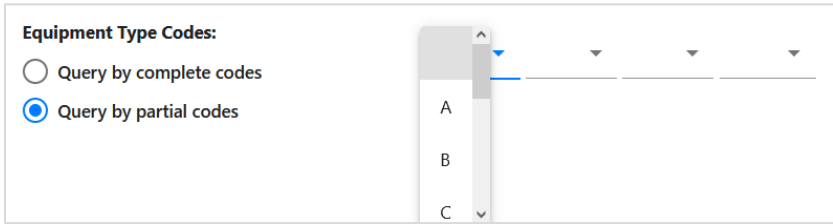
Field	Description
Pool ID	Type a valid seven-digit pool ID. Positions 1 through 3 are the pool operator's AAR Accounting Code (or Rule 260 Code), positions 4 through 7 are pool IDs assigned by the pool operator. Input the specific Pool IDs or search with a range or a wildcard. See Exhibit 23 for more information. Search for <u>all unassigned</u> equipment using pool ID = 0000000.
Equipment Group(s)	Used to indicate the general equipment group being sought. Valid values: - Box - Gondola - Hopper - Tank - Flat - Intermodal Flat - Vehicular Flat - Chassis - Container - Trailer - Steel Wheel Set - Locomotive - Passenger - Misc - EOT Device
Equipment Type Codes	To Query by <u>complete</u> codes, select the Query by complete codes radio button and enter the complete code (e.g., M500) in the single blank input field. To Query by <u>partial</u> codes, select the Query by partial codes radio button, and use the four drop-down fields displayed to select partial code values (one alpha and three numeric). 
Mechanical Designation(s)	Alphabetic AAR code assigned to the physical description of the unit. See the Umler Data Specifications Manual.
*Include Equipment Restricted in Interchange	This option allows you to choose to include or not include restricted equipment in an interchange. Restricted equipment units are those in a conflict status. Default is Yes.
EIN(s)	Equipment Identification Number. Uniquely identifies equipment in Umler. If equipment is restenciled (new Equipment Initial and Number) it retains its original EIN (unless equipment is rebuilt with new built date).
Company-Specific Equipment Group(s)	Company-Specified Equipment groups are private pools of equipment that are only available to the company specified. Refer to Company-Specific Equipment Groups.

Exhibit 23. Equipment ID Formats/Delimiters/Wildcards

Example		Expected Outcome
ABC 100, ABC 101, ABC 105		This range would include 3 IDs
ABC 100–109		This range would include 10 IDs
ABC 100–109, ABC 112, ABC 120–129		This range would include 21 IDs
ABC100,121,132		Equipment Initials is optional in a range
ABC100–110,121,132		Dash and commas can be combined without Equipment Initials in a range. This range has 13 IDs
ABC 200 ABC 204 ABC 208		New line is a acceptable delimiter in any of the formats above
ABC 300;ABC 304;ABC 306		Semi-colon is an acceptable delimiter in any of the formats above
ABC 300.ABC 304.ABC 306		Dot is an acceptable delimiter in any of the formats above
ABC 000000000*		Wild card character is *. This range will have 10 IDs
Valid Delimiters:	• Dot • Colon • Semi-colon • Comma • New line/Carriage Return • Single quote • Space (with solid IDs only)	

Exhibit 24. Equipment Query – Bottom

Equipment Initials	Umler Owner
Umler Company	Lessee
Stenciled Mark Owner	Equipment Status: ☐ Status ☐ No Status
Superstructure Identification	Prior Equipment IDs

Confidential Element Search

NOTE: Choosing to query by confidential element will limit results only to equipment the user has confidential rights for.

Element Name	Qualifier	Compare To Another Element	Element Values
Select An Element	Select An Element	☐	
Select An Element	Select An Element	☐	
Select An Element	Select An Element	☐	

Element Value Criteria

Element Name	Qualifier	Compare To Another Element	Element Values
Select An Element	Select An Element	☐	
Select An Element	Select An Element	☐	
Select An Element	Select An Element	☐	

In what format would you like your results?

Browser



Maximum Number of Results (Browser Output Only)
 1000



Q Search
Count
Save
Clear

Field Descriptions for the bottom of the page are shown in [Exhibit 25](#):

Exhibit 25. Equipment Query Field Descriptions (cont'd)

Field	Description
Equipment Initials	The initials stenciled on the specified equipment.

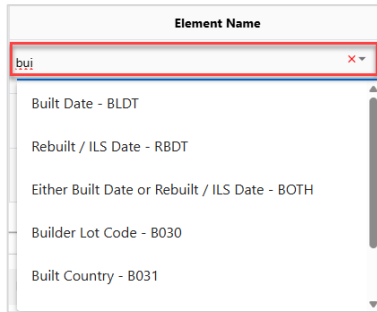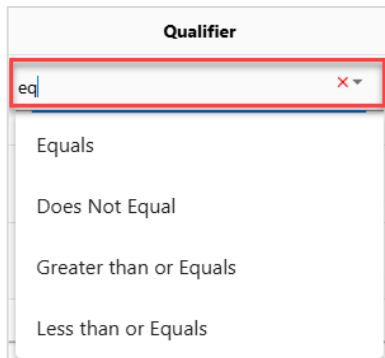Field	Description
Umler Owner	The Umler owner of the specified equipment.
Umler Company	The parent company that owns the specified equipment.
Lessee	The company leasing the specified equipment.
Stenciled Mark Owner	The stenciled mark owner for the specified equipment.
Status/No Status	To search by specified equipment statuses, select the Status radio button and then the appropriate status types listed (Active, Inactive or Pre-registered). Select the No Status radio button to search for equipment without a status. Otherwise, the default is all statuses.
Superstructure Identification	Search by entering one or more IDs of superstructure vehicular flats. Enter specific IDs (e.g., ABCD123) separated by valid delimiters.
Prior Equipment IDs	Search by entering one or more IDs of pre-registered cars. Enter the specific equipment ID and number (e.g., ABCD123) separated by valid delimiters, or search with a range (e.g., ABCD123-999).
Confidential Element Search (up to three allowed)	 The Element Name drop-down list allows you to restrict your equipment search for up to 3 specific elements. To filter the list, begin entering the name of an element, and the drop-down list narrows to match your search (the complete list is not shown).
	 From the Qualifier drop-down list, select the Boolean operator to be used in combination with the entered Element Values. Select Between to obtain results using two input values (e.g., weight range, date range). To filter the list, begin entering the name of a qualifier, and the drop-down list narrows to match your search (the complete list is not shown).
	Compare to another element —Select to compare to another element in Element Values .
	Element Values —This may be a height, length, width, weight, or other number, Yes/No, etc. If a date, a format hint is provided (YYYYMMDD)

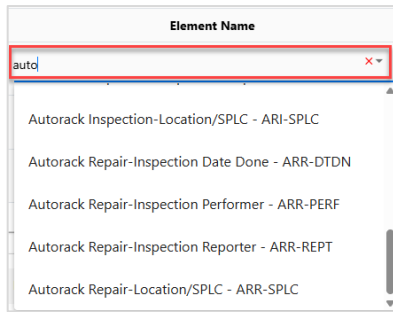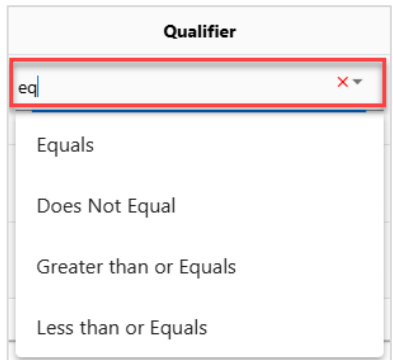Field	Description
Element Value Criteria (up to three allowed)	 The Element Name drop-down list allows you to restrict your equipment search for up to 3 specific elements. To filter the list, begin entering the name of an element, and the drop-down list narrows to match your search (the complete list is not shown).
	 From the Qualifier drop-down list, select the Boolean operator to be used in combination with the entered Element Values. Select Between to obtain results using two input values (e.g., weight range, date range). To filter the list, begin entering the name of a qualifier, and the drop-down list narrows to match your search (the complete list is not shown).
	Compare to another element— Select to compare to another element in Element Values.
	Element Values—This may be a height, length, width, weight, or other number, Yes/No, etc. If a date, a format hint is provided (YYYYMMDD)

Example – How to Use Element Value Criteria/Values to View Conflicts:

- Select **Date of Original Conflict** from the **Element Name** drop-down.
- Select **Greater than or Equals** from the **Qualifier** drop-down.
- Enter **20250101** in the **Element Values** field.

Select the **Browser** format to have the search results displayed in the browser (default). Otherwise, select **CSV** (comma separated values). If the search takes longer than one minute to return the results, a pop-up message displays to let you know it is running in the background. You will receive an email when your results are available to view in the **Reports (CSV Downloads)** tab or select the **Reports** button in the top right ([Exhibit 31](#)).

- (For browser only) Set the ***Maximum Number of Results** field to the maximum number of result records to be returned (100, 500, 1000). Default is 1000.
- (Optional) Select the **Customize Query Output** tab to specify which data attributes should be included in the results displayed, and how those results should be sorted. See [Exhibit 26](#).

Exhibit 26. Equipment Query – Customize Query Output Tab

- To filter the **Available Attributes** list, begin entering an attribute in the filter box, and the list narrows to match your search. To add one or more attributes to **Selected Attributes** list, select from the **Available Attributes** and select the right pointing arrow (outlined in red above). For multiple selections, press **Ctrl** while making selections to move multiple attributes at one time.
- To filter the **Selected Attributes** list, begin entering an attribute in the filter box, and the list narrows to match your search. To remove one or more attributes, select from the **Selected Attributes** list and select the left pointing arrow (outlined in red in between Available and Selected Attributes).
- Adjust the order of the output by choosing a **Selected Attribute** and selecting the up or down arrow (outlined in red to the right of Selected Attributes). The top attribute appears as the first (left) column in the results table.

(Optional) Use the **Sort By** fields to sort results for any attributes included in the results. The first Sort By is the primary sort. The other two **Sort By** fields are the secondary sort and the tertiary sort. The default sort is the first three attributes listed in ascending order. In [Exhibit 26](#), you might want the data sorted by Lessee as a primary sort (to get potential contacts clustered together in the output). **Lessee** would then be selected for the first Sort By attribute.

If needed, select the **Basic** tab to return to the main query input page.

6. Verify all criteria and output options have been specified, as shown in [Exhibit 27](#), [Exhibit 28](#), and [Exhibit 29](#).

Exhibit 27. Equipment Query Example – Top

The screenshot displays the 'Equipment Query Results' interface. At the top, there's a 'Search Criteria' tab and a 'Search Results' tab. Below these are buttons for 'Search', 'Count', 'Save', and 'Clear'. A 'Reports' button is also visible in the top right. The main section is titled 'Enter one or more fields to search equipment information.' and contains a list of search criteria: 'Equipment IDs', 'Pool IDs', 'Equipment Groups', 'Mechanical Designations', 'EINs', and 'Company-Specific Equipment Groups'. The 'Equipment Groups' section is expanded, showing a list of groups: 'Box', 'Gondola', 'Hopper', and 'Tank'. The 'Equipment Type Codes' section is also expanded, showing options for 'Query by complete codes' and 'Query by partial codes'. The 'Query by partial codes' option is selected. A callout box labeled 'Partial Equipment Type Code' points to the 'Query by partial codes' option. The 'Include equipment restricted in interchange' option is set to 'Yes'.

Equipment Query Results

Search Criteria Search Results

Search Count Save Clear

Basic Customize Query Output Saved Queries Reports (CSV Downloads)

Enter one or more fields to search equipment information.

Results will include equipment matching ALL of the following criteria.

Equipment IDs

Pool IDs

Equipment Groups:

- Box
- Gondola
- Hopper
- Tank

Mechanical Designations

EINs

Company-Specific Equipment Groups

Equipment Type Codes:

☐ Query by complete codes

☒ Query by partial codes

D 1 5

Include equipment restricted in interchange

Yes

Partial Equipment Type Code

Exhibit 28. Equipment Query Example – Bottom

Equipment Initials
RAIL

Umler Owner

Umler Company

Lessee

Stenciled Mark Owner

Equipment Status:
☐ Status
☐ No Status

Superstructure Identification

Prior Equipment IDs

Confidential Element Search

NOTE: Choosing to query by confidential element will limit results only to equipment the user has confidential rights for.

Element Name	Qualifier	Compare To Another Element	Element Values
Select An Element	Select An Element	☐	
Select An Element	Select An Element		
Select An Element	Select An Element		

Locomotive Air Brake Due Date with the **Between** qualifier and date range

Element Value Criteria

Element Name	Qualifier	Compare To Another Element	Element Values
Locomotive Air Brake L3 Insp...	Between	☐	20230101 and 20231231
Select An Element	Select An Element	☐	
Select An Element	Select An Element	☐	

In what format would you like your results?

Browser

Maximum Number of Results (Browser Output Only)
1000

Search

Count

Save

Clear


Exhibit 29. Equipment Query Example – Customize Query Output

7. Select one of the processing options shown in [Exhibit 30](#).

Exhibit 30. Query Processing Options

Search Executes the search and outputs to the **Browser** or to **CSV** as requested. See [View Query Results](#) and [Export Query Results to CSV](#).

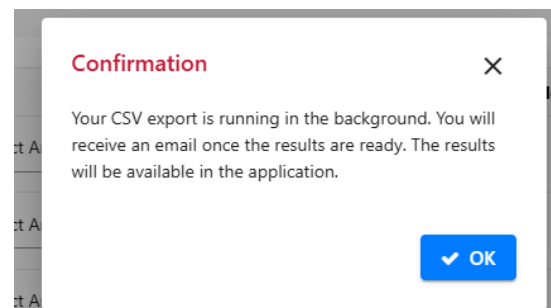If the search takes longer than one minute to return the results, a pop-up message displays to let you know it is running in the background. You will receive an email when your results are available to view in the **Reports (CSV Downloads)** tab or select the **Reports** button in the top right ([Exhibit 31](#)).



Count Executes the search and outputs a single line message with the count of records meeting the specified criteria. See [Exhibit 35](#).

Save Saves the query. Opens the Save Query Attributes panel ([Exhibit 37](#)).

8. The **Reports (CSV Download)** tab (or **Reports** button in the top right) will contain the results of any queries run in the background for up to five (5) days.

Exhibit 31. Equipment Query Reports (CSV Downloads) Tab

Equipment Query

Reports

Search

Count

Save

Clear

Basic

Customize Query Output

Saved Queries

Reports (CSV Downloads)

File Name	Created Date (EST)	File Size (KB)	Download Link
-CSV-20251031-102453.csv	10/31/2025, 10:24:54 AM	3676	Download

Reports will be removed after five (5) days.

Search

Count

Save

Clear

View Query Results

If Browser was selected for output, and **Search** selected, the Equipment Query Results page is displayed ([Exhibit 32](#)).

Exhibit 32. Equipment Query Results

The screenshot shows the 'Equipment Query Results' page. At the top, there are tabs for 'Search Criteria' and 'Search Results'. Below the tabs, a message states: 'Select one or more equipment IDs, and an action, for pool management/equipment management. You may also click an equipment ID to display it. 8 matches found. 8 available for display. 8 matches displayed on this page.' A table of equipment records is displayed with columns: Equipment Id, Status Code, Equipment ..., Mechanical ..., Equipment ..., Stenciled M..., and Owner. Two records are selected: ASRY 3505 and CN 6022. To the right of the table, an action drop-down menu is open, showing options: 'AFMC Inspection', 'Add to pool', 'Air Brake Test', 'Autorack Certification', 'Autorack Inspection', and 'Autorack Repair'. A callout box points to this menu with the text: 'Action drop-down list for selected records (partial list shown)'. At the bottom right of the menu, there are buttons for 'Apply' and 'Clear Filters'. A 'Reports' button is also visible in the top right corner.

Equipment Id	Status Code	Equipment ...	Mechanical ...	Equipment ...	Stenciled M...	Owner
ASRY 3215	A	LOCO	D	D125	ASRY	ASRY
☒ ASRY 3505	A	LOCO	D	D125	ASRY	ASRY
☐ BOTX 1811	A	LOCO	D	D125	BOTX	BOTX
☐ CFE 3486	A	LOCO	D	D125	CFE	CFE
☐ CN 5298	A	LOCO	D	D325	CN	CN
☐ CN 6005	A	LOCO	D	D325	CN	CN
☒ CN 6022	A	LOCO	D	D325	CN	CN
☐ CN 9525	A	LOCO	D	D315	CN	CN

View Details

To view details for a particular equipment, select its Equipment ID Link. The Display Unit Search Results page is displayed (refer to [Exhibit 16](#)). Select **Cancel** on the detail page to return to the query results.

Revising a Search

While viewing search results online, select the **Search Criteria** tab to modify search criteria values and then resubmit.

Requesting Other Actions

Other actions can be taken for selected equipment by selecting an action from the drop-down list (partial list show in [Exhibit 32](#)) and selecting **Apply**. The various actions are described in other sections of this guide.

- Add to Pool (refer to [Exhibit 132](#))
- Air Brake Test (refer to [Exhibit 135](#))
- Autorack Certification (refer to [Exhibit 135](#))
- Autorack Inspection (refer to [Exhibit 135](#))
- Autorack Repair (refer to [Exhibit 135](#))
- Car Grade Inspection (refer to [Exhibit 135](#))
- Change Equipment Group (refer to [Exhibit 104](#))
- [Clone Equipment](#)
- [Delete Equipment](#)
- Door Lube Inspection (refer to [Exhibit 135](#))
- Locomotive Air Brake Inspection (refer to [Exhibit 135](#))
- Locomotive Annual Inspection (refer to [Exhibit 135](#))
- Locomotive Cab Signals Inspection (refer to [Exhibit 135](#))


- Locomotive Inspection Due Date Update (refer to [Exhibit 135](#))
- Locomotive Quarterly Inspection (refer to [Exhibit 135](#))
- Locomotive RCL Inspection (refer to [Exhibit 135](#))
- Locomotive Storage Event (refer to [Exhibit 135](#))
- [Modify Equipment](#) (refer to [Exhibit 93](#))
- ReflectORIZATION Event (refer to [Exhibit 135](#))
- Remove from Pool (refer to [Exhibit 133](#))
- [Remove Lessee](#) (refer to [Exhibit 122](#))
- Send to Conflict Check (for Railinc Administrators only)
- Update Equipment Maintenance Party (refer to [Exhibit 109](#))
- Update Equipment Management Codes (refer to [Exhibit 124](#))
- Vehicular Flat Car Certification (refer to [Exhibit 135](#))

Export Query Results to CSV

Downloading the File

If you choose CSV file for output, the browser will automatically download and save the file to the file of your choice or the Downloads folder on your computer ([Exhibit 33](#)).

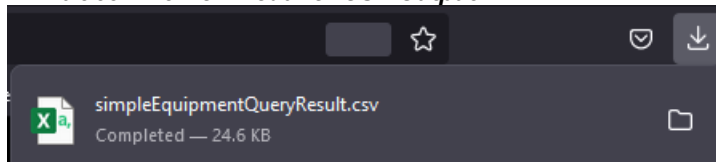Exhibit 33. File Download for CSV Output



- When the file is opened, the output appears as shown in [Exhibit 34](#).

Exhibit 34. CSV Query Output in MS Excel

simpleEquipmentQueryResult							
File Home Insert Draw Page Layout Formulas Data Review View Automate Help ACROBAT							
H29							
	A	B	C	D	E	F	G
1	Equipment Id	Pool Number	Equipment Group	Equipment Type	Mechanical Designation	Stenciled Mark Owner	Lessee
2	ACWR0000001386	0	LOCO	D115	D	ACWR	
3	ASRY0000003215	0	LOCO	D125	D	ASRY	
4	ASRY0000003505	0	LOCO	D125	D	ASRY	
5	BOTX0000001811	0	LOCO	D125	D	BOTX	
6	CFE 0000003486	0	LOCO	D125	D	CFE	
7	CN 0000005298	0	LOCO	D125	D	CN	
8	CN 0000006005	0	LOCO	D125	D	CN	
9	CN 0000006022	0	LOCO	D125	D	CN	
10	CN 0000009525	0	LOCO	D115	D	CN	
11	DQE 0000000029	0	LOCO	D115	D	DQE	
12	GC 0000000537	0	LOCO	D115	D	GC	
13	GC 0000000546	0	LOCO	D115	D	GC	
14	GFCY0000000558	0	LOCO	D115	D	GFCY	

Request Counts for Query

When **Count** is selected, the query is executed, but only the number of records matching the criteria is displayed ([Exhibit 35](#)). No details are provided. This can be used to provide counts to purchasing departments for parts ordering, scheduling inspections, or estimating vendor service needs, etc.

Exhibit 35. Equipment Query With Count

The screenshot shows the 'Equipment Query' interface. A red box highlights the text: 'The number of equipment units matching the search criteria: 17'. Below this, there are tabs for 'Basic', 'Customize Query Output', and 'Saved Queries'. The 'Basic' tab is selected, and it contains the instruction: 'Enter one or more fields to search equipment information.'

If additional details are needed, select **Search** to execute a normal query.

Viewing Saved Queries

When the Saved Queries tab is selected, the Saved Queries page is displayed ([Exhibit 36](#)).

Exhibit 36. Saved Queries Tab

The screenshot shows the 'Equipment Query' interface with the 'Saved Queries' tab selected. At the top, there are buttons for 'Search', 'Count', 'Save', and 'Clear'. Below the tabs, there are radio buttons for 'My Saved Queries' and 'All Saved Queries', with 'All Saved Queries' selected. A 'Clear Filters' button is also present. The main area displays a table of saved queries with 328 queries. The table has columns for 'Query Name', 'Query Description', 'Created By', and 'Action'. The 'Action' column contains 'Delete' buttons for each query.

Query Name	Query Description	Created By	Action
Over 50	Query for Tank Cars with over 50 elements		Delete
Over 50 CSV	Over 50 elements with CSV output		Delete
Over50_TANK_GatbQuery	Export CSV		Delete
Over50_TANK_GatbQuery, < ...	Export CSV		Delete
PCWS Testing			Delete
PRIVACTIVENONOT57			Delete
PTC Equipd and Status			Delete
PTC Equip/OP			Delete
PTC Operating Status			Delete
PTC Summary	PTC Operating Status with Conflict Status		Delete
Pool Control W	09/18/2024		Delete
Pool Control W	Pool Control W without a TC/TCC		Delete
Postgres volume test			Delete
Postgres volume test 1			Delete
Prior ID's	Ticket #178249		Delete

Select the **Name** link to use values saved in that query. Selecting table heading links sorts by that field. Select the **Delete** button in the **Action** column to delete a saved query. By default, users see their own queries but can select the **All Saved Queries** radio button to view all for their company.

Save Query

Queries that might be used again can be saved by selecting **Save** at the bottom of the Equipment Query ([Exhibit 28](#)). Saving queries helps save input time and ensures consistent results (e.g., doing the same query across several roads). When Save is selected, the Save Query Attributes page is displayed ([Exhibit 37](#)).

Exhibit 37. Save Query Attributes



Save Query Attributes

Query Name *
2022 LOCO Air Brake

Query Description
LOCO Air Brake due date in 12-month range

✕ Cancel Save

Enter the name of your query in the **Query Name** field. Optionally, enter a description in the **Query Description** field that will help you find it later. Select **Save**. The query is saved, and the “Query saved successfully” message is displayed at the top of the page.

Reuse a Query

To reuse a saved query, select the **Saved Queries** tab. Select the **Name** link. The page (all tabs, if used) is populated with the saved query. Make required changed (e.g., date changes, or railroad changes, etc., and select a processing option ([Exhibit 30](#)).

Delete a Query

To delete a saved query, select the **Saved Queries** tab, and select the **Delete** button to the right of the query in the **Action** column.

Car Management Query

The Car Management Query function is used to search for specific pools and equipment in order to view pool header and assignment data and perform edits.

Equipment View

Use the following procedure to run a Car Management Query:

1. From the main menu, select **Query > Car Management Query**. The Pool/Equipment Search page is displayed ([Exhibit 38](#)).

Exhibit 38. Pool/Equipment Search

Pool/Equipment Search

Search Criteria

Enter one or more fields to search pool/equipment information. Select pool view for pool management and equipment view for equipment management.

NOTE : To get all pools in the system, leave all the search parameters blank before clicking Search or Count.

Q Search

Count

Reset

Clear

View

Equipment View

Company-Specific Equipment Group(s)

Pool ID(s)

Description

Reporter

Operator

Loading Location

State/Province

Pool Type Code

Extended Description

EIN(s)

Equipment ID(s)

Equipment Group(s):

Box

Gondola

Hopper

Tank

Equipment Type Code(s)

Mechanical Designation(s)

In what format would you like your results?

Browser

Maximum Number of Results (Browser Output Only)

1000

Q Search

Count

Reset

Clear

2. From the **View** drop-down list, choose **Equipment View** for equipment management. Otherwise, leave set to **Pool View** for pool management (for Pool View, see [Pool View](#)).

3. Enter the appropriate search criteria. At least one search parameter is required to perform a search.



Using both Equipment IDs and Pool IDs is not allowed. Specify one or the other.

Field Descriptions for the page are shown in [Exhibit 39](#):

Exhibit 39. Car Management Query Field Descriptions

Field	Description
Company-Specific Equipment Group(s)	Company-Specified Equipment groups are private pools of equipment that are only available to the company specified. Use the search icon (🔍) to open the Company-Specific Equipment Group Lookup pop-up (Exhibit 151). Refer to Company-Specific Equipment Groups .
Pool ID	Enter a valid seven-digit pool ID. Positions 1 through 3 are the pool operator's AAR Accounting Code (or Rule 260 Code), and positions 4 through 7 are pool IDs assigned by the pool operator. Input the specific Pool IDs or search with a range or use a wildcard. See Exhibit 23 for more information. Search for <u>all unassigned</u> equipment using pool ID = 0000000.
Description	General description of the pool (20 characters max).
Reporter	Assigned alphabetic reporting mark of the carrier reporting for non-mechanized operators that have made such an agreement with the reporting road (4 characters max).
Operator	Assigned alphabetic reporting mark of the actual operator of a specific pool (4 characters max).
Loading Location	The actual shipper loading point or plant location or railroad holding point. Must be a valid SPLC location (19 characters max). Use the search icon (🔍) to open the Station Lookup page (Exhibit 40).
State/Province	Indicates the state or province where the pool is located. This is automatically populated with Pool/Equipment Search Results.
Pool Type Code	Used to identify a type of railroad pool assignment: C = Equipment assigned to a specific shipper at a specific location G = Contaminated cars J = Equipment assigned to an agent N = Similar to the C Pool, except, the equipment is not assigned to a specific shipper or loading point (National Pools). O = Equipment assigned to Recall pools P = Pool comprised of equipment assigned to accommodate a specific commodity. T = Pool comprised of equipment assigned to an agent.
Extended Description	More detailed description of the pool (80 characters max).

Field	Description
EIN(s)	Equipment Identification Number. Uniquely identifies equipment in Umler. If equipment is restenciled (new Equipment Initial and Number) it retains its original EIN (unless equipment is rebuilt with new built date).
Equipment ID(s)	Enter the specific equipment IDs (e.g., ABCD123) or search with a range (e.g., ABCD123-999 or a wildcard). See Exhibit 23 for more information.
Equipment Group(s)	Used to indicate the general equipment group being sought. See Equipment Group(s) in Exhibit 22 .
Equipment Type Code(s)	Alphanumeric code (one alpha and three numeric) used to designate a specific type of equipment and attributes.
Mechanical Designation	Alphabetic AAR code assigned to the physical description of the unit. See the Umler Data Specifications Manual .

Station Lookup

When the search icon is selected for either **Location** field, the Station Lookup page is displayed ([Exhibit 40](#)).

Exhibit 40. Station Lookup

Station Look Up

Location *

Begins With

State/Province

-Select One State/Province-

SCAC

✕ Cancel

🔍 Search

- Select a qualifier for the Location. Valid values include:
 - Begins With
 - Contains
 - Ends With
 - Exact Match
- (Optional) Select one **State/Province** from the drop-down list.
- (Optional) Enter a known SCAC in the **SCAC** field.
- Select **Search**. The Station Lookup page is displayed ([Exhibit 41](#)).

Exhibit 41. Station Lookup Results

Station Look Up
✕

Number of Station(s): 470
✕ Clear Filters

	SPLC	SCAC	FSAC	Location	State/...	Locatl...	Effective Date	Expiration Date
☐	567500000	ALS	00005	ST LOUIS	MO	O	Mon Aug 25 00:00:00 EDT 1997	Fri Dec 31 00:00:00 EST 9999
☒	567500000	ALS	00005	ST LOUIS	MO	R	Mon Aug 25 00:00:00 EDT 1997	Fri Dec 31 00:00:00 EST 9999
☐	566900000	AMTK	03035	KANSAS CITY	MO	R	Tue Jul 01 00:00:00 EDT 1997	Fri Dec 31 00:00:00 EST 9999
☐	567500000	AMTK	21040	ST LOUIS	MO	O	Thu Aug 28 00:00:00 EDT 1997	Fri Dec 31 00:00:00 EST 9999
☐	567500000	AMTK	21040	ST LOUIS	MO	R	Thu Aug 28 00:00:00 EDT 1997	Fri Dec 31 00:00:00 EST 9999
☐	578140000	AMTK	21045	POPLAR BLUFF	MO	R	Tue Jul 01 00:00:00 EDT	Fri Dec 31 00:00:00 EST

✕ Cancel
✓ Select

- e. Select the radio button beside the correct location and the **Select** button. The Pool/Equipment Search page is redisplayed ([Exhibit 38](#)) with the location and State/Province field showing the selection.
4. Select the **CSV** format from the drop-down list if needed, or leave it set to **Browser** (default).
5. Select a ***Maximum Number of Results** (1000 is default).
6. Select one of the following processing options:

Exhibit 42. Car Management Query Processing Options

Search	Executes the search and outputs to the Browser or to CSV as requested. See Browser Output or CSV Output .
Count	Executes the search and outputs a single line message with the count of records meeting the specified criteria (similar to Exhibit 35).
Reset	Clears data and returns fields to the default setting.

7. View either Browser or CSV output results ([Exhibit 43](#) or [Exhibit 44](#)).

Browser Output

If **Browser** was selected for output, results appear as shown in [Exhibit 43](#).

Exhibit 43. Pool/Equipment Search Results – Equipment View

Pool/Equipment Search Results

Search Criteria

Search Results

Select one or more equipment ID(s) and an action for pool management/equipment management.

1604 matches found. 1000 available for display. 1000 matches displayed on this page.

AFMC Inspection

▼

✓ Apply

✕ Clear Filters

	Equipment Management Codes															
☐	Equipment ID	Pool ID	EIN	EG	ETC	MD	UR	SG	PC	MR	M...	TC	TCC	Car G...	Lessee	Maintenance ...
☐	AOK 27819	9760001	0008924...	FLAT	F483	FBC		E	C			E	C			AOK
☐	AOK 28358	9760001	0009059...	FLAT	F483	FBC		E	C			E	C			AOK
☐	AOK 28410	9760001	0009059...	FLAT	F483	FBC			C			C				AOK
☐	AOK 28417	9760001	0009059...	FLAT	F483	FBC		E	C			E	C			AOK
☐	AOK 28427	9760001	0009059...	FLAT	F483	FBC		E	C			E	C			AOK
☐	AOK 28443	9760001	0009059...	FLAT	F483	FBC		E	C			E	C			AOK
☐	AOK 28449	9760001	0009059...	FLAT	F483	FBC		E	C			E	C			AOK
☐	AOK 501502	5558219	0006732...	VFLT	V795	FA			C			C			NS	AOK
☐	AOK 501503	5558219	0007577...	VFLT	V795	FA			C			C			NS	AOK
☐	AOK 501506	5558219	0007577...	VFLT	V795	FA			C			C			NS	AOK

Abbreviations used for the column headings at the top of the results table include:

- **EG** = Equipment Group
- **ETC** = Equipment Type Code
- **MD** = Mechanical Designation
- **UR** = User Empty Routing Instruction
- **SG** = System Empty Routing Instruction
- **PC** = Pool Control
- **MR** = Mechanical Restriction
- **MRR** = Mechanical Restriction Reason
- **TC** = Umler Transportation Code
- **TCC** = Umler Transportation Condition Code

To view details for a particular equipment, select its **Equipment ID** link. The Display Unit Search Results page is displayed (refer to [Exhibit 16](#)). Select **Cancel** on the detail page to return to the query results.

To take actions for listed equipment, refer to [Requesting Other Actions](#).

CSV Output

If CSV was selected for output, results are saved to the Downloads folder of your computer and when opened, appears as shown in [Exhibit 44](#).

Exhibit 44. Pool/Equipment Search Results – CSV Results

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R
	EQUIPMENT ID	POOL ID	EIN	EQUIPMENT GROUP	EQUIPMENT TYPE	C MECHAN	USER EMP	SYSTEM EMP	POOL CO	MECHAN	MECHAN	UMLER TR	UMLER TR	CAR GRAD	LESSEE	MAINTENANCE PARTY	MARK	
1	AOK 0000027819	9760001	8924944	FLAT	F483	FBC		E	C			E	C			AOK		
2	AOK 0000028358	9760001	9059202	FLAT	F483	FBC		E	C			E	C			AOK		
3	AOK 0000028410	9760001	9059254	FLAT	F483	FBC			C			C				AOK		
4	AOK 0000028417	9760001	9059261	FLAT	F483	FBC		E	C			E	C			AOK		
5	AOK 0000028427	9760001	9059271	FLAT	F483	FBC		E	C			E	C			AOK		
6	AOK 0000028443	9760001	9059287	FLAT	F483	FBC		E	C			E	C			AOK		
7	AOK 0000028449	9760001	9059293	FLAT	F483	FBC		E	C			E	C			AOK		
8	AOK 0000051502	5558219	6732629	VFLT	V795	FA			C			C			NS	AOK		
9	AOK 0000051503	5558219	7577721	VFLT	V795	FA			C			C			NS	AOK		
10	AOK 0000051506	5558219	7577724	VFLT	V795	FA			C			C			NS	AOK		
11	AOK 0000051507	5558219	7577725	VFLT	V795	FA			C			C			NS	AOK		
12	AOK 0000051508	5558219	7577726	VFLT	V795	FA			C			C			NS	AOK		
13	AOK 0000051509	5558219	7577727	VFLT	V795	FA			C			C			NS	AOK		
14	AOK 0000051510	5558219	7888160	VFLT	V795	FA			C			C			NS	AOK		
15	AOK 0000051512	5558219	7888162	VFLT	V795	FA			C			C			NS	AOK		
16	AOK 0000051515	5558219	7888165	VFLT	V795	FA			C			C			NS	AOK		
17	AOK 0000051516	5558219	7888166	VFLT	V795	FA			C			C			NS	AOK		
18	AOK 0000051517	5558219	7888167	VFLT	V795	FA			C			C			NS	AOK		

Pool View

If you elect to search for a pool view, use query criteria as described in [Equipment View](#), but leave the **View** drop-down list set to **Pool View**. Results can be to the browser or CSV (or a count).



To view all pool headers, select **Search** without entering any criteria. When entering pool ranges, do not use a range larger than 10,000.

Browser Output

If **Browser** was selected for output, results appear as shown in [Exhibit 45](#).

Exhibit 45. Pool/Equipment Search Results – Pool View

	Pool ID	Type	Operator	Description	Loading Location	State/Province
☒	1056001	P	CPRS	CMSFLOW	KANSAS CITY	MO
☒	1999061	J	CBRM	AGENT CBRM	CHILLICOTHE	MO
☐	3860001	C	CMR	HEAVY DUTY FM 225000	LACKLAND	MO
☐	3860002	C	CMR	HEAVY DUTY FD 370000	LACKLAND	MO
☐	3860003	C	CMR	HEAVY DUTY FD 110000	LACKLAND	MO
☐	3860004	C	CMR	HEAVY DUTY FD 170000	LACKLAND	MO
☐	3860005	C	CMR	HEAVY DUTY FM 235000	LACKLAND	MO
☐	4004004	C	KCS	BATLINER PAPER STOCK	KANSAS CITY	MO

Currently, the only action available from this page is **Delete Pool**. To delete a pool header, check the boxes beside the pools to be deleted and select the **Apply** button. See [Delete Pool Header](#) for more information.

To view a pool header, select its link. The View Pool Header page is displayed ([Exhibit 46](#)).

Exhibit 46. View Pool Header

View Pool Header

Show Equipment
Edit
Done

Pool ID: 1056001
Operator 1: CPRS

Description: CMSFLOW
Operator 2:

Extended Description:
Operator 3:

Reporter:
Operator 4:

Loading Location: KANSAS CITY
State/Province: MO

Pool Type: P

Show Equipment
Edit
Done

Select one of the following options:

Exhibit 47. View Pool Header Processing Options

Show Equipment	Opens the Assigned Equipment page for viewing (Exhibit 48). No actions are available on this page. Select Done to return to the View Pool Header page. To remove individual equipment from a specific pool, use either an Equipment Query or a Car Management Query (Equipment View) with the Pool ID as criteria.
Edit	Opens the Update Pool Header page (Exhibit 49). See Update Pool Header .
Done	Returns to the search results page (Exhibit 45).

Exhibit 48. Assigned Equipment

Assigned Equipment

Pool ID: 1056001
Total found 239, displayed 239

Equipment ID	EG	ETC	MD	UR	SG	PC	MR	MRR	TC
TTQX 707911	1056001	0010595901	TTX						
TTQX 707912	1056001	0010595900	TTX						
TTQX 707913	1056001	0010595899	TTX						
TTQX 707914	1056001	0010595898	TTX						
TTQX 707915	1056001	0010595897	TTX						
TTQX 707916	1056001	0010595896	TTX						
TTQX 707917	1056001	0010595895	TTX						
TTQX 707918	1056001	0010595894	TTX						

Done

Update Pool Header

After a pool view query is performed, a pool ID link selected, and a pool header is being viewed:

1. Select **Edit**. The Update Pool Header page is displayed ([Exhibit 49](#)).

Exhibit 49. Update Pool Header

Update Pool Header

☒ Validate ☐ Submit ☐ Suspend ☐ Reset ☐ Clear ☐ Cancel

Pool ID
1056001

Description *
CMSFLOW

Extended Description

Reporter

Loading Location *
KANSAS CITY

Operator 1 *
CPRS

Operator 2

Operator 3

Operator 4

State/Province *
MO - Missouri

Pool Type Code *
P - P

☒ Now ☐ Future

☒ Validate ☐ Submit ☐ Suspend ☐ Reset ☐ Clear ☐ Cancel

2. Update fields as needed. Refer to [Exhibit 120](#) for field descriptions.
3. (Optional) Choose the **Future** radio button to delay the pool addition to a future date. The page expands with an On Future Date field.

Exhibit 50. Future Date Fields

☐ Now
 ☒ Future

On Future Date *

 Transaction Description



Pool-related actions assigned a future date can be modified. See [Manage Future Transactions](#). Future date must be from 2 days (48 hours) to a maximum of 30 days.

- a. Use the calendar picker () to select the future date.
 - b. (Optional) Add a Transaction Description to make the future work easier to identify when using the **Maintenance > Manage Future Transactions** function.
4. Select one of the options shown in [Exhibit 51](#).

Exhibit 51. Update Pool Header Processing Options

Validate	Validates data before submission to facilitate error correction.
Submit	Send the data to the system. Validation occurs first, so error correction can be done. If successful a message similar to Exhibit 143 is displayed. After successful submission of changes, select OK to return to the query list.
Suspend	Saves the edit input for completion later. Opens the Suspend Work page (similar to Exhibit 84). See Suspended Work to resume the Pool Header Edit task.

Transaction Log

The Transaction Log function allows users to see a list of transactions for specified criteria (e.g., date range, user ID, Equipment IDs, Pool IDs, transaction types, etc.).

Use the following procedure to view a transaction log:

1. From the main menu, select **Query > Transaction Log**. The Search Transaction Log page is displayed ([Exhibit 52](#) and [Exhibit 54](#)).

Exhibit 52. Search Transaction Log – Top

Transaction Log Search Results [Reports](#)

Search Criteria Reports (CSV Downloads)

Enter the starting and ending date/time to display transactions that fall between the date range.

[Search](#) [Count](#) [Clear](#)

In what format would you like your results?

Browser(Summary) Maximum Number of Results (Browser Output Only) * 1000

Results will include transactions matching ALL of the following criteria

* At least one input is required:

☒ Search All Dates *This selection will yield fastest results* [?](#)

☐ Search Specific Dates

Equipment ID(s) Company-Specific Equipment Group(s)

Transaction Type(s):

- AFMC Inspection
- AFMC Inspection Nullification
- AFMC Inspection Removal
- Add Company Specific Equipment Group
- Add Equipment to Company Specific Equipment Group

User ID(s)

State(s):

- Normal
- Nullified

Equipment Type Code(s)

Equipment Group(s):

- Box
- Gondola
- Hopper


Pool ID(s)

Medical Description(s)

2. Enter the appropriate search criteria. At least one search parameter is required to perform a search. Mandatory fields are indicated with an asterisk (*) and **red font**.

Field descriptions for the top of the page are shown in [Exhibit 53](#).

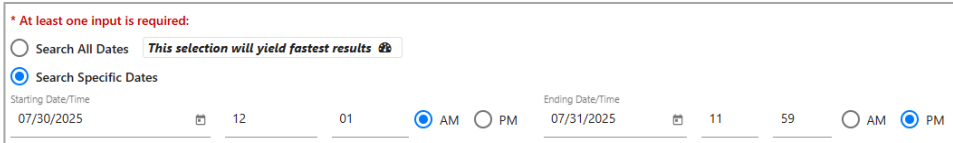Exhibit 53. Transaction Log Field Descriptions

Field	Description
Format	Select Browser (Summary), Browser (Details), or Export CSV from the drop-down list. Select the Export CSV format from the drop-down list to save/display results in a CSV file. The default selection is Browser (Summary). If the search takes longer than one minute to return the results, a pop-up message displays to let you know it is running in the background. You will receive an email when your results are available to view in the Reports (CSV Downloads) tab (Exhibit 57).
*Maximum Number of Results (Browser Output Only):	Maximum number of result records you want returned (100, 500, 1000). Default is 1000.
*Search All Dates / Search Specific Dates	The default of searching all dates is recommended and yields the fastest results. Select Search Specific Dates to search for transactions occurring between the specified starting date/time and the specified ending date/time.  Remember to select either AM or PM with the available radio buttons. Defaults are: • Starting Date/Time: 12:01 AM of the previous day's date • Ending Date/Time: 11:59 PM of the current day's date Select Search All Dates to ignore date criteria. All notice times are recorded in Eastern Time.
*Equipment ID(s)	Enter the specific equipment IDs (e.g., ABCD123) or search with a range (e.g., ABCD123-999) or a wildcard. See Exhibit 23 for more information.
*Company-Specific Equipment Groups	Company-Specified Equipment groups are private pools of equipment that are only available to the company specified. Use the search icon (🔍) to open the Search for Company-Specific Equipment Groups page (Exhibit 151). Refer to Company-Specific Equipment Groups .
Transaction Type(s)	Search for transactions related to the following: Pool Header, Pool Assignment, Equipment Characteristics, Inspections and Car Grades.
User ID(s)	Search for transactions created by specific users by entering User IDs in this field. Separate multiple IDs using the delimiters shown in Exhibit 23 . To search for intra-company user IDs, see Manage Intra-Company User Access Rights .
State(s)	Select either Normal or Nullified . Nullifying an event identifies it as having been submitted in error. Selecting Nullified finds transactions that had been nullified.
Equipment Type Code(s)	Search for transactions related to equipment with the specified equipment type code(s). For example, M500.

Field	Description
Equipment Group(s)	Used to indicate the general equipment group being sought. See Equipment Group(s) in Exhibit 22 .

Exhibit 54. Search Transaction Log – Bottom

Pool ID(s)

Mechanical Designation(s)

Company ID(s)

EIN(s)

Element Value Criteria:

Element Groups

▼

Element

▼

Transaction Value

☐ All Values

Element Groups

▼

Element

▼

Previous Value

☐ All Values

Results will include transactions matching ANY of the following Ownership/Control criteria#

☐ Show me all transactions on the equipment currently meeting the specified ownership/control criteria.
 ☒ Show me all transactions on the equipment that met the specified ownership/control criteria at the time of the transaction.

Equipment Initial(s)

Umler Owner(s)

Umler Company

Lessee

Stenciled Mark Owner

Search



Count

Clear

Field descriptions for the bottom of the page are shown in [Exhibit 55](#).

Exhibit 55. Transaction Log Field Descriptions (cont'd)

Field	Description
Pool ID	Type a valid seven-digit pool ID. Positions 1 through 3 are the pool operator's AAR Accounting Code (or Rule 260 Code), positions 4 through 7 are pool IDs assigned by the pool operator. Input the specific Pool IDs or search with a range or a wildcard. See Exhibit 23 for more information. Search for <u>all unassigned</u> equipment using pool ID = 0000000.
Mechanical Designation(s)	Alphabetic AAR code assigned to the physical description of the unit. See the Umler Data Specifications Manual .
Company ID(s)	Search for transactions related to specified company ID(s).

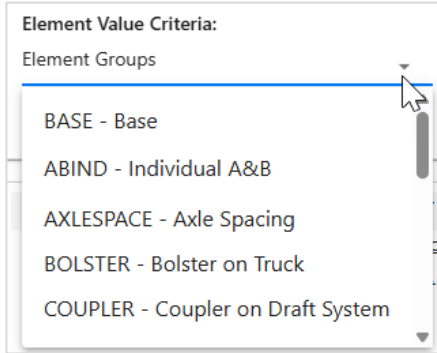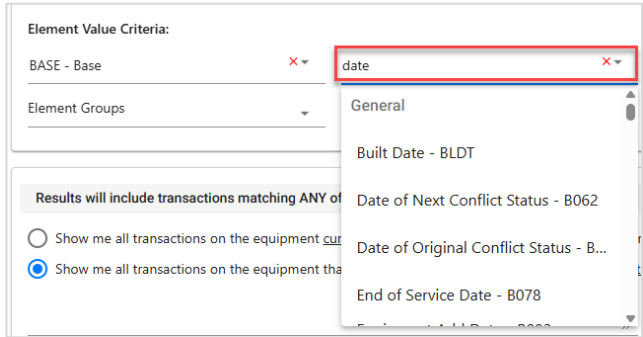
Field	Description
EIN(s)	Equipment Identification Number. Uniquely identifies equipment in Umler. If equipment is restenciled (new Equipment Initial and Number) it retains its original EIN.
Element Value Criteria	Two sets are provided (for Transaction and Previous values). - First, use the drop-down list to select an Element Group (partial list shown):  - Once you have selected an Element Group, select the Element. To filter the list, begin entering the name of an element, and the drop-down list narrows to match your search (partial list shown).  - Enter a Transaction Value of a specific element qualifier or check the All Values checkbox without using a qualifier.
Ownership Control Criteria	Check one of the two radio buttons provided to for your results to match either: - Current ownership conditions – or – - Ownership conditions at time of transaction (default)
Equipment Initials	The initials stenciled on the specified equipment.
Umler® Owner(s)	The Umler owners of the specified equipment.
Umler Company	The Umler Company that owns the specified equipment.
Lessee(s)	The company leasing the specified equipment.
Stenciled Mark Owner(s)	The stenciled mark owners for the specified equipment.

3. Select one of the following processing options:

Exhibit 56. View Transaction Log Processing Options

Search Executes the search and outputs to the **Browser** or to **CSV** as requested. See [View Transaction Results Online](#) or refer to [Export Query Results to CSV](#) for CSV file processing/viewing.

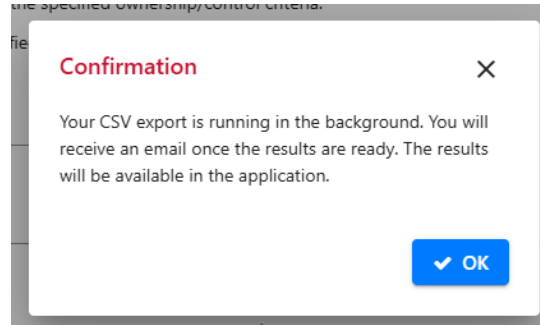If the search takes longer than one minute to return the results, a pop-up message displays to let you know it is running in the background. You will receive an email when your results are available to view in the **Reports (CSV Downloads)** tab or select the **Reports** button in the top right ([Exhibit 57](#)).



Count Executes the search and outputs a single line message with the count of transaction records meeting the specified criteria (similar to [Exhibit 35](#)).

Clear Clears data and returns fields to the default setting.

4. The **Reports (CSV Download)** tab (or **Reports** button in the top right) will contain the results of any queries run in the background for up to five (5) days.

Exhibit 57. Transaction Log Reports (CSV Downloads) Tab

Transaction Log Search Results			
Search Criteria		Reports (CSV Downloads)	
File Name	Created Date (EST)	File Size (KB)	Download Link
-CSV-20251031-102453.csv	10/31/2025, 10:24:54 AM	3676	Download
Reports will be removed after five (5) days.			

View Transaction Results Online

If **Browser** was selected for output, and **Search** selected, the Transaction Log Search Results page is displayed ([Exhibit 58](#)).

Exhibit 58. Transaction Log Search Results

Transaction Log Search Results

Search Criteria

Search Results

356 matches found. 356 available for display. 356 matches displayed on this page.

The following transactions matched the specified search criteria.

Clear Filters

ID	TimeStamp	Equipment ID	EG	ETC	MD	Pool ID	Equip Owner	Lessee	Type	State	Company	User
172704419	01/02/2020 08:11 AM	BNSF 519	LOCO	D116	D		BNSF		QMI	Normal	BNSF	BNSFEM
172704420	01/02/2020 08:11 AM	BNSF 519	LOCO	D116	D		BNSF		IDD	Normal	RAIL	SYSTGE
172964092	01/10/2020 08:06 AM	BNSF 519	LOCO	D116	D		BNSF		QMI	Normal	BNSF	BNSFEM
172964093	01/10/2020 08:06 AM	BNSF 519	LOCO	D116	D		BNSF		IDD	Normal	RAIL	SYSTGE
173141935	01/16/2020 12:12 PM	BNSF 519	LOCO	D116	D		BNSF		QMI	Normal	BNSF	BNSFEM
173141936	01/16/2020 12:12 PM	BNSF 519	LOCO	D116	D		BNSF		IDD	Normal	RAIL	SYSTGE
173251986	01/20/2020 02:38 PM	BNSF 211109	IFLT	S635	FCA		BNSF	BNSF	ECC	Normal	TTX	TTXWEE

<

<<

1

2

3

4

5

...

12

>>

>

30

100

500

1000

5000

To change criteria, select the **Search Criteria** tab, edit, and resubmit.

To view details for a particular transaction, select its **ID** link (column at left). The Transaction Details page is displayed ([Exhibit 59](#)). Select **Next** to click through the list of IDs from the Search Results. Select **Done** on the detail page to return to the search results.

To view contact information for the listed **Company** or **User**, select their respective links. See [Exhibit 60](#) and [Exhibit 61](#). Select **Done** to return to the Search Results page.

Exhibit 59. Transaction Details

Transaction Details

Transaction ID :

172704419

Timestamp :

01/02/2020 8:11 AM

Equipment ID :

ETC :

D116

Type :

QMI

State :

Normal

Company :

BNSF

Trans Source :

TRAIN_IL_MESSAGING

EG :

LOCO

MD :

D

User :

BNSFEMIS

Equip Owner :

BNSF

Lessee :

EIN :

0008877192

Element ID	Element Name	Transaction Element Value	Previous Element Value	AC	Component ID	Component Location	Parent ID	Parent Location
DTDN	Inspection Date Done	01/02/2020	12/31/2019					
INDD	Inspection Due Date	02/02/2020	01/31/2020					
PERF	Inspection Performer	BNSF	BNSF					
REPT	Inspection Reporter	BNSF	BNSF					
SCDD	Scheduled Due Date	02/02/2020	01/31/2020					
SPLC	Location/SPLC	622300000	622300000					

Done

Next

The actions available on this example page is to view the Company Contact information ([Exhibit 60](#)), view User Contact Information ([Exhibit 61](#)) or select the Transaction ID to view the transaction that generated the one being viewed.

Exhibit 60. Company Contact Info

Company Contact Info

Company ID: BNSF

Company Name: BNSF RAILWAY COMPANY

Company Admin Email:

 Done

Exhibit 61. User Contact Info

User Contact Info

User ID: BNSFXML

User Name:

User Phone:

User Email:

 Done

Inspection History

This function is used to view inspection history for a specified equipment ID or EIN.



If the equipment's built date has changed and a new EIN is generated, the inspection history will not include all inspections when searching by a particular EIN.

Use the following procedure to view an inspection history for equipment units:

1. From the main menu, select **Query > Inspection History**. The Search Inspection History page is displayed ([Exhibit 62](#)).

Exhibit 62. Search Inspection History – Top

Search Inspection History

Input search criteria to find desired inspections.

Search

Count

Reset

Clear

Cancel

* 1. Results will include inspections matching all of the specified criteria:

* At least one input is required:

Equipment IDs

Company-Specific Equipment Groups

EINs

2. Date range:

Starting Date/Time

02/16/2023

12

01

AM

PM

Ending Date/Time

02/17/2023

11

59

AM

PM

☐ Search All Dates


2. Enter the appropriate search criteria. At least one search parameter is required in the first box to perform a search. Mandatory fields are indicated with an asterisk (*) and **red font**.

Field descriptions for the top of the page are shown in [Exhibit 63](#).

Exhibit 63. Inspection History Field Descriptions

Field	Description
Equipment ID(s)	Enter the specific equipment IDs (e.g., ABCD123) or search with a range (e.g., ABCD123-999) or a wildcard. See Exhibit 23 for more information.
EIN(s)	Equipment Identification Number. Uniquely identifies equipment in Umler. If equipment is restenciled (new Equipment Initial and Number) it retains its original EIN.

Field	Description
Company-Specific Equipment Groups	Company-Specified Equipment Groups are private pools of equipment that are only available to the company specified. Use the search icon () to open the Search for Company-Specific Equipment Groups page (Exhibit 151). Refer to Company-Specific Equipment Groups .
Date/Time range	Search for inspections occurring between the specified starting date/time and the specified ending date/time. Remember to select either AM or PM with the available radio buttons. Defaults are: • Starting Date/Time: 12:01 AM of the previous day's date • Ending Date/Time: 11:59 PM of the current day's date Check Search All Dates to ignore date criteria. All notice times are recorded in Eastern Time.

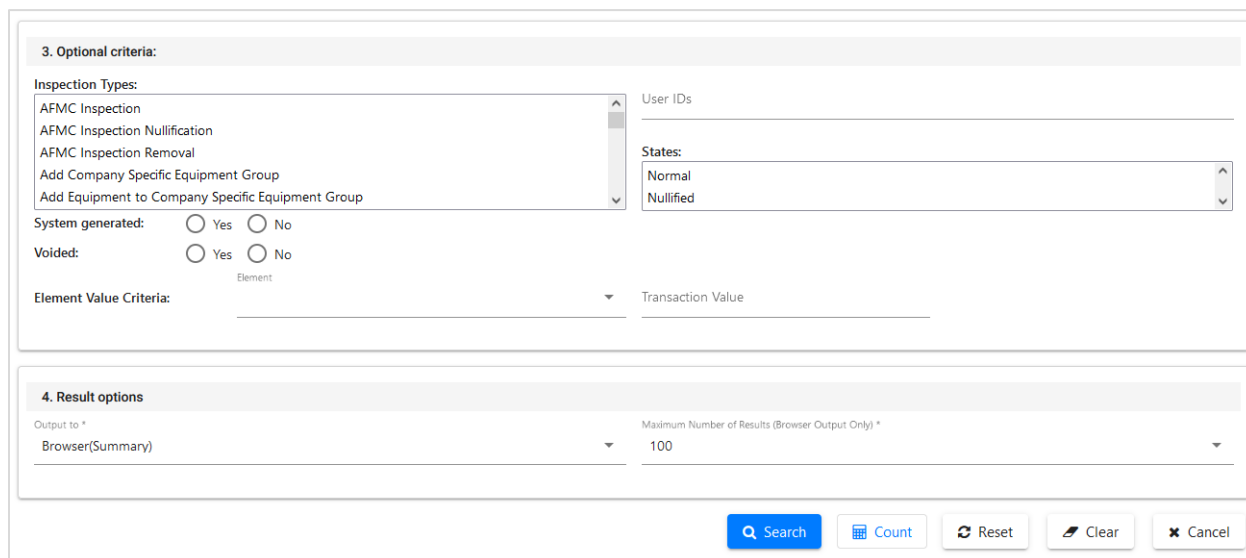Exhibit 64. Search Inspection History – Bottom


3. Optional criteria:

Inspection Types:
 AFMC Inspection
 AFMC Inspection Nullification
 AFMC Inspection Removal
 Add Company Specific Equipment Group
 Add Equipment to Company Specific Equipment Group

User IDs: _____

States:
 Normal
 Nullified

System generated: ☐ Yes ☐ No

Voided: ☐ Yes ☐ No

Element Value Criteria: _____ Transaction Value: _____

4. Result options

Output to *
 Browser(Summary)


Maximum Number of Results (Browser Output Only) *
 100

 Search  Count  Reset  Clear  Cancel

Field descriptions for the bottom of the page are shown in [Exhibit 65](#).

Exhibit 65. Inspection History Field Descriptions (cont'd)

Field	Description
Inspection Types	Select the inspection types wanted for the query. Multiple selections are allowed.
User ID(s)	Search for inspections recorded by specific users by entering User IDs in this field. Separate multiple IDs using the delimiters shown in Exhibit 23 . To search for intra-company user IDs, see Manage Intra-Company User Access Rights .
States	Select Normal or Nullified (to see inspections that have been nullified via EDI messages).
System generated	Select the Yes or No radio button to include system generated inspection records. To clear both radio buttons, select Clear .

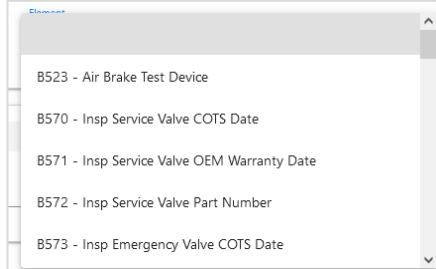Field	Description
Voided	Select the Yes or No radio button to display voided inspections. To clear both radio buttons, select Clear .
Element Value Criteria	One criteria set is provided. - Use the drop-down list to select an Element (partial list shown):  - Enter a Transaction Value for the Element selected.
*Output to	Select Browser (Summary) or Browser (Detail) from the drop-down list. Default is Browser (Summary) . CSV is not available for this form.
*Maximum Number of Results	Maximum number of result records you want returned (100, 500, 1000, 5000). Default is 100.

3. Select one of the following processing options:

Exhibit 66. View Transaction Log Processing Options

Search	Executes the search and outputs to the Browser as requested. See View Inspection History Summary Results Online , or View Inspection History Detail Results Online .
Count	Executes the search and outputs a single line message with the count of inspection records meeting the specified criteria. Similar to Exhibit 35 .
Clear	Clears entered data and resets fields to default.
Cancel	Leaves the form and displays the Umler Home page.

View Inspection History Summary Results Online

When **Browser (Summary)** is selected as the output for a search, and the **Search** button is selected, the Inspection History Search Results page is displayed ([Exhibit 67](#)).

Exhibit 67. Inspection History Search Results – Browser Summary

Inspection History Search Results

Search Criteria

Search Results

Inspection history items that matched the search criteria:

4 items found, displaying all items.

Timestamp	Equipment ID	Type	EIN	SysGen	Voided	Nullified
07/21/2022 02:44 PM	RAIL 6100	REF	0010536781	N		
03/25/2022 04:57 PM	RAIL 6100	ABT	0010536781	N		
02/25/2015 04:59 PM	RAIL 6100	ABT	0009976857	Y		
12/09/2014 08:43 AM	RAIL 6100	REF	0009976857	Y		

Export: CSV

1 to 4 of 4 < > Page 1 of 1 > > >

To see details for an Equipment ID, select the **Timestamp** link in the first column. The detail page for that equipment is displayed ([Exhibit 68](#)).

To export the results as a CSV file, select the **CSV** link at the lower left of the page (outlined in red). Refer to [Export Query Results to CSV](#).

Exhibit 68. Search Inspection History Summary Details

Search Inspection History

Done

Timestamp :

07/21/2022 2:44 PM

Equipment ID :

RAIL 6100

Equipment Type Code :

REF

Inspection Type :

Normal

State :

RAIL

Company :

Web

Transaction Source :

Equipment Group :

Mechanical Designation :

User :

emissfm1

Equipment Owner :

Lessee :

EIN :

0010536781

Seq	Element ID	Element Name	Element Value
1	DTDN	Inspection Date Done	20220720
2	PERF	Inspection Performer	RAIL
3	REPT	Inspection Reporter	RAIL
4	SPLC	Location/SPLC	111111000

If you erroneously reported this inspection/certification transaction, you can click "Nullify" to remove the transaction.

Nullify

Done

For some inspections, you'll have the option to select **Nullify** to nullify the inspection/certification transaction if the transaction was erroneously reported.

Select **Done** to return to the Search Results Summary page.

View Inspection History Detail Results Online

When **Browser (Details)** is selected as the output for a search, and the **Search** button is selected, the Inspection History Search Results (Browser Details) page is displayed ([Exhibit 69](#)).

Exhibit 69. Search Inspection History – Detailed List

Inspection History Search Results

Search Criteria

Search Results

Inspection history items that matched the search criteria:
Detailed List

18 items found, displaying all items.

Timestamp	Equipment ID	Type	EIN	Element ID	Element Value	SysGen	Voided	Nullified
02/25/2015 04:59 PM	RAIL 6100	ABT	0009976857	DTDN	20150225	Y		
02/25/2015 04:59 PM	RAIL 6100	ABT	0009976857	PERF	RAIL	Y		
02/25/2015 04:59 PM	RAIL 6100	ABT	0009976857	REPT	RAIL	Y		
02/25/2015 04:59 PM	RAIL 6100	ABT	0009976857	SPLC	411657000	Y		
02/25/2015 04:59 PM	RAIL 6100	ABT	0009976857	B523	A	Y		
12/09/2014 08:43 AM	RAIL 6100	REF	0009976857	PERF	RAIL	Y		
12/09/2014 08:43 AM	RAIL 6100	REF	0009976857	SPLC	411657000	Y		
12/09/2014 08:43 AM	RAIL 6100	REF	0009976857	REPT	RAIL	Y		
12/09/2014 08:43 AM	RAIL 6100	REF	0009976857	DTDN	20141104	Y		

1 to 18 of 18< >Page 1 of 1> >

Export: CSV

To see details for an equipment, select the **Timestamp** link in the first column. The detail page for that equipment is displayed ([Exhibit 68](#)). Use the page arrows in the bottom right to move between many pages (30 listed per page).

To export the results as a CSV file, select the **CSV** link at the lower left of the page. Refer to [Export Query Results to CSV](#).

Historical Lineage Query

This function is used to view all unit identification (entry into system, restenciling, etc.) actions for a specified equipment ID or EIN. Based on user permissions, some confidential fields may not be displayed.



If the built date has changed and a new EIN is generated, the inspection history will not include all inspections when searching by a particular EIN.

Use the following procedure to view lineage for a unit:

1. From the main menu, select **Query > Historical Lineage Query**. The Historical Lineage page is displayed ([Exhibit 70](#)).

Exhibit 70. Historical Lineage Query

Historical Lineage Query

Equipment ID

OR EIN

2. Enter a valid **Equipment ID** or **EIN** and select **Search**. The Historical Lineage Query Results page is displayed ([Exhibit 71](#)).

Exhibit 71. Historical Lineage Query Results

Historical Lineage Query Results

Search Criteria

Search Results

13 items found, displaying all items.

EIN	Equipment ID	Prior Equip...	Equip Gr...		Built D...	Rebuilt ...	Effective Date	Status	Expiration Date	Most Re...	Cr
0010536781	RAIL6100		BOXC	A4i	XP	02/24/2010	2023-02-02 02:33:42.753	Active	9999-12-31 00:00:00.0	Y	
0010536781	RAIL6100		BOXC	A4i	XP	02/24/2010	2022-05-05 08:30:21.597	Inactive	2023-02-02 02:33:42.75		
0010536781	RAIL6100		BOXC	A4i	XP	02/24/2010	2022-03-17 10:11:16.351	Active	2022-05-05 08:30:21.596		
0010536781	RAIL6100		BOXC	A4i	XP	02/24/2010	2022-02-25 08:35:24.025	Pre-Registered	2022-03-17 10:11:16.35		
0009976857	RAIL6100	RAIL2500	HOPP	K...	HN	01/01/1992	2016-01-20 09:53:10.973	Deleted	9999-12-31 00:00:00.0		
0009976857	RAIL2500		HOPP	K...	HN	01/01/1992	2016-01-20 09:52:28.638	Deleted	9999-12-31 00:00:00.0	Y	
0009976857	RAIL6100	RAIL2500	HOPP	K...	HN	01/01/1992	2014-12-09 08:42:59.337	Pre-Registered	2016-01-20 09:53:10.972		
0009976857	RAIL2500		HOPP	K...	HN	01/01/1992	2014-12-09 08:42:38.613	Active	2016-01-20 09:52:28.624		
0009976857	RAIL2500		HOPP	K...	HN	01/01/1992	2014-12-09 08:42:22.913	Pre-Registered	2014-12-09 08:42:38.607		
0009976857	RAIL2500		HOPP	K...	HN	01/01/1992	2014-12-09 08:42:09.947	Deleted	2014-12-09 08:42:22.913		
0009976857	RAIL2500		HOPP	K...	HN	01/01/1992	2014-12-09 08:41:46.019	Inactive	2014-12-09 08:42:09.941		
0009976857	RAIL2500		HOPP	K...	HN	01/01/1992	2014-12-09 08:41:07.462	Active	2014-12-09 08:41:46.014		
0009976857	RAIL2500		HOPP	K...	HN	01/01/1992	2014-05-23 07:56:14.95	Pre-Registered	2014-12-09 08:41:07.456		

This example shows a car that changed ownership and was restenciled. The EIN remains the same throughout, but the Equipment ID changes. The most recent lineage action is at the top of the table.

Select the **Search Criteria** tab to run another query or select another Umler application menu item (refer to [Exhibit 5](#)).



Only one equipment record with the status of **Active** can exist in the EIN lineage. Having more than one equipment ID active for the same EIN may result in a duplicate EIN conflict status for all active records.

Historical Locomotive Blue Card Query

This function is used to view the FRA Blue Card Locomotive Inspection and Repair Record for a specified Equipment ID by year.

Use the following procedure to view the historical locomotive blue card for a unit:

1. From the main menu, select **Query > Historical Locomotive Blue Card Query**. The Historical Locomotive Blue Card Query page is displayed ([Exhibit 72](#)).

Exhibit 72. Historical Locomotive Blue Card Query

Historical Locomotive Blue Card Query

Equipment ID

Year
2023

Submit

2. Enter the **Equipment ID**, select the **Year** from drop-down list and select **Submit**. The Locomotive Blue Card for the Equipment ID selected opens in a new window.

Exhibit 73. Historical Locomotive Blue Card Record



Locomotive Inspection and Repair Record
U.S. Department of Transportation
Federal Railroad Administration

See reverse for Paperwork Reduction Act Statement
OMB No.2130-0004

Year: 2023		1. Operated by: RAILINC CORPORATION		RR Code: RAIL		2. Owned by: RAILINC CORPORATION		RR Code: RAIL	
3. Model No.		4. Loco No. RAIL 6100		If renumbered, Prev. No.		5. Year Built 2010		Check if new loco. ☐	
6. Propelled by:		7. Horsepower		8. Type of Service: Passenger ☐ Road ☐ Yard ☐ Other ☒		9. Steam Gen. a. No.:		b. Working Pressure _____	
10. Max. Piston Travel _____ in.		Type of Air Brake:		Air Dryer Yes ☐ No ☒		11. Out of use Credit: 0		12. Last Periodic Inspection	
a. Date		b. Place		Date & Cert:		Date & Cert:		Date & Cert:	
AFM CAL. 229.29(b)		92 day max. interval		Previous date:		Date & Cert:		Date & Cert:	
PERIODIC INSPECTIONS		Check one:		☐ 92 days per 229.23(a)		☐ 184 days per 229.23(b)(1) <i>only</i>			
13. Date: Mo/Day/Yr		14. Place		15. Items*		16. Person Conducting		17. Certified by	

Equipment Unit Comparison

This function is used to view a comparison of Umler records for two specified equipment units. This might be used to:

- Ensure when an equipment changes ownership and operates for a period of time under both IDs, that the most recent information appears in the newest record (e.g., inspections or repairs done)
- Help make a decision between two cars being considered for hire

Based on user permissions, some confidential fields may not be displayed.

Use the following procedure to view a comparison between units:

1. From the main menu, select **Query > Equipment Unit Comparison**. The Equipment Unit Comparison page is displayed ([Exhibit 74](#)).

Exhibit 74. Equipment Unit Comparison

Equipment Unit Comparison

Equipment ID 1 *
RAIL0000006100

Equipment ID 2 *
RAIL0000006105

☒ Validate

2. Enter the **Equipment IDs** to be compared in the two text boxes and select **Submit**. The Equipment Unit Comparison page displays with data for each unit shown side by side ([Exhibit 75](#)).



Validation is optional but performed as part of the submit process. If either Equipment ID is invalid, an error message is displayed.

Exhibit 75. Equipment Unit Comparison Expanded

Equipment Unit Comparison

Show database values: ☐ Differing elements only: ☐ Check this box to view only the differences ✕ Cancel

✕ Collapse All ✕ Expand All Equipment ID 1: RAIL 6100 - BOXC Equipment ID 2: RAIL 6105 - BOXC

[General](#) [Weight](#) [Dimension](#) [Door](#) [Specification](#) [Feature](#) [Cost](#) [Car Management](#) [Train Service](#) [Truck Components](#) [Draft System Components](#) [Unit Segment Components](#) [Brake System Components](#) [Miscellaneous](#) [Inspection](#) [Default Presentation Group](#)

General

Element Name	ID	Flag1	RAIL 6100	ID	Flag2	RAIL 6105
Status Code	USCD	●	A	USCD	●	I
Mechanical Designation	UMMD	● ▲	XP	UMMD	● ▲	XP
Equipment Type Code	UMET		A403	UMET		A403
Maint of Way Service Type	B403			B403		
Built Date	BLDT	● ■	02/24/2010	BLDT	● ■	02/24/2010
Rebuilt / ILS Date	RBDT			RBDT		
Rebuilt Flag	RBFL			RBFL		

✕ Cancel

Differences in Elements appear in a different color

Values for the two units appear in two columns with the Equipment ID at the top. Elements with different values are outlined and in a lighter color (yellow/orange). Component help ID links can be different if the cars are different types. Page navigation is similar to that described in [Display Unit](#).

Check **Differing elements only** to restrict the view—matching elements are removed from view ([Exhibit 76](#)). Uncheck to return to the regular view.

Use the **Collapse All** and **Expand All** buttons to collapse or expand the table structure.

Exhibit 76. Equipment Unit Comparison Differences Only View

Equipment Unit Comparison

Show database values: ☐ Differing elements only: ☒ ✕ Cancel

✕ Collapse All ✕ Expand All Equipment ID 1: RAIL 6100 - BOXC Equipment ID 2: RAIL 6105 - BOXC

[General](#) [Weight](#) [Dimension](#) [Door](#) [Specification](#) [Feature](#) [Cost](#) [Car Management](#) [Train Service](#) [Truck Components](#) [Draft System Components](#) [Unit Segment Components](#) [Brake System Components](#) [Miscellaneous](#) [Inspection](#) [Default Presentation Group](#)

General

Differences by category

Element Name	ID	Flag1	RAIL 6100	ID	Flag2	RAIL 6105
Status Code	USCD	●	A	USCD	●	I
Last Update Date	B122		02/02/2023	B122		02/13/2023
Status Change Date	USCT		02/02/2023	USCT		05/05/2022
Equipment Identification	EINN		0010536781	EINN		0010536786
Date of Original Conflict	B063		05/19/2022	B063		11/08/2022
Conflict Status Next Date	B062		05/19/2023	B062		11/08/2023

Weight

✕ Cancel

These pages are for viewing only. When finished viewing the comparison, select **Cancel**, or select another Umler application menu item (refer to [Exhibit 5](#)).

Maintenance




To complete these tasks, you must have some rights assigned beyond query (Umler default permission). See your Company Umler Administrator for assistance.

When **Maintenance** is selected on an Umler page, the Maintenance menu is opened ([Exhibit 77](#)).

Menu & Options

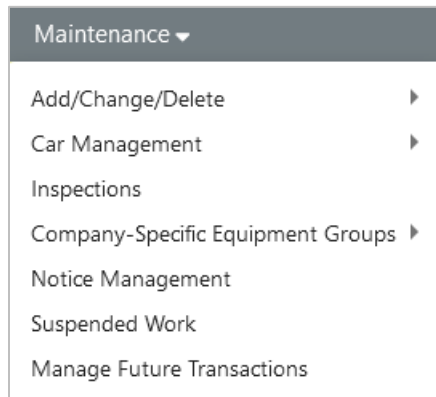Exhibit 77. Maintenance Menu



[Exhibit 78](#) describes the tasks available on the Maintenance menu.


Exhibit 78. Maintenance Menu Items and Descriptions

Menu Item	Description
Add/Change/Delete	Opens the Add/Change/Delete submenu.
Car Management	Opens the Car Management submenu.
Inspections	Opens the Inspections page, which allows you to report (or view) described inspections.
Company-Specific Equipment Groups	Opens the Company-Specific Equipment Group submenu.
Notice Management	Displays the Search for Notices page. Allows you to search for notices based on detailed search criteria, view notices, fix errors related to notices, and suppress read, resolved, or unwanted notices.
Suspended Work	Open the Suspended Work page and tasks that have been saved “in progress” and allows you to select and resume work on a suspended task.
Manage Future Transactions	Displays the Search Future Effective Transaction page which allows you to search for and delete any future effective transactions.

Add/Change/Delete

When **Maintenance > Add/Change/Delete** is selected, the Add/Change/Delete submenu is displayed ([Exhibit 79](#)).

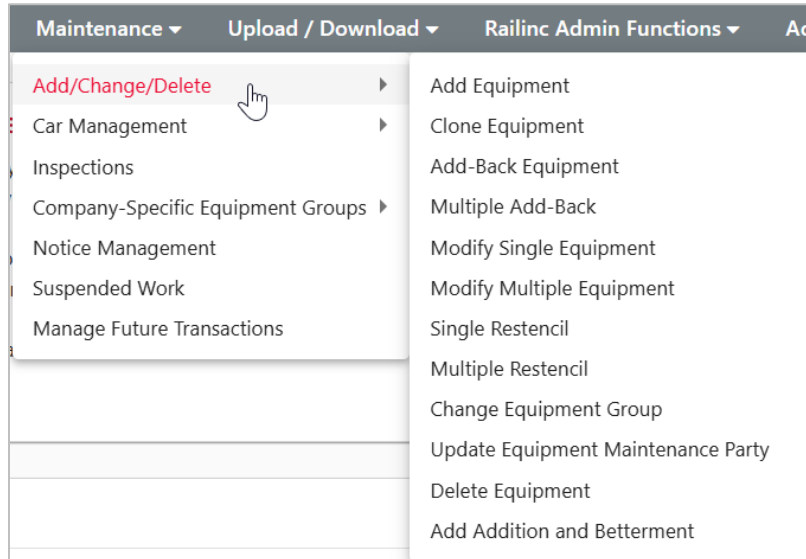Exhibit 79. Add/Change/Delete Submenu



[Exhibit 80](#) describes the additional Maintenance options on the Add/Change/Delete submenu.

Exhibit 80. Add/Change/Delete Submenu Items and Descriptions

Menu Item	Description
Add Equipment	Allows a user to add a new equipment unit to Umler.
Clone Equipment	Allows a user to add single and multiple equipment units by cloning from an existing unit.
Add-Back Equipment	Allows a user to add an equipment unit back into active status from online Umler archives.
Add-Back Multiple Equipment	Allows a user to reactivate multiple equipment units at one time.
Modify Single Equipment	Allows a user to change elements for a single equipment unit.
Modify Multiple Equipment	Allows a user to change selected elements for several equipment units in one editing session.
Single Restencil	Allows a user to modify a record to reflect restenciling of the piece of equipment. Restenciling refers to the act of changing the equipment mark and number that is stenciled on the side of an equipment unit.
Multiple Restencil	Allows a user to restencil multiple cars sequentially or following a pattern.
Change Equipment Group	Allows a user to change an Umler Equipment Group for a single equipment unit.
Update Equipment Maintenance Party	Allows you to update the Equipment Maintenance Party.

Menu Item	Description
<u>Delete Equipment</u>	Allows a user to deactivate an Umler record, sending the record to archive.
<u>Add Addition and Betterment</u>	Allows a user to add positive or negative values to equipment. Updates addition and betterment and the ledger value.

Add Equipment

The Add Equipment function is used to add new equipment to Umler. This function works well for adding multiple equipment with identical element values. For adding multiple equipment with significant differences or similar to an existing equipment, the [Clone Equipment](#) function can save time.



Add Equipment is used for new equipment only. Equipment with a Prior ID requires the equipment be restenciled. See [Single Restencil](#) or [Multiple Restencil](#) for details.

Use the following procedure to add equipment:

1. From the main menu, select **Maintenance > Add/Change/Delete > Add Equipment**. The Add Equipment page is displayed ([Exhibit 81](#)).

Exhibit 81. Add Equipment

2. Enter the **Equipment ID** to be assigned for this unit. Each road or private mark may have numbering standards in place. The Equipment ID must follow normal conventions of 2-4 alpha characters and 1-6 numeric characters. For example, BNSF123456. Multiple IDs can be entered at the same time, either on separate lines or separated by commas or a single space. Sequential IDs can be entered as a range (BNSF222201-10).

Select the **Equipment Group** from the drop-down list. When adding multiple equipment IDs, only one equipment group is used. Some types cannot be changed after entering the new records (e.g., LOCO). If in doubt, add equipment units one at a time. Additionally, the clone function can be used for identical or similar units.

Exhibit 82. Equipment Group

4. For articulated equipment, indicate the number of articulations in the Connected Unit Count field (up to 99). Otherwise, accept the default value of zero.
5. (Optional) Select **Validate** to have Umler validate the request. Otherwise continue.
6. Select **Submit**. The system checks to make sure the Equipment IDs entered are not already in Umler (active or inactive).
 - a. If an active ID exists, the add is not allowed. An error message is displayed.
 - b. If an inactive ID is found, an information message suggests using Add-Back to reactivate the ID. See [Add-Back Equipment](#).
 - c. If the requested IDs are valid, the Add Equipment element entry page is displayed.

Exhibit 83. Add Equipment Example

Add Equipment

Equipment ID(s) *
 RAIL0000666666

Equipment Group: LOCO

Number of Equipment Units: 1

[General](#)
[Weight](#)
[Dimension](#)
[Specification](#)
[Feature](#)
[Blue Card](#)
[Inspection Interval Days](#)
[Emissions](#)
[Cost](#)
[Car Management](#)
[Truck Components](#)
[Draft System Components](#)
[Miscellaneous](#)
[Inspection](#)
[Default Presentation Group](#)

Element Name	ID	Flag	Value	Error
Status Code	USCD	●	P - PRE-REGISTERED	
Mechanical Designation	UMMD	●		
Equipment Descriptor	B341	●		
Equipment Type Code	UMET			
Built Date	BLDT	● 🇺🇸 🏠		

Elements shown in the table are based upon the Equipment Type selection made. Mandatory elements have the red dot in the Flag field (●). See [Exhibit 7](#) for other flag icons.

Page navigation and display characteristics are similar to [Display Unit](#).

7. Complete the fields in the entry page table:
 - a. Tab between fields.
 - b. For element field help, select the **ID** link for the field. See [Field Help](#).
 - c. Ensure all mandatory fields have been completed.

8. When all input is complete, select **Validate**. The system validates entries against railroad business rules and acceptable values and displays an error message under the page title and displays any element-specific error message in the error column beside the element.
9. Correct the errors:
 - a. Read through all errors. Because many elements are related, correcting a single element might correct multiple errors.
 - b. Any error regarding Umler rights (equipment, pool, inspection, or view confidential data) or SSO company-specific rights (authorization to act for a company) must be addressed first. See the Company SSO and/or Umler Administrator.

Some conditional elements become mandatory based on inputs (rather than Equipment Type), so complete all new mandatory fields.
 - d. Use field help to change invalid values. Select the **ID** link for the field. See [Field Help](#).
 - e. (Recommended) Correct one error at a time and select **Validate** between corrections.
10. Select **Validate** a final time to ensure errors have been corrected.
 - a. If errors are still found (or new errors initiated), make necessary corrections and revalidate.



If validation fails after several attempts at correction and revalidation, select **Suspend** to name and save the work until error corrections can be clearly identified. The Suspend Work page is displayed ([Exhibit 84](#)). See [Suspended Work](#) on how to resume the Add Equipment task.

Exhibit 84. Suspend Work

Suspend Work

Please provide the description of the suspended task

Suspend
✕ Cancel

- Write a description that makes it easy to locate the suspended task to resume work. For example, “Add Equipment” might mean one of several add tasks, so the Equipment ID would be helpful.
 - Select **Suspend** to suspend the task.
- b. If no errors are found, a successful validation message is displayed under the page title. Continue with the next step.
11. When no errors are found, select **Submit**. The Equipment updates submitted to the system - Success page is displayed ([Exhibit 85](#)).

Exhibit 85. Equipment Updates Successfully Submitted to the System

Equipment updates submitted to the system

Success
All updates were successfully applied to the system

Equipment transactions submitted : 1
Successful equipment transactions : 1
Partially successful transactions : 0
Failed equipment transactions (Notices) : 0

Inspections transactions submitted : 3
Successful Inspection transactions : 3
Failed Inspection transactions (Notices) : 0

Equipment with errors on the current record (Conflicts) : 0

Done

12. Select **Done** to close or select another Umler application menu item (refer to [Exhibit 5](#)).


Clone Equipment

The Clone Equipment function is used to add single and multiple equipment by cloning from an existing unit.

Use the following procedure to clone equipment:

1. From the main menu, select **Maintenance > Add/Change/Delete > Clone Equipment**. The Clone Equipment page is displayed ([Exhibit 86](#)).

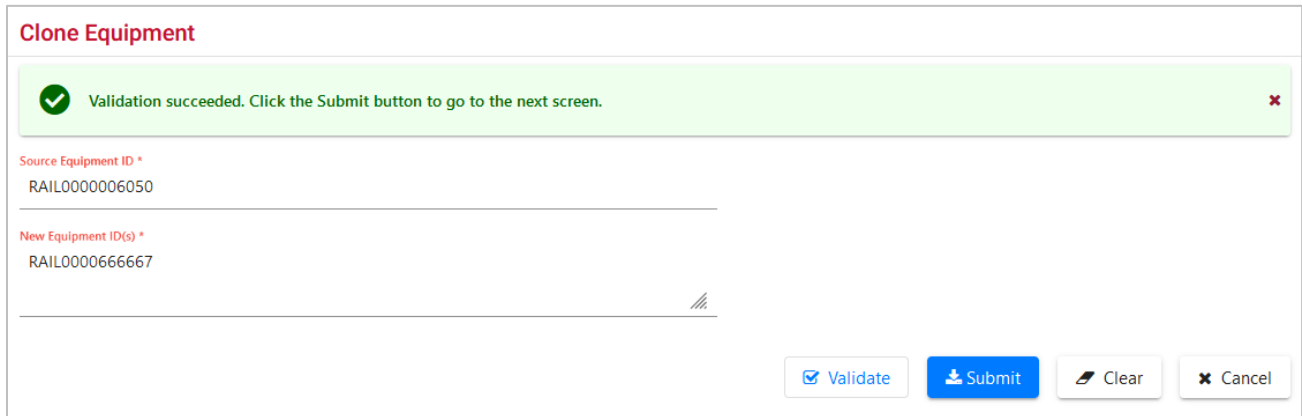Exhibit 86. Clone Equipment



2. Enter a source equipment ID. A cloned equipment source can be from any owner/road.
 - Choose a known matching equipment ID from your road's rolling stock or a known other road's similar equipment, or
 - Perform a search for a unit with the same characteristics, using [Equipment Query](#). Check the Equipment ID search result, open the drop-down list at the right, select **Clone Equipment** and select **OK** to open the Clone Equipment page with the selected record as the source for cloning.
3. Enter the new Equipment IDs to be created from the source. Each road or private mark may have numbering standards in place. The Equipment ID must follow normal conventions of 2-4 alpha characters and 1-6 numeric characters. For example, BNSF123456. Multiple IDs can be entered at the same time, either on separate lines or separated by commas or a single space. Sequential IDs can be entered as a range (BNSF222201-10).
4. (Optional) Select **Validate** to have Umler validate the request. Otherwise continue.
5. Select **Submit**. The system checks to make sure the Source ID and New Equipment IDs entered are not already in Umler (active or inactive).
 - a. If an active ID exists, the cloning is not allowed. An error message is displayed.
 - b. If an inactive ID is found, an information message suggests using Add-Back to reactivate the ID. See [Add-Back Equipment](#).

- c. If the requested IDs are valid, the Clone Equipment element entry page is displayed ([Exhibit 87](#)).

Exhibit 87. Clone Equipment Example

Clone Equipment

New Equipment ID(s) *

RAIL000066667

Source Equipment ID: RAIL 6050

Equipment Group: LOCO

[General](#)
[Weight](#)
[Dimension](#)
[Specification](#)
[Feature](#)
[Blue Card](#)
[Inspection Interval Days](#)
[Emissions](#)
[Cost](#)
[Car Management](#)
[Truck Components](#)
[Draft System Components](#)
[Miscellaneous](#)
[Inspection](#)

Default Presentation Group

General

Element Name	ID	Flag	Source	Del	Value	Error
Status Code	USCD	●	P		P - PRE-REGISTERED	
Mechanical Designation	UMMD	●	D		D - Locomotive	
Equipment Descriptor	B341	●	DFGT		DFGT - Freight Diesel-Electric	
Equipment Type Code	UMET		D115			
Built Date	BLDT	● ● ●	06/01/1972			
Rebuilt / ILS Date	RBDT					

Elements shown in the table are based upon the Equipment Type selection made. Mandatory elements have the red dot in the Flag field (●). See [Exhibit 7](#) for other flag icons.

Page navigation and display characteristics are similar to [Display Unit](#).



Certain mandatory fields do not port over to the cloned records and new entries are required.

6. Complete the fields in the entry page table:
 - a. Tab between fields.
 - b. For element field help, select the **ID** link for the field. See [Field Help](#).
 - c. Ensure all mandatory fields have been completed.
7. When all input is done, select **Validate**. The system validates entries against railroad business rules and acceptable values and displays an error message under the page title and displays any element-specific error message in the error column beside the element.
8. Correct errors and revalidate as described in Add Equipment [Step 9](#).
9. (Optional) Suspend the clone task for later completion as described in the [Note](#).
10. Select **Submit** to clone the new equipment units. The Equipment updates are submitted to the system and the success message is displayed (similar to [Exhibit 85](#)).

Add-Back Equipment

The Add-Back Equipment function is used to reactivate “archived” single and multiple equipment units one at a time. If you want to add-back a range of multiple units at once, use the [Add-Back Multiple Equipment](#) function.

Use the following procedure to add-back equipment:

1. From the main menu, select **Maintenance > Add/Change/Delete > Add-Back Equipment**. The Add-Back Equipment page is displayed ([Exhibit 88](#)).

Exhibit 88. Add-Back Equipment

Add-Back Equipment

Search Reset Clear Cancel

Results will include deleted equipment matching only specified criteria.

* 1. Enter a value in one or more of the following fields to search equipment deletion history :

Equipment ID(s) EIN

Equipment Type Code(s) Mechanical Designation(s)

Umler Company

2. Optionally restrict search by equipment deletion date range :

Starting Date Ending Date

Search Reset Clear Cancel

2. Enter one or more fields to search in deletion history. Optionally restrict the search with a date range for the deletion period. Refer to [Exhibit 22](#) and [Exhibit 25](#) for field descriptions.
3. Select **Search**. Matching records are displayed on the Add-Back Equipment page ([Exhibit 89](#)).

Exhibit 89. Add-Back Equipment Search Results

Add-Back Equipment

✓ Done

Add-back equipment candidates: 4,777
Results will include deleted equipment matching only specified criteria.

✕ Clear Filters

Seq #	Equipment ID	Delete Date	Equipment Group	EIN	Equipment Type Code	Mechanical Designation
1	CSXT 230	01-06-2020 10:49:32 AM	LOCO	0001749010	D127	D
2	PRLX 220	10-14-2021 02:45:44 PM	LOCO	0010042413	D127	D
3	PRLX 221	10-14-2021 02:45:44 PM	LOCO	0010042414	D127	D
4	GECX 7918	01-19-2023 12:14:13 PM	LOCO	0008531233	D127	D
5	PRLX 224	10-14-2021 02:45:45 PM	LOCO	0010323304	D127	D
6	UP 8485	09-06-2013 10:32:44 AM	LOCO	0009171515	D127	D
7	NS 8818	04-11-2018 11:54:06 AM	LOCO	0001843379	D127	D
8	NS 8819	11-07-2017 08:10:37 AM	LOCO	0001843380	D127	D
9	PRLX 223	10-14-2021 02:45:45 PM	LOCO	0010197760	D127	D
10	NS 8816	12-11-2018 08:31:37 AM	LOCO	0001843377	D127	D
11	PRLX 228	10-14-2021 02:45:46 PM	LOCO	0009959238	D127	D
12	NS 8817	07-09-2018 08:07:40 AM	LOCO	0001843378	D127	D
13	NS 8814	11-07-2016 08:10:57 AM	LOCO	0001843375	D127	D
14	PRLX 226	10-14-2021 02:45:45 PM	LOCO	0001672522	D127	D

✓ Done

4. Select the **Equipment ID** link to further process the record. The Add-Back Equipment page entry table is displayed (similar to [Exhibit 85](#)).

Elements shown in the table are based upon the Equipment Type of the old equipment.

Page navigation and display characteristics are similar to [Display Unit](#).



Certain mandatory fields (notably Owner) do not carry over to the Add-Back records. New inputs are required.

5. Select **Submit**. Complete the fields in the entry page table:
 - a. Tab between fields.
 - b. For element field help, select the **ID** link for the field. See [Field Help](#).
 - c. Ensure all mandatory fields have been completed.
6. When all input is complete, select **Validate**. The system validates entries against railroad business rules and acceptable values. If errors are found, an error message appears under the page title and any element-specific error messages are displayed in the error column beside the element.
7. Correct errors and revalidate as described in Add Equipment [Step 9](#).
8. (Optional) Suspend the Add-Back task for later completion as described in the [Note](#).
9. Select **Submit** to Add-Back the equipment units. The Equipment updates submitted to the system Success page is displayed (similar to [Exhibit 85](#)).

Add-Back Multiple Equipment

The Multiple Equipment Add-Back function is used to reactivate multiple “archived” equipment units at one time.



If equipment has been added and deleted several times, then the Add-Back Multiple Equipment function cannot be used. Instead, the equipment must be added one at a time via the regular Add-Back Equipment function.

Use the following procedure to add-back multiple equipment:

1. From the main menu, select **Maintenance > Add/Change/Delete > Multiple Add-Back**. The Multiple Equipment Add-Back page is displayed ([Exhibit 90](#)).

Exhibit 90. Multiple Equipment Add-Back

The screenshot shows the 'Multiple Equipment Add-Back' web form. At the top, there's a title bar with the text 'Multiple Equipment Add-Back'. Below this, there's a search bar with a magnifying glass icon and a 'Search' button, and a 'Reset' button. To the right of the search bar are 'Clear' and 'Cancel' buttons. Below the search bar, there's a section titled 'Results will include deleted equipment matching only specified criteria.' followed by a red asterisk and the instruction '1. Enter a value in one or more of the following fields to search equipment deletion history :'. This section contains four input fields: 'Equipment ID(s)', 'Mechanical Designation(s)', 'Equipment Type Code(s)', and 'Umler Company'. Below these fields, there's a section titled '2. Optionally restrict search by equipment deletion date range :'. This section contains two date pickers: 'Starting Date' and 'Ending Date'. At the bottom of the form, there's another search bar with a magnifying glass icon and a 'Search' button, and a 'Reset' button. To the right of the search bar are 'Clear' and 'Cancel' buttons.

2. Enter one or more input fields to search in deletion history. Optionally restrict the search with a date range for the deletion period. Refer to [Exhibit 22](#) and [Exhibit 25](#) for field descriptions.
3. Select **Search**. Matching records are displayed on the Multiple Equipment Add-Back page ([Exhibit 91](#)).

Exhibit 91. Multiple Equipment Add-Back Results

Multiple Equipment Add-Back

Add-back equipment candidates: 4,777
Results will include deleted equipment matching only specified criteria.

☐	Equipment ID	Delete Date	Equipment Group	EIN	Equipment Type Code	Mechanical Designation
☐	CSXT 230	01-06-2020 10:49:32 AM	LOCO	0001749010	D127	D
☐	PRLX 220	10-14-2021 02:45:44 PM	LOCO	0010042413	D127	D
☐	PRLX 221	10-14-2021 02:45:44 PM	LOCO	0010042414	D127	D
☐	GECK 7918	01-19-2023 12:14:13 PM	LOCO	0008531233	D127	D
☐	PRLX 224	10-14-2021 02:45:45 PM	LOCO	0010323304	D127	D
☐	UP 8485	09-06-2013 10:32:44 AM	LOCO	0009171515	D127	D
☐	NS 8818	04-11-2018 11:54:06 AM	LOCO	0001843379	D127	D
☐	NS 8819	11-07-2017 08:10:37 AM	LOCO	0001843380	D127	D
☐	PRLX 223	10-14-2021 02:45:45 PM	LOCO	0010197760	D127	D
☐	NS 8816	12-11-2018 08:31:37 AM	LOCO	0001843377	D127	D
☐	PRLX 228	10-14-2021 02:45:46 PM	LOCO	0009959238	D127	D
☐	NS 8817	07-09-2018 08:07:40 AM	LOCO	0001843378	D127	D
☐	NS 8814	11-07-2016 08:10:57 AM	LOCO	0001843375	D127	D
☐	PRLX 226	10-14-2021 02:45:45 PM	LOCO	0001672522	D127	D
☐	CSXT 239	11-06-2020 09:35:14 AM	LOCO	0001749573	D127	D

4. Select one or more of the listed equipment IDs.
5. Select **Submit** to Add-Back the equipment units. The Equipment updates submitted to the system Success page is displayed (similar to [Exhibit 85](#)).

Modify Single Equipment

The Modify Single Equipment function is used to change a single equipment unit.



Equipment units that are in conflict require solution of all conflicts when making changes. Making changes to one element can cause conflicts in another related element. Read through all errors, as they can be related to a single input field. Unresolved conflicts can result in Umler enforcing AAR business rules against the equipment. Refer to the [Umler Data Specifications Manual](#) for acceptable values for fields and assistance in resolving conflicts, as well as descriptions of conflict-related business rules.

Use the following procedure to modify a single equipment unit:

1. From the main menu, select **Maintenance > Add/Change/Delete > Modify Single Equipment**. The Modify Single Equipment page is displayed ([Exhibit 92](#)).

Exhibit 92. Single Equipment Modify

2. Enter the **Equipment ID** of the equipment to be modified.
3. The Single Equipment Modify - Components by Element View is selected by default, but you can select the **View Components by Location** radio button. Component and Location diagrams and descriptions are provided in the [Umler Data Specifications Manual](#) (accessed from the upper right Help link).
4. Select **Modify**. The Single Equipment Modify page is displayed with the selected view ([Exhibit 93](#)).

Exhibit 93. Single Equipment Modify - Components by Element View

Single Equipment Modify - Components By Elements View

Equipment ID: RAIL 666666 Equipment Group: LOCO [Equipment Health View](#)

[General](#)
[Weight](#)
[Dimension](#)
[Specification](#)
[Feature](#)
[Blue Card](#)
[Inspection Interval Days](#)
[Emissions](#)
[Cost](#)
[Car Management](#)
[Miscellaneous](#)
[Inspection](#)
[Default Presentation Group](#)
[Components](#)

Element Name	ID	Flag	Current Value	Del	New Value	Notice Value	Error
Status Code	USCD	+	P - PRE-REGISTERED				
Mechanical Designation	UMMD	+	D - Locomotive				
Equipment Descriptor	B341	+	DFGT - Freight Diesel-Electric				
Equipment Type Code	UMET		D127				
Built Date	BLDT	⚠️ 🏠	12/30/2014				
Rebuilt / ILS Date	RBDT						
Owner	UMOW	+	RAIL				
Lessee	LESE	🏠					

Enter new values in this column

5. Select or enter values in the **New Value** fields that require changing.

For a description of each element, select the **ID** link in the ID column. See [Field Help](#) for details.

If viewing components in location view, or if the **Switch View** button is selected, some additional fields are available ([Exhibit 94](#)).

Q. If the equipment Built Date is changed, will the EIN change?

A. If equipment is added as Pre-registered and the Equipment Add Date is within the 18 months of the Built Date, any change to the Built Date within the same calendar month/year should not cause the EIN to change. A new EIN is generated when the Built Date change is greater than 18 months of the Equipment Add Date (Element B082).

Exhibit 94. Single Equipment Modify - Components By Location View

Single Equipment Modify - Components By Location View

Equipment ID: RAIL 666666 Equipment Group: LOCO [Equipment Health View](#)

[General](#)
[Weight](#)
[Dimension](#)
[Specification](#)
[Feature](#)
[Blue Card](#)
[Inspection Interval Days](#)
[Emissions](#)
[Cost](#)
[Car Management](#)
[Truck Components](#)
[Draft System Components](#)
[Miscellaneous](#)
[Inspection](#)

Default Presentation Group

Truck Components

Component ID	Component Name	Location	Error
		2	
Go			

TRUCKSYS Truck System LOCATION_F

Component ID	Component Name	Location	Error
		1	
Go			

TRUCK Truck LOCATION_F

Element Name	ID	Flag	Current Value	Del	New Value	Notice Value	Error
Truck Axle Count	B252		3	Del			
Locomotive Truck Type	A278		HR - HT EMD, HTC, High Traction, Radial, 3 Axles	Del			
Wheel Diameter	A294		30 - 38 inches	Del			

In [Exhibit 94](#), the Truck System shows one component in the box at the right, and existing values are shown in the four fields under LOCATION_F.

To add another Truck, increment the 1 in the box to 2, and select **Go**. A new Location with open fields is provided ([Exhibit 95](#)).

Exhibit 95. After Adding Second Truck Component

Component ID	Component Name	Location	Error
		2	
Go			

TRUCK Truck LOCATION_A

Element Name	ID	Flag	Current Value	Del	New Value	Notice Value	Error
Truck Axle Count	B252						
Locomotive Truck Type	A278						
Wheel Diameter	A294						

It is LOCATION_A and has the same elements as LOCATION_F, but no values.

- b. Add the new values as appropriate.
6. When all input is complete, select **Validate**. The system validates entries against railroad business rules and acceptable values. If errors are found, an error message appears under the page title and any element-specific error messages are displayed in the error column beside the element.
7. Correct errors and revalidate as described in Add Equipment [Step 9](#).
8. (Optional) Suspend the modify task for later completion as described in the [Note](#).

9. Select **Submit** to modify equipment unit. The Equipment updates submitted to the system Success page is displayed (similar to [Exhibit 85](#)).

Modify Multiple Equipment

The Modify Multiple Equipment function is used to change records for multiple equipment units in a single edit session.



Equipment units that are in conflict require solution of all conflicts when making changes. Making changes to one element can cause conflicts in another related element. Read through all the errors, as they can be related to a single input field. Refer to the [Umler Data Specifications Manual](#) for acceptable values for fields and assistance in resolving conflicts. Refer to the [Modify Single Equipment Note](#).

Use the following procedure to modify multiple equipment units:

1. From the main menu, select **Maintenance > Add/Change/Delete > Modify Multiple Equipment**. The Modify Multiple Equipment Units page is displayed ([Exhibit 96](#)).

Exhibit 96. Modify Multiple Equipment Units

2. Enter the **Equipment ID(s)** to be modified. Equipment IDs may already be populated if this page was accessed with selections from a query ([Exhibit 32](#)).

Select **Submit**. The Modify Multiple Equipment Units (select elements) page is displayed ([Exhibit 97](#)).

Exhibit 97. Modify Multiple Equipment Units – Select Elements

4. To filter the **Available Elements** list, begin entering an element in the filter box, and the list narrows to match your search. To add one or more elements to **Selected Elements** list, select from the **Available Elements** and select the right pointing arrow (outlined in red above). For multiple selections, press **Ctrl** while making selections to move multiple elements at one time.
5. To filter the **Selected Elements** list, begin entering an element in the filter box, and the list narrows to match your search. To remove one or more elements, select from the **Selected Elements** list and select the left pointing arrow (outlined in red above in between Available and Selected Elements).
6. Adjust the order of the output by choosing a **Selected Element** and selecting the up or down arrow (outlined in red to the right of Selected Elements). The top attribute appears as the first (left) column in the results table.
7. Select **Submit**. The Modify Multiple Equipment Units page is redisplayed with chosen elements, existing values, and an input field for the new value ([Exhibit 98](#)).

Exhibit 98. Modify Multiple Equipment Units – Update Elements

Equipment ID	Empty/Load Device Eqpd B075	Body Material A030	Wheel Bearing Type B191
☐ Select All			
☒ RAIL0000000404			
☒ RAIL0000000503			

8. For each Equipment ID, the current value is on the right in each element column. Enter the new values of the elements to be changed in the fields provided.

To return to the previous page to select other elements, select **Element Selection**.

- b. Use the copy icon () to copy a new typed value into all fields for that element column.
9. Select **Submit**. The system automatically validates the new entries against business rules and errors are displayed above the requested changes by Equipment ID. Resolve errors as described in Add Equipment [Step 9](#).



If validation fails after several attempts at correction and revalidation, select **Suspend** to save the work until error corrections can be clearly identified. The Suspend Work page is displayed ([Exhibit 84](#)). See [Suspended Work](#) to resume the Modify Equipment task.

10. When all conflicts or errors have been corrected, select **Submit** again.

Exhibit 99. Equipment Updates Successfully Submitted

Equipment updates submitted to the system

Success
All updates were successfully applied to the system

Equipment transactions submitted : 3
Successful equipment transactions : 3
Partially successful transactions : 0
Failed equipment transactions (Notices) : 0

Inspections transactions submitted : 0
Successful Inspection transactions : 0
Failed Inspection transactions (Notices) : 0

Equipment with errors on the current record (Conflicts) : 0

 Done

11. Select **Done** to return to the Umler Home/Welcome page.


Single Restencil

When a car is restenciled (generally for a change in ownership), the losing road must grant View Confidential Data Rights for the Umler record to the gaining road, and the gaining road must accept the rights, and assign to a user (or put into a profile for multiple users) before it can perform the Umler restencil task. See [Grant Access Rights](#). Only active or inactive equipment can be restenciled (cannot be in pre-registered status). When equipment that is restenciled is made active, open EHMS alerts are copied to the new equipment record.


Use the following procedure to restencil an equipment unit:

1. From the main menu, select **Maintenance > Add/Change/Delete > Single Restencil**. The Restencil Equipment page is displayed ([Exhibit 100](#)).

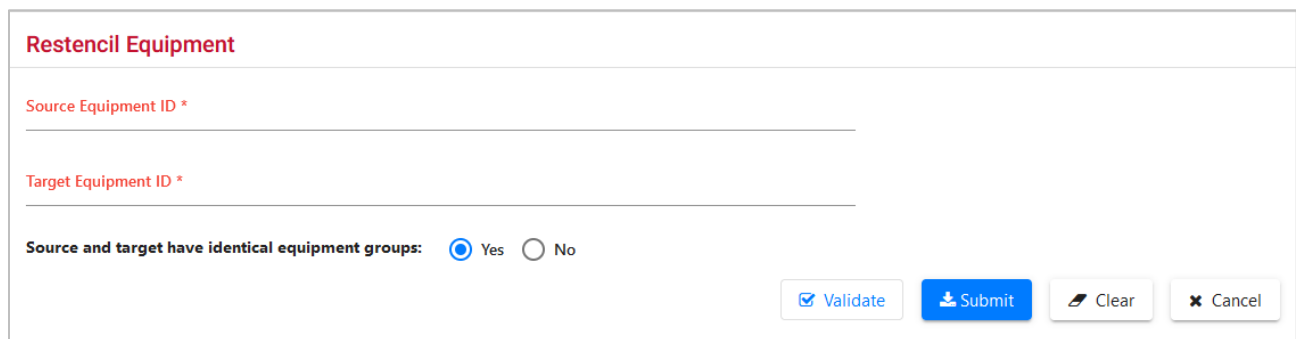Exhibit 100. Restencil Single Equipment



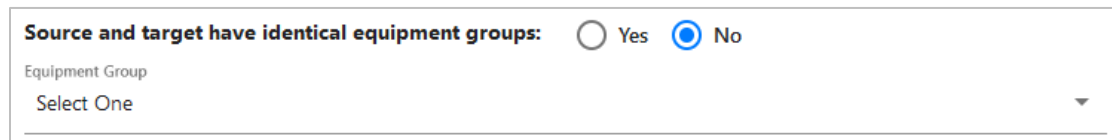2. Enter the **Source Equipment ID** (old ID).
3. Enter the **Target Equipment ID** (new ID).
4. Select radio button for Source and target have identical equipment groups:
 - a. If **Yes** is selected (default), continue with submission.
 - b. If **No** is selected, a drop-down text box is displayed:



- c. Use the drop-down list to select the new **Equipment Group** (refer to [Exhibit 82](#)).
5. Select **Submit**. The Restencil Equipment page with the record for the new Equipment ID displayed ([Exhibit 101](#)). Many of the existing fields cannot be automatically transferred to the new record (e.g., Maintenance Party, Owner, etc.).

Exhibit 101. Restencil Equipment Update Record

Restencil Equipment

Target Equipment ID *
RAIL000066667

Validate Submit Clear Suspend Cancel

Prior Equipment ID: RAIL0000006506 Equipment Group: BOXC

Collapse All Expand All

General Weight Dimension Door Specification Feature Cost Car Management Train Service Truck Components Draft System Components Unit Segment Components Brake System Components Miscellaneous Inspection Default Presentation Group

General

Element Name	ID	Flag	Source	Del	Value	Error
Status Code	USCD	⚠	A	🗑	P - PRE-REGISTERED	
Mechanical Designation	UMMD	⚠	XP	🗑	XP - Box-Non-Insulated, Specially Ed	
Equipment Type Code	UMET		A403			
Maint of Way Service Type	B403			🗑		
Built Date	BLDT	⚠	02/24/2010	🗑	02/24/2010	
Rebuilt / ILS Date	RBDT			🗑		
Owner	UMOW	⚠	RAIL	🗑		

Validate Submit Clear Suspend Cancel

Avoid duplicate EIN conflicts by leaving Status Code set to **Pre-Registered**. The equipment automatically becomes Active upon passing an AEI reader.

6. Scroll through the entire record and add values in mandatory fields that did not copy over with the record. In the first screen of [Exhibit 101](#), the Owner mandatory field requires a new value. Additionally, the Maintenance Party field was changed to reflect the new owner.
7. When all mandatory fields are input, select **Submit**. Validation occurs as described in [Add Equipment Step 9](#).



If validation fails after several attempts at correction and revalidation, select **Suspend** to save the work until error corrections can be clearly identified. The Suspend Work page is displayed ([Exhibit 84](#)). See [Suspended Work](#) on to resume the Modify Equipment task.

If validation succeeds, the Equipment Updates Submitted to the System page is displayed (similar to [Exhibit 99](#)). It shows the old Equipment ID being made inactive.

8. Select **OK** to return to the Umler Home/Welcome page.

Multiple Restencil

When a car is restenciled (generally for a change in ownership), the losing road must grant View Confidential Data Rights for the Umler record to the gaining road, and the gaining road must accept the rights, and assign to a user (or put into a profile for multiple users) before it can perform the Umler restencil task. See [Grant Access Rights](#). Only active or inactive equipment can be restenciled (cannot be in pre-registered status). When equipment that is restenciled is made active, open EHMS alerts are copied to the new equipment record.

Use the following procedure to restencil multiple equipment units:

1. From the main menu, select **Maintenance > Add/Change/Delete > Multiple Restencil**. The Restencil Multiple Equipment page is displayed ([Exhibit 102](#)).

Exhibit 102. Restencil Multiple Equipment

The screenshot shows a web form titled "Restencil Multiple Equipment". It contains two text input fields: "Source Equipment ID(s) *" and "Target Equipment ID(s) start or range *", both with red asterisks indicating required fields. Below these fields are two radio buttons for "Carry forward gaps (Valid only if Target start is specified):", with "Yes" and "No" options; the "No" option is selected. Below the radio buttons, it says "Number of Equipment Units: 0" and "Source-Target Mapping :". At the bottom right, there are three buttons: "Submit" (blue), "Clear" (gray), and "Cancel" (gray).

2. Enter the **Source Equipment ID(s)** (old IDs).
3. Enter the **Target Equipment ID(s)** (new IDs):
 - a. If the **No** radio button is selected (default), enter all Target IDs in the order desired.
 - b. If the **Yes** radio button is selected (so numeric gaps present in the Source Equipment IDs are preserved with the Target IDs), provide only the starting Target ID. Umler calculates the remaining IDs, preserving the gaps.
4. Select **Submit**. The Restencil Multiple Equipment page is redisplayed with common elements for the type of car ([Exhibit 103](#)).

Exhibit 103. Restencil Multiple Equipment Update Record

Restencil Multiple Equipment

Source Equipment ID(s): BNSF0000712849, BNSF0000712887
 Target Equipment ID(s): RAIL0000666667, RAIL0000666668
 Number of Equipment Units: 2

[Elements Common across BOXC](#)

Element Name	ID	Flag	Source	Del	Value	Error
Umler Effective Date	EFDI				06/01/2023	
Maintenance Party	MNPT					
Registration Reason	R174					
First Movement Date	USAT					
Owner	UMOW				RAIL	
Status Code	USCD				P - PRE-REGISTERED	

[Submit](#) [Clear](#) [Suspend](#) [Cancel](#)

5. In [Exhibit 103](#), the **Owner** field needed to be changed to RAIL. Optionally, an **Effective Date** of 06/01/2023 was added.

Other elements might need to be changed as well. The status of restenciled multiple cars is **Pre-Registered**, which should be changed as appropriate via Modify, or via Query.

6. Select **Submit**. If validation succeeds, the Equipment Updates Submitted to the System page is displayed (similar to [Exhibit 99](#)).
7. Select **OK** to return to the Multiple Restencil page.

Change Equipment Group

The Change Equipment Group function allows a user to change an Umler Equipment Group for a single equipment unit. Examples are a flat car is having a box installed and is being rebuilt as a box car, or a V-Flat is having an auto rack removed/installed.

Use the following procedure to change an equipment ID's equipment group:

1. From the main menu, select **Maintenance > Add/Change/Delete > Change Equipment Group**. The Change Equipment Group page is displayed ([Exhibit 104](#)).

Exhibit 104. Change Equipment Group

Change Equipment Group

Equipment ID *

[Validate](#) [Submit](#) [Clear](#) [Cancel](#)

2. Enter the **Equipment ID**. If Change Equipment Group action is selected from a query, Equipment ID is populated with the selected Equipment ID.

3. Select **Submit**. The Change Equipment Group page is redisplayed with two new fields ([Exhibit 105](#)). This also occurs if **Validate** is selected first.

Exhibit 105. Change Equipment Group

Change Equipment Group

Please select a Target Equipment Group.

Equipment ID *
RAIL0000006506

Equipment Group
BOXC

Target Equipment Group *
FLAT - FLAT CAR

The existing **Equipment Group** is shown at the right (BOXC).

The **Target Equipment Group** drop-down list only contains eligible groups for change. In [Exhibit 105](#), FLAT has been selected.

4. Select the new **Equipment Group** from the drop-down list and select **Submit**. The Change Equipment Group (Modify Equipment task) page is displayed ([Exhibit 106](#)).

Exhibit 106. Change Equipment Group - Modify Equipment Task

Invalid Elements and Components for this equipment group will be deleted.

Change Equipment Group

Equipment ID: RAIL 6506
Equipment Group: FLAT

Target Equipment Group:

[General](#)
[Weight](#)
[Dimension](#)
[Specification](#)
[Feature](#)
[Cost](#)
[Car Management](#)
[Train Service](#)
[Truck Components](#)
[Draft System Components](#)
[Unit Segment Components](#)
[Brake System Components](#)
[Miscellaneous](#)
[Inspection](#)

Default Presentation Group

Element Name	ID	Flag	Current Value	Del	New Value	Notice Value	Error
Status Code	USCD						
Mechanical Designation	UMMD		XP				
Equipment Type Code	UMET		A403				
Dedicated Service	B346						
Maint of Way Service Type	B403						
Built Date	BLDT		02/24/2010				
Rebuilt / ILS Date	RRDT						

5. Modify fields as required. Refer to [Modify Single Equipment](#) for instructions. All mandatory fields must be completed.

6. (Optional, but highly recommended) Select **Validate**. Any errors generated by the Equipment Group change will be highlighted in red at the right of the display. Refer to Add Equipment [Step 9](#) for addressing error correction.



If validation fails after several attempts at correction and revalidation, select **Suspend** to save the work until error corrections can be clearly identified. The Suspend Work page is displayed ([Exhibit 84](#)). See [Suspended Work](#) to resume the Modify Equipment task.

7. When all errors have been corrected, select **Submit**. The Equipment updates submitted to the system page is displayed ([Exhibit 107](#)).

Exhibit 107. Equipment Updates Successfully Submitted

Equipment updates submitted to the system

Success

All updates were successfully applied to the system

Equipment transactions submitted : 1
 Successful equipment transactions : 1
 Partially successful transactions : 0
 Failed equipment transactions (Notices) : 0

Inspections transactions submitted : 0
 Successful Inspection transactions : 0
 Failed Inspection transactions (Notices) : 0

Equipment with errors on the current record (Conflicts) : 0

[Done](#)

8. If conflicts or errors exist, a **Notice ID** link is provided so you can resolve any remaining issues.
9. Select **OK** to return to the Umler Home/Welcome page.
10. (Optional) To verify Umler has accepted the equipment group change, query the Equipment number ([Exhibit 108](#)).

Exhibit 108. Equipment Query Results - Verify Change Equipment Group

Equipment Query Results

Search Criteria Search Results

Select one or more equipment IDs, and an action, for pool management/equipment management. You may also click an equipment ID to display it.

1 matches found. 1 available for display. 1 matches displayed on this page.

AFMC Inspection [Apply](#) [Clear Filters](#)

☐	Equipment Id	Pool Number	Equipment Group	Equipment Type C...	Mechanical Desig...	Stenciled Mark O...	Lessee
☐	RAIL 6506	0000000	FLAT	F441	FB	RAIL	

11. (Optional) If needed, view the Transaction Log to see a list of all fields actually changed for the equipment. See [Transaction Log](#).

Update Equipment Maintenance Party

This function allows you to update the Equipment Maintenance Party which identifies the responsible maintenance party for the equipment unit. This field can be populated with the owner, the lessee, or a third party. If the field is blank, the car owner is the default responsible maintenance party.

Use the following procedure to update the Maintenance Party for equipment IDs:

1. From the main menu, select **Maintenance > Add/Change/Delete > Update Equipment Maintenance Party**. The Update Equipment Maintenance Party page is displayed ([Exhibit 109](#)).

Exhibit 109. Update Equipment Maintenance Party

Update Equipment Maintenance Party

Enter the Maintenance Party Mark for specified equipment ID(s)

+ Add Row
✓ Validate
Submit
⏸ Suspend
🧹 Clear
✕ Cancel

Equipment ID(s) *:	Maintenance Party Mark:

NOTE: Leaving an empty Maintenance Party Mark will set the Maintenance Party Mark to the system default - the Stencilled Mark Owner.

2. Enter the Equipment ID(s). If Update Equipment Maintenance Party action is selected from a query, this field is populated with the selected Equipment IDs.
3. Enter the appropriate mark for the new maintenance party.
4. Select **Submit**. The Data Submitted to the System page is displayed (similar to [Exhibit 85](#)).
5. Select **OK**. You are returned to the previous page.
6. (Optional) Verify the maintenance party update by querying the equipment IDs.

Delete Equipment

Equipment is never actually deleted, but the record becomes inactive. Equipment deletions can be reversed using the Add-Back Equipment task. See [Add-Back Equipment](#). The Delete Equipment function allows a user to deactivate an Umler record, sending the record to archive.

Use the following procedure to delete a record:

1. From the main menu, select **Maintenance > Add/Change/Delete > Delete Equipment**. The Delete Equipment page is displayed ([Exhibit 110](#)).

Exhibit 110. Delete Equipment

Delete Equipment

☐ Validate

Enter equipment IDs for deletion, and then click the "Submit" button.

Equipment ID(s) *

☐ Validate

2. Enter in the Equipment ID(s). If Delete Equipment action is selected from a query, this field is populated with the selected Equipment IDs.
3. Select **Submit**. The Confirm Deletion of equipment page is displayed ([Exhibit 111](#)).

Exhibit 111. Confirm Deletion of Equipment

Confirm Deletion of Equipment ?

Equipment Count: 1


Select the equipment units you wish to delete, then click the "Submit" button.

☐	Delete Reason	Equipment ID	Pool Number	Status	Lessee	Umler Owner
☒	Restenciled Destroyed or wrecked Lease terminated, removed from fleet Retired unserviceable beyond economic repair	RAIL 6130	0000000	A		RAIL

4. For each equipment ID listed:
 - a. Check the boxes beside the records.

Select an appropriate Delete Reason from the drop-down for the first ID. Valid values are shown in [Exhibit 112](#).

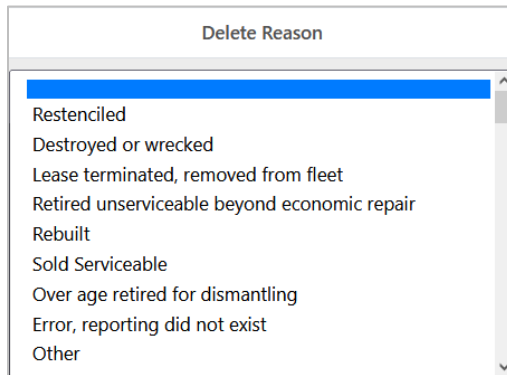
Exhibit 112. Delete Reasons



A screenshot of a web application's 'Delete Reason' dropdown menu. The menu is open, showing a list of reasons for deleting equipment. The first option, 'Restenciled', is highlighted in blue. The list includes: Restenciled, Destroyed or wrecked, Lease terminated, removed from fleet, Retired unserviceable beyond economic repair, Rebuilt, Sold Serviceable, Over age retired for dismantling, Error, reporting did not exist, and Other. The dropdown has a scroll bar on the right side.

- c. If the reason for the deletions is the same for all equipment IDs listed, select the down arrow icon () to the right of the drop-down, to populate the remaining fields with the same delete reason.
5. When all IDs to be deleted have reasons, select **Submit**. The Delete Confirmation panel provides one last chance to not delete the equipment IDs.

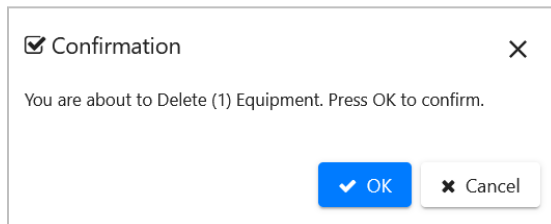Exhibit 113. Delete Confirmation



A screenshot of a 'Delete Confirmation' dialog box. The dialog has a title bar with a close button (X). The main text reads: 'You are about to Delete (1) Equipment. Press OK to confirm.' There are two buttons at the bottom: a blue 'OK' button with a checkmark icon and a white 'Cancel' button with an X icon.

6. To delete, select **OK**. The Delete Equipment Summary page is displayed ([Exhibit 114](#)).

Exhibit 114. Delete Equipment Summary



A screenshot of the 'Delete Equipment Summary' page. The page has a title 'Delete Equipment Summary' in red. Below the title, there is a table with the following data:

Equipment Delete Total:	1
Equipment Delete Success:	1
Equipment Delete Failed:	0

At the bottom right of the page, there is a blue 'Done' button with a checkmark icon.

7. To exit this page, select **Done** or another Umler menu item.

Add Addition and Betterment

The Add Addition and Betterment (A&B) screen allows you to add positive or negative values to the equipment's original value to show that value has been added or subtracted from the equipment. When A&B is successfully submitted, Umler automatically calculates and updates the A&B and Ledger values. It is recommended that you check the A&B values for your equipment using [Display Unit](#) to verify the A&B Type for the equipment has not already been added. When A&B has already been added for the A&B Type, you'll need to remove the existing A&B using a negative amount before adding a new A&B with the new amount.

Use the following procedure to add A&B to equipment:

1. From the main menu, select **Maintenance > Add/Change/Delete > Add Addition and Betterment**. The Add Addition and Betterment page is displayed ([Exhibit 115](#)).

Exhibit 115. Add Addition and Betterment

*Equipment ID(s)	*A&B Pos/Neg Ind	*A&B Amount	*A&B Date Done	*A&B Type
AARE 120	P - Positive	1000	04/01/2026	GNRL-General - Capitalized Additions and Betterments

2. Enter the ***Equipment ID(s)** for which Addition and Betterment is to be recorded.
3. Complete the required fields (in bold ***red** with asterisk):

Field	Description
*A&B Pos/Neg Ind	Select P - Positive or N - Negative from the drop-down list to show if the value should be added to or subtracted from the original value.
*A&B Amount	Enter the A&B value amount (e.g., 1000).
*A&B Date Done	Use the calendar picker (📅) to select the date the A&B was determined.
*A&B Type	Select the A&B Type from the drop-down list.

4. As needed to populate entries in rows below with the same value: Use the down arrow (↓) to repeat the entry for all successive fields.
5. When all required fields are entered, select **Submit**.
6. A confirmation is displayed ([Exhibit 116](#)). Select **Done** to return to the Home page. You will receive an email shortly to let you know if the submission has been successfully processed.

Exhibit 116. Addition and Betterment Confirmation and Email Summary

Addition and Betterment transaction submitted successfully

Done

From: no-reply@railinc.com <no-reply@railinc.com>

Sent: Friday, April 10, 2026 3:22 PM

To: [REDACTED]

Subject: Summary of Addition and Betterment processing

Summary of Addition and Betterment processing

Number of transactions submitted = 1

Number of transactions successful = 1


Number of transactions failed = 0

Equipment processed:

AARE0000000120 - Successful

Car Management

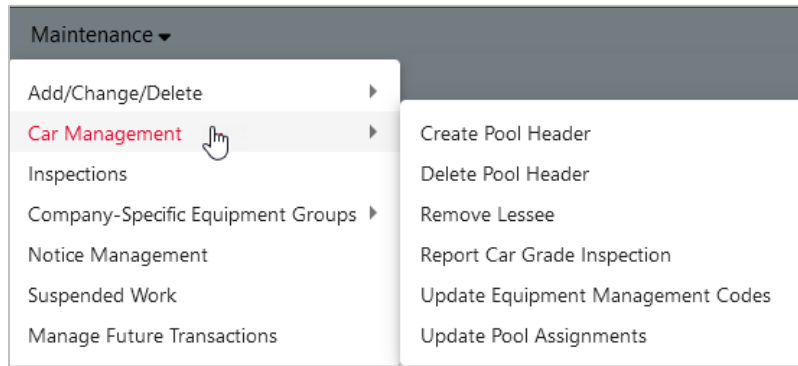Exhibit 117. Car Management Submenu



[Exhibit 118](#) describes the options on the Car Management submenu.

Exhibit 118. Car Management Submenu Items and Descriptions

Menu Item	Description
Create Pool Header	Allows a user to create a new Pool header (for a new Pool ID).
Delete Pool Header	Allows a user to delete a Pool header.
Remove Lessee	Allows a user to remove a lessee from Equipment IDs.
Report Car Grade Inspection	Allows a user to report car grade inspections.
Update Equipment Management Codes	Allows a user to change selected elements for several equipment units in one editing session.
Update Pool Assignments	Allows a user to update pool assignments for one or multiple pools.

Create Pool Header

Before equipment can be assigned to a pool, a pool header must be established. The pool header identifies the pool ID, the type of pool (commodity, agent, shipper, contaminated, or national), a descriptive name for the pool, pool location information, and the pool operator(s) if applicable. After a Pool Header is established, equipment may be assigned (added) to the pool.

Use the following procedure to create a pool header:

1. From the main menu, select **Maintenance > Car Management > Create Pool Header**. The create Pool Header page is displayed ([Exhibit 119](#)).

Exhibit 119. Create Pool Header

Create Pool Header

Validate

Submit

Suspend

Reset

Clear

Cancel

Pool ID *

Description *

Extended Description

Reporter

Loading Location *

Q

State/Province *

Operator 1 *

Pool Type Code *

Operator 2

Operator 3

Operator 4

☒ Now ☐ Future

Validate

Submit

Suspend

Reset

Clear

Cancel

2. Complete ***mandatory** and optional fields. See [Exhibit 120](#).

Field Descriptions for the top of the page are shown below:

Exhibit 120. Pool Header Fields

Field	Description
*Pool ID	Type a valid seven-digit pool ID. Positions 1 through 3 are the pool operator's AAR Accounting Code (or Rule 260 Code), positions 4 through 7 are pool IDs assigned by the pool operator. Input the specific Pool IDs or search with a range or a wildcard. See Exhibit 23 for more information. Note: All unassigned equipment uses pool ID = 0000000.
*Description	General description of the pool (20 characters max).
Extended Description	More detailed description of the pool (80 characters max).
Reporter	Assigned alphabetic reporting mark of the carrier reporting for non-mechanized operators that have made such an agreement with the reporting road (4 characters max).
*Loading Location	The actual shipper loading point or plant location or railroad holding point. Must be a valid SPLC location (19 characters max). Use the search icon (🔍) to open the Station Lookup page (Exhibit 40).
*State/Province (Loading)	Indicates the state or province where the pool is located. This is automatically populated with Station Lookup results.
Held-Short Location	Actual location where equipment is held-short if not able to be placed at the loading location. Must be a valid SPLC location (19 characters max). Use the search icon (🔍) to open the Station Lookup page (Exhibit 40).
State/Province (Held-Short)	Indicates the State/Province where the equipment is held-short. This is automatically populated with Station Lookup results.
*Operator 1	Assigned alphabetic reporting mark of the actual operator of a specific pool (4 characters max).
Operators 2, 3 and 4	Four-position Marks indicating the actual operators of a specific pool. Used in the case of Joint Pools to indicate the parties participating in the pool.
*Pool Maintenance Code	0 = Not Applicable 1 = Auto/truck loading multi-level flat cars 2 = Specially equipped chain tie-down cars 3 = Equipped with cross bar interior restraining devices 4 = Automobile parts and bulkhead equipped equipment 5 = Automobile and truck frame equipment 6 = Flat cars equipped for saddleback loading

Field	Description
*Pool Type	Used to identify a type of railroad pool assignment: C = Equipment assigned to a specific shipper at a specific location G = Contaminated cars J = Equipment assigned to an agent N = Similar to the C Pool, except, the equipment is not assigned to a specific shipper or loading point (National Pools). O = Equipment assigned to Recall pools P = Pool comprised of equipment assigned to accommodate a specific commodity. T = Pool comprised of equipment assigned to an agent.

- (Optional) Choose the **Future** radio button to delay the pool addition to a future date. The page expands with an On Future Date field. Refer to Update Pool Header [Step 3](#).
- When all fields have been completed, select one of the options described in [Exhibit 51](#).

When the pool header has been successfully created, it can be populated with equipment using a query results [action](#), modifying an [Equipment ID](#), or using [Update Pool Assignments](#).


Delete Pool Header

This function allows a user to delete a pool header. Only pools without assigned equipment can be deleted. Deleting a Pool Header can be done from a menu choice, or a car management [Pool View](#) query results action.

Use the following procedure to delete a pool header:

1. From the main menu, select **Maintenance > Car Management > Delete Pool Header**. The Delete Pool Header page is displayed ([Exhibit 121](#)).

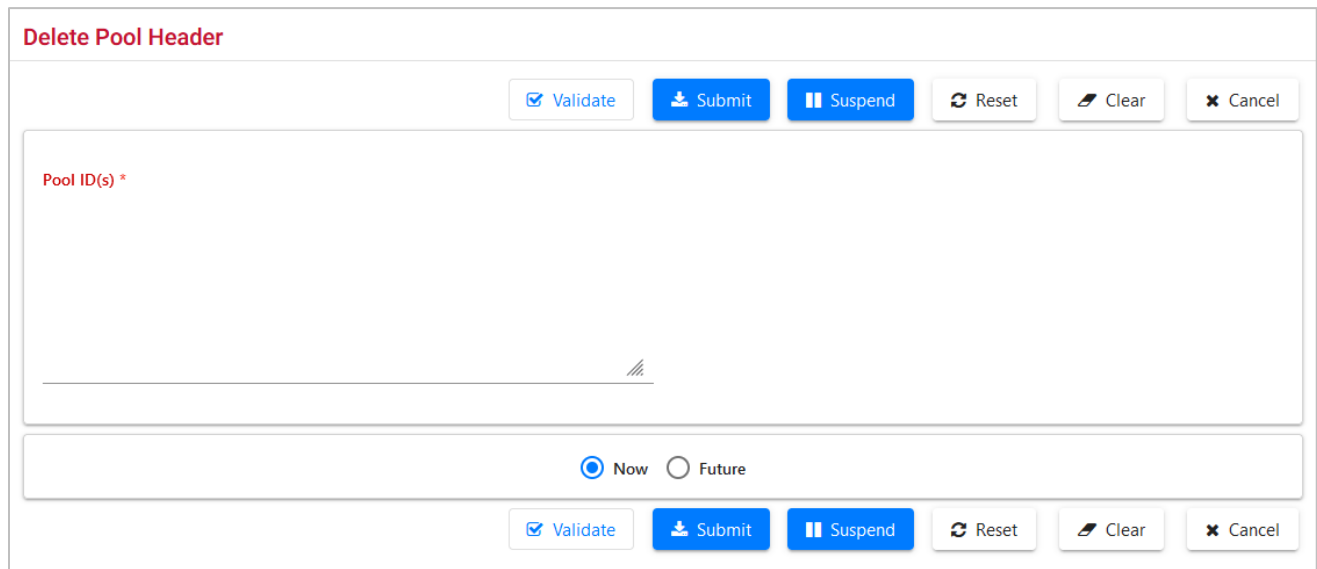Exhibit 121. Delete Pool Header



2. Enter the **Pool ID(s)** to be deleted. If the Delete Pool action was selected from a query, the Pool ID(s) field is populated with selected Pool IDs.
3. (Optional) Choose the **Future** radio button to delay the deletion to a future date. The page expands with an On Future Date field. Refer to Update Pool Header [Step 3](#).
4. Select **Submit** to delete the pool header or select one of the other processing options (similar to [Exhibit 51](#)).

Remove Lessee

Remove a Lessee function allows railroads to remove themselves from the lessee field of foreign equipment. Removing the lessee can result in the equipment's removal from its current pool assignment (if any). In turn, removal of the equipment from a pool may result in new equipment management codes being applied.

Removing a Lessee can be done from a menu choice, query results [action](#), or while modifying an [Equipment ID](#).

Use the following procedure to remove a lessee:

1. From the main menu, select **Maintenance > Car Management > Remove Lessee**. The Enter Equipment IDs for Lessee Removal page is displayed ([Exhibit 122](#)).

Exhibit 122. Enter Equipment IDs for Lessee Removal

2. Enter the **Equipment ID(s)** to have Lessee removed. If the Remove Lessee action was selected from a query, the Equipment ID(s) field is populated with selected Equipment IDs.
3. Select one of the processing options (similar to [Exhibit 51](#)).

Report Car Grade Inspection

When **Maintenance > Car Management > Report Car Grade Inspection** is selected from the menu, the Car Grade Inspection page is displayed ([Exhibit 145](#)). This can also be access using the Inspection menu item. See [Car Grade Inspection](#) for instructions.

Update Equipment Management Codes

There are five basic types of codes used in the Equipment Management Code structure: user defined routing, system generated, pool control, mechanical restriction and mechanical restriction reason. This section explains how to determine existing equipment management codes and how to update these codes. The system also uses the Legacy UMLER transportation codes and transportation condition codes.

Exhibit 123. Equipment Management Codes

CODE	DESCRIPTION
MD	Mechanical designation
UR	User defined routing (Exhibit 127)
SG	System generated
PC	Pool control
MR	Mechanical restriction (Exhibit 128)
MRR	Mechanical restriction reason (Exhibit 129)
TC	Umler transportation code
TCC	Umler transportation condition code

Use the following procedure to change equipment management codes:

1. From the main menu, select **Maintenance > Car Management > Update Equipment Management Codes**. The Update Car Management Codes page is displayed ([Exhibit 124](#)).
2. Although entering Equipment IDs and requesting changes can be made directly on this page, you might want to begin from an equipment query, or if existing codes need to be viewed first, from a Car Management query (equipment view). Either query allows you to select the Update Equipment Management Codes action for selected Equipment IDs. The Car Management Query path is shown in this instruction.

Exhibit 124. Update Equipment Management Codes

Update Equipment Management Codes

Equipment ID(s) *

User Defined Routing Instructions

Mechanical Restriction

Mechanical Restriction Reason

- From the main menu, select **Query > Car Management Query**. The Pool/Equipment Search page is displayed ([Exhibit 38](#)). Execute the query for the appropriate equipment as described in [Equipment View](#). The Pool/Equipment Search Results page is displayed ([Exhibit 125](#)).

Exhibit 125. Pool/Equipment Search Results - Equipment View

Pool/Equipment Search Results

Search Criteria Search Results

Select one or more equipment ID(s) and an action for pool management/equipment management.

42 matches found. 42 available for display. 42 matches displayed on this page.

Update equipment management codes

	Equipment ID	Pool ...	EIN	EG	ETC	Equipment Management Codes								Car ...	Lessee
						MD	UR	SG	PC	MR	MRI	TC	TC ...		
☐	CRLE 7485	7775165	0001807...	FLAT	F483	FBC			C			C			
☐	CRLE 7486	7775165	0001807...	FLAT	F483	FBC			C			C			
☐	CRLE 7487	7775165	0001807...	FLAT	F483	FBC			C			C			
☐	CRLE 7488	7775165	0001807...	FLAT	F483	FBC			C			C			
☐	CRLE 7489	7775165	0001807...	FLAT	F483	FBC			C			C			

The red box shows the Equipment Management Codes. The UR, MR, and MRR values can be modified.

- Check the boxes beside the Equipment IDs to be modified in *the exact same way*.
- Select **Update Equipment Management Codes** in the action drop-down and select **OK**. The Update Equipment Management Codes page is displayed, prepopulated with selected Equipment IDs ([Exhibit 126](#)).

Exhibit 126. Update Equipment Management Codes

Update Equipment Management Codes

Equipment ID(s) *

CRLE0000007485
CRLE0000007486
CRLE0000007487
CRLE0000007488
CRLE0000007489


User Defined Routing Instructions

Mechanical Restriction

Mechanical Restriction Reason

6. Make updates to the fields:
 - a. User Defined Routing Instruction. Valid values include:

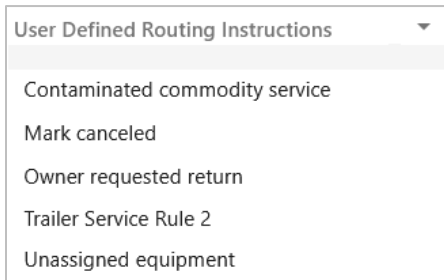
Exhibit 127. User Defined Routing (UR)



A dropdown menu titled "User Defined Routing Instructions" with a downward arrow. The menu is open, showing a list of options: "Contaminated commodity service", "Mark canceled", "Owner requested return", "Trailer Service Rule 2", and "Unassigned equipment".

- b. Mechanical Restriction. Valid values include:

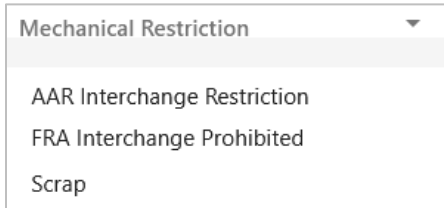
Exhibit 128. Mechanical Restriction (MR)



A dropdown menu titled "Mechanical Restriction" with a downward arrow. The menu is open, showing a list of options: "AAR Interchange Restriction", "FRA Interchange Prohibited", and "Scrap".

- c. Mechanical Restriction Reason. Valid values include:

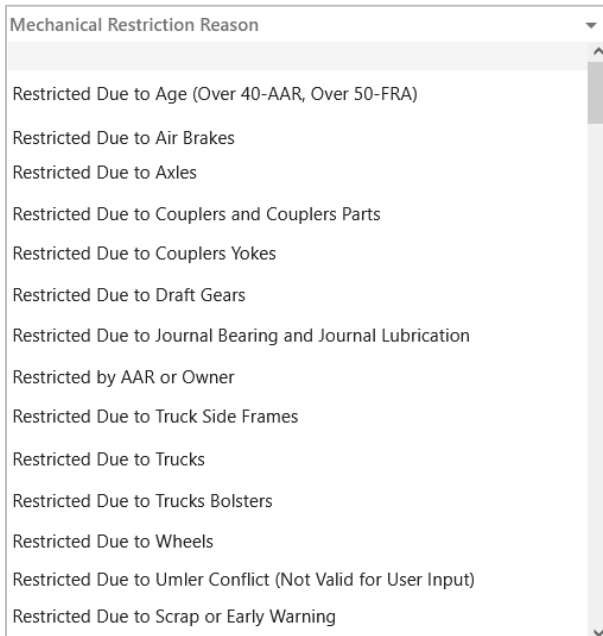Exhibit 129. Mechanical Restriction Reason (MRR)



A dropdown menu titled "Mechanical Restriction Reason" with a downward arrow. The menu is open, showing a list of options: "Restricted Due to Age (Over 40-AAR, Over 50-FRA)", "Restricted Due to Air Brakes", "Restricted Due to Axles", "Restricted Due to Couplers and Couplers Parts", "Restricted Due to Couplers Yokes", "Restricted Due to Draft Gears", "Restricted Due to Journal Bearing and Journal Lubrication", "Restricted by AAR or Owner", "Restricted Due to Truck Side Frames", "Restricted Due to Trucks", "Restricted Due to Trucks Bolsters", "Restricted Due to Wheels", "Restricted Due to Umler Conflict (Not Valid for User Input)", and "Restricted Due to Scrap or Early Warning".

7. When all values are selected, select **Submit**. The Data Submitted to the System page is displayed (similar to [Exhibit 85](#)).
8. If errors are generated, correct and select **Submit**.

9. Select **OK** to exit the page.
10. (Optional) Verify the Equipment Maintenance Code changes have been updated. If returned to the Pool/Equipment Search Results page, select the **Search Criteria** tab and reselect **Search**. The results page is redisplayed with changes made ([Exhibit 130](#)).

Exhibit 130. Pool/Equipment Search Results Showing Updated Codes

Pool/Equipment Search Results

Search Criteria

Search Results

Select one or more equipment ID(s) and an action for pool management/equipment management.

5 matches found. 5 available for display. 5 matches displayed on this page.

AFMC Inspection

						Equipment Management Codes								
☐	Equipment ID	Pool ID	EIN	EG	ETC	MD	UR	SG	PC	MR	MRR	TC	TCC	Car G
☐	CRLE 7485	0000000	0001807492	FLAT	F483	FBC				S	X	S	X	
☐	CRLE 7486	0000000	0001807493	FLAT	F483	FBC				S	X	S	X	
☐	CRLE 7487	0000000	0001807494	FLAT	F483	FBC				S	X	S	X	
☐	CRLE 7488	0000000	0001807495	FLAT	F483	FBC				S	X	S	X	
☐	CRLE 7489	0000000	0001807496	FLAT	F483	FBC				S	X	S	X	

The TC and TCC values were automatically updated by MR and MRR updates.



Only the Railinc Administrator can remove a Mechanical Restriction = S and a Mechanical Restriction Reason = X from a piece of equipment.

11. Select a Umler menu item to exit this page.

Update Pool Assignments

The Update Pool Assignment function allows users to add equipment to Pool IDs.

Updating a Pool Assignment can be done from the menu choice, query results [action](#), or while modifying an [Equipment ID](#).

Use the following procedure to update pool assignments:

1. From the main menu, select **Maintenance > Car Management > Update Pool Assignments**. The Pool Assignment page is displayed ([Exhibit 131](#)).

Exhibit 131. Pool Assignment

Pool Assignment

Specify the desired method for assigning equipment to a pool, the corresponding equipment ID(s), and the destination pool ID(s) NOTE: Entering zeros (0000000) for pool ID will remove equipment from any current pool assignment.

☒ Validate
 ☐ Submit
 ☐ Suspend
 ☐ Reset
 ☐ Clear
 ☐ Cancel

☒ Assign equipment to one pool.

Equipment ID(s) *:

Pool ID *:

☐ Assign equipment to individual pools.

☒ Now
 ☐ Future

☒ Validate
 ☐ Submit
 ☐ Suspend
 ☐ Reset
 ☐ Clear
 ☐ Cancel

This page has two sections. The top allows you to assign multiple equipment IDs into one pool. The bottom allows you to place various individual equipment IDs into respective pools. You must know the pool numbers before beginning. There is no search function on this page—Use a Car Management Query (Pool View) to search. See [Pool View](#).

2. Select the appropriate radio button for the desired assignment. Continue with:
 - [Assign Equipment to One Pool](#)
 - [Assign Equipment to Individual Pools](#)

Assign Equipment to One Pool

Enter the **Equipment ID(s)**. See [Exhibit 23](#) for acceptable formats for entering multiple IDs.

4. Tab and enter the appropriate single **Pool ID**.

(Optional) Select the **Future** button to delay the assignment, if appropriate. See [Exhibit 50](#).

6. Select one of the processing options (similar to [Exhibit 51](#)).

Assign Equipment to Individual Pools

Enter the first equipment ID in the **Equipment ID(s)** field.

4. Tab and enter the appropriate **Pool ID** for that equipment.
5. Repeat for each piece of equipment (up to 10 equipment units for this page).
6. (Optional) Select the **Future** button to delay the assignment, if appropriate. See [Exhibit 50](#).
7. Select one of the processing options (similar to [Exhibit 51](#)).

Adding From a Query

If Add to Pool action is requested for selected equipment on the Equipment Query Results page, the Pool Assignment page is displayed prepopulated with selected Equipment IDs ([Exhibit 132](#)).

Exhibit 132. Pool Assignment From a Query

Pool Assignment

☒ Validate ☐ Submit ☐ Suspend ☐ Reset ☐ Clear ☐ Cancel

Enter the destination pool ID for the specified equipment. (A partial pool ID is not allowed.) NOTE: Entering zeros (0000000) for pool ID will remove equipment from any current pool assignment.

Equipment ID(s) *:	Pool ID *:
CRLE0000021796 CRLE0000021797 CRLE0000021798 CRLE0000021799 CRLE0000021800	7775165

☒ Now ☐ Future

☒ Validate ☐ Submit ☐ Suspend ☐ Reset ☐ Clear ☐ Cancel

1. Tab and enter the appropriate single **Pool ID**.
2. (Optional) Select the **Future** button to delay the assignment, if appropriate. See [Exhibit 50](#).
3. Select one of the processing options (similar to [Exhibit 51](#)).

Removing from a Query

If Remove from Pool action is requested for selected equipment on the Equipment Query Results page, the Confirm Pool Unassignment page is displayed prepopulated with selected Equipment IDs ([Exhibit 133](#)).

Exhibit 133. Confirm Pool Unassignment

Confirm Pool Unassignment

☒ Validate

☐ Submit

☐ Suspend

☐ Reset

☐ Clear

☐ Cancel

Are you sure you want to remove the following equipment from the current pool assignment?

CRLE0000021796
CRLE0000021797

☒ Now ☐ Future

☒ Validate

☐ Submit

☐ Suspend

☐ Reset

☐ Clear

☐ Cancel

(Optional) Check Future to delay the unassignment, if appropriate. See [Exhibit 50](#).

2. Select one of the processing options (similar to [Exhibit 51](#)).


Inspections

The Maintenance Inspections function is used to record inspection and service data for equipment.

Use the following procedure to record inspections and services:

1. From the main menu, select **Maintenance > Inspections**. The Inspections page is displayed ([Exhibit 134](#)).

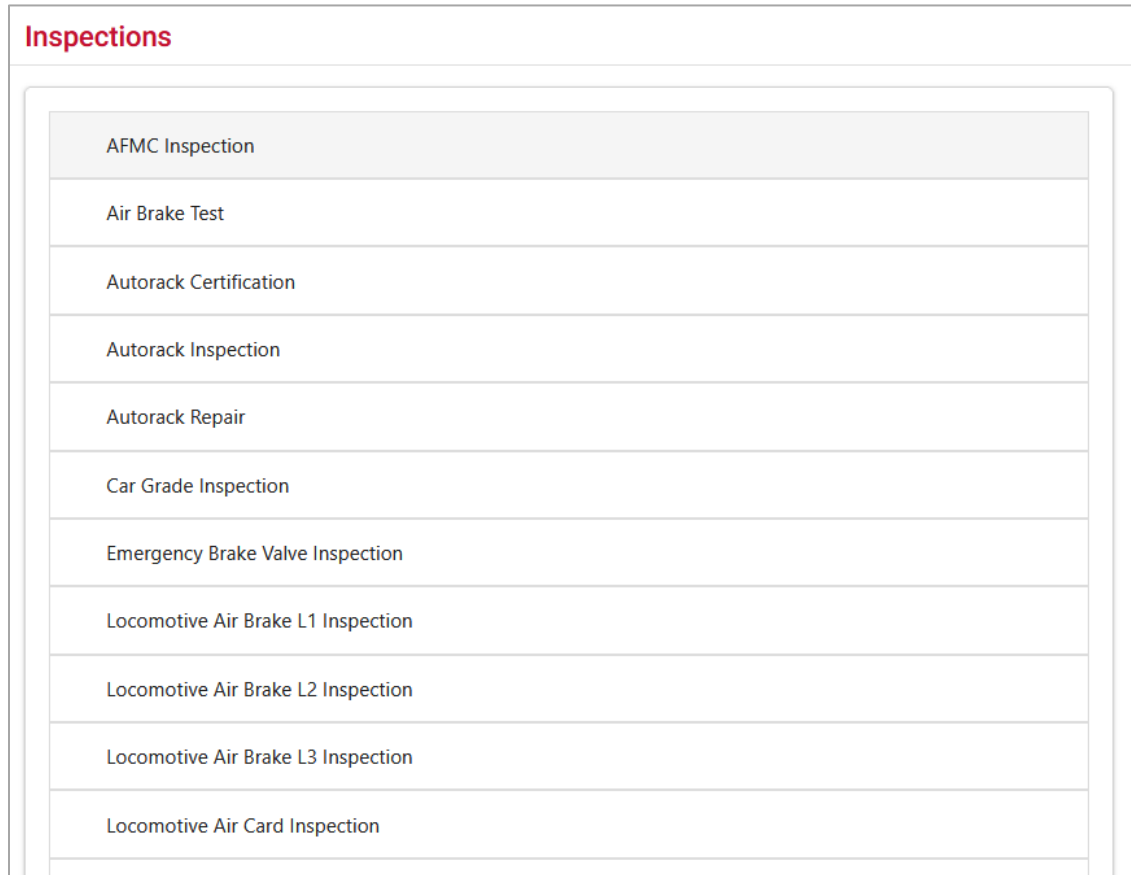Exhibit 134. Inspections



The screenshot displays the 'Inspections' page within a software interface. At the top, the word 'Inspections' is written in red. Below this, there is a list of inspection types, each in its own row. The first row, 'AFMC Inspection', is highlighted with a light gray background. The other rows have white backgrounds. The list includes: AFMC Inspection, Air Brake Test, Autorack Certification, Autorack Inspection, Autorack Repair, Car Grade Inspection, Emergency Brake Valve Inspection, Locomotive Air Brake L1 Inspection, Locomotive Air Brake L2 Inspection, Locomotive Air Brake L3 Inspection, and Locomotive Air Card Inspection.

Inspection Type
AFMC Inspection
Air Brake Test
Autorack Certification
Autorack Inspection
Autorack Repair
Car Grade Inspection
Emergency Brake Valve Inspection
Locomotive Air Brake L1 Inspection
Locomotive Air Brake L2 Inspection
Locomotive Air Brake L3 Inspection
Locomotive Air Card Inspection

Locomotive Annual Inspection
Locomotive Cab Signals Inspection
Locomotive Event Recorder Inspection
Locomotive Hand Brake Inspection
Locomotive Inspection Due Date Update
+ Locomotive Inspections
Locomotive Out of Service
Locomotive Periodic Inspection
Locomotive RCL Inspection
Locomotive Storage Event
Qualified Locomotive Manual Inspection
Reflectorization Event
Service Brake Valve Inspection
Vehicular Flat Car Certification

2. Select the link for the inspection or service to be recorded. The corresponding page for that inspection is displayed. Because many of the inspection pages are similar, only one description is provided for each unique interface, as shown in [Exhibit 135](#).

Exhibit 135. Inspection/Service Processing

Inspection/Service	Processing Flow Reference
AFMC Inspection	AMFC Inspection
Air Brake Test	Air Brake Test
Autorack Certification	
Autorack Repair	
Door Lube Inspection	
Reflectorization Event	
Vehicular Flat Car Certification	
Autorack Inspection	Autorack Inspection
Car Grade Inspection	When all required fields are entered, select one of the options from Exhibit 137 . Car Grade Inspection
Locomotive Air Brake Inspection L1, L2 and L3	When all required fields are entered, select one of the options from Exhibit 137 . Locomotive Air Brake L1 Inspection
Locomotive Air Car Inspection	
Locomotive Annual Inspection	

Inspection/Service	Processing Flow Reference
Locomotive Cab Signals Inspection Locomotive Event Recorder Inspection Locomotive Hand Brake Inspection Locomotive Out of Service Locomotive Periodic Inspection Locomotive RCL Inspection QMI Daily Inspection	
Locomotive Inspection Due Date Update	When all required fields are entered, select one of the options from Exhibit 137 . Locomotive Inspection Due Date Update
Locomotive Storage Event	Locomotive Storage Event

Selecting equipment, highlighting an inspection action from the query results page drop-down ([Exhibit 32](#)) and selecting **Apply** navigates directly to the corresponding inspection pages described in the following sections.

AMFC Inspection

When the **AMFC Inspection** link is selected, the AMFC Inspection page is displayed ([Exhibit 136](#)).

Exhibit 136. AMFC Inspection

The screenshot shows the AMFC Inspection form. At the top, there's a title 'AMFC Inspection' and a '+ Add Row' button. Below this is a table with 7 columns: '*Equipment ID(s):', '*Inspection Reporter:', '*Inspection Performer:', '*Inspection Conducted by:', '*Inspection Certified by:', '*Location/SPLC:', and '*Inspection Date Done:'. Each column has a search icon and a dropdown arrow. Below the table are buttons for 'Validate', 'Submit', 'Suspend', 'Clear', and 'Cancel'.

1. Enter the ***Equipment ID(s)** for which an inspection is to be recorded. Equipment IDs may already be populated if this page was accessed with selections from a query ([Exhibit 32](#)).
2. Complete the required fields (in bold ***red** with asterisk):

Field	Description
*Inspection Reporter	Select the 4-character Mark from the drop-down list for the person or organization reporting the inspection.
*Inspection Performer	Enter the 3 to 4-character Mark for the person/shop who performed the inspection.
*Inspection Conducted by	Enter the name of person/shop who conducted the inspection.
*Inspection Certified by	Enter the name of person/shop who certified the inspection.
*Location/SPLC	Use the search icon () to select the SPLC where the inspection was performed (Exhibit 139).
*Inspection Date Done	Use the calendar picker () to select the date the inspection was performed.

3. When all required fields are entered, select one of the inspection processing options:

Exhibit 137. Inspection Processing Options

Validate	Validates data before submission to facilitate error correction.
Submit	Send the data to the system. Validation occurs first, so error correction can be done. If successful, a message similar to Exhibit 137 .

	Exhibit 143 is displayed.
Suspend	Saves the inspection input for completion later. Opens the Suspend Work page (similar to Exhibit 84). See Suspended Work to resume the inspection task.
Clear	Clears any entries, resetting to a blank form.
Cancel	Cancels the entry and returns to the Inspections page.

4. Select **Done** to return to the Inspections page ([Exhibit 134](#)).

Air Brake Test

When the **Air Brake Test** link is selected, the Air Brake Test page is displayed ([Exhibit 138](#)). The same interface is used for Autorack Certification, Autorack Repair, Door Lube Inspection, Reflectorization Event, and Vehicular Flat Car Certification. Check the page title to verify it reflects the appropriate inspection/service.

Exhibit 138. Air Brake Test

1. Enter the ***Equipment ID(s)** for which an inspection is to be recorded. This field may already be populated if this page was accessed with selections from a query ([Exhibit 32](#)).
2. Complete the required fields (in bold ***red** with asterisk):

Field	Description
*Inspection Reporter	Select the 4-character Mark from the drop-down list for the person or organization reporting the inspection.
*Inspection Performer	Enter the 3 to 4-character Mark for the person/shop who performed the inspection.
*Inspection Date Done	Use the calendar picker (📅) to select the date the inspection was performed.

-
- *Location/SPLC** Use the search icon (🔍) to select the SPLC where the inspection was performed ([Exhibit 139](#)).
-
- *Air Brake Test Device** Select either A-Automatic or M-Manual.
-

Exhibit 139. SPLC Lookup

SPLC LookUp

Location *

Begins With

State/Province

-Select One State/Province-

County Name

Search Cancel

- a. Enter criteria for SPLC Lookup and select **Search**. The SPLC Lookup Results page is displayed ([Exhibit 140](#)).

Exhibit 140. SPLC Lookup Results

SPLC LookUp

Number of SPLC(s): 24 Clear Filters

SPLC	Location	State/Province	County Name
380610000	CHICAGO CANK ST	IL	COOK
380644000	CHICAGO PASSENGER STATION	IL	COOK
380646000	CHICAGO ENGLEWOOD TVT	IL	COOK
380647000	CHICAGO 82ND ST	IL	COOK
380662000	CHICAGO 67 ST	IL	COOK
380666000	CHICAGO 94TH STREET	IL	COOK
380675000	CHICAGO 110TH ST	IL	COOK
381303000	CHICAGO 21ST STREET	IL	COOK
381305000	CHICAGO 55TH STREET	IL	COOK
381332000	CHICAGO RIDGE	IL	COOK
381473000	CHICAGO HTS TERM TRANSFER	IL	COOK
381474000	CHICAGO HEIGHTS	IL	COOK

Select Cancel

- b. Select the radio button beside the correct location and choose **Select**. The results are used to populate the Location field. First row entry might appear as shown in [Exhibit 141](#).

Exhibit 141. Air Brake Test

Air Brake Test

+ Add Row Validate Submit Suspend Clear Cancel

*Equipment ID(s):	*Inspection Reporter:	*Inspection Performer:	*Inspection Date Done:	*Location/SPLC:	*Air Brake Test Device:
csxt129021	RAIL	RAIL	06/30/2023	381332000	M - Manual

+ Add Row Validate Submit Suspend Clear Cancel

3. As needed to populate entries in rows below with the same value: Use the down arrow (↓) to repeat the entry for all successive fields. In [Exhibit 142](#), some columns were repeated using the down arrow icon.

Exhibit 142. Air Brake Test With Repeated Columns

Air Brake Test

+ Add Row Validate Submit Suspend Clear Cancel

*Equipment ID(s):	*Inspection Reporter:	*Inspection Performer:	*Inspection Date Done:	*Location/SPLC:	*Air Brake Test Device:
csxt129021	RAIL	RAIL	06/30/2023	381332000	M - Manual
csxt129022	RAIL	RAIL	06/30/2023	381332000	A - Automatic (Non 4-Pressure)
csxt129023	RAIL	RAIL	06/30/2023	381332000	M - Manual
csxt129024	RAIL	RAIL	06/30/2023	381332000	P - Automatic (4-Pressure)

+ Add Row Validate Submit Suspend Clear Cancel

4. When all required fields are entered, select one of the options from [Exhibit 137](#).

Exhibit 143. Air Brake Test Results Submitted

Data submitted to the system	
	✓ Done

5. Select **Done** to return to the Inspections page ([Exhibit 134](#)).

Autorack Inspection

When the **Autorack Inspection** link is selected, the Autorack Inspection page is displayed ([Exhibit 144](#)).

Exhibit 144. Autorack Inspection

Autorack Inspection

☒ Validate

☒ Submit

☐ Suspend

Clear

Cancel

*Equipment ID(s):

*Inspection Reporter:

*Inspection Performer:

*Inspection Date Done:

*Location/SPLC:

*Inspector ID:

*Exterior Door:

*Exterior Roof Sheets:

*Exterior Shear Panel:

*Exterior Side Screens:

*Interior Door:

*Interior Shear Panel:

*Interior Side Posts:

*Top Deck Surface:

*Underside of Deck:

☒ Validate

☒ Submit

☐ Suspend

Clear

Cancel

1. Complete the first five fields as described in Air Brake Test [Steps 5](#) and [6](#).
2. Enter the Autorack Inspector ID.
3. Complete the remaining nine fields using the drop-down list on the right to select the appropriate rating.
4. When all required fields are entered, select one of the options from [Exhibit 137](#).

Car Grade Inspection

When the **Car Grade Inspection** link is selected, the Car Grade Inspection page is displayed ([Exhibit 145](#)).

Exhibit 145. Car Grade Inspection

Car Grade Inspection

Report a new car grade inspection for each individual car and press "Submit".

+ Add Row

☒ Validate
 ☒ Submit
 ☐ Suspend
 ☐ Clear
 ☐ Cancel

* Inspecting Mark :

RAIL

* Equipment ID(s)	* Car Grade	* Date	* Time	* Location/SPLC
		07/28/2023	: ☒ AM ☐ PM	
		07/28/2023	: ☒ AM ☐ PM	
		07/28/2023	: ☒ AM ☐ PM	
		07/28/2023	: ☒ AM ☐ PM	
		07/28/2023	: ☒ AM ☐ PM	

+ Add Row

☒ Validate
 ☒ Submit
 ☐ Suspend
 ☐ Clear
 ☐ Cancel

1. Enter the 3- to 4-character Inspecting Mark (or use drop-down list to select from those roads the logged in user is authorized to represent).
2. For each graded equipment (10 max this page) enter:

Field	Description
*Equipment ID(s)	Enter the Equipment ID for which a car grade inspection is to be recorded. This can be automatically populated as described in Air Brake Test Step 5 . Only one Equipment ID per field. The page expands beyond ten fields if automatically populated.
*Car Grade	Select the car grade specified by the Inspector from the Car Grade drop-down list.
*Date	Use the calendar picker () to select the date the inspection was performed.
*Location/SPLC	Use the search icon () to select the SPLC where the car grade inspection was performed (Exhibit 139).

For more information about car grades, see the current *Field Manual of the AAR Interchange Rules*, which can be obtained from MxV Rail at 719-584-0750 (ask for Publications) or at <https://aarpublications.com/>.

3. When all required fields are entered, select one of the options from [Exhibit 137](#).

Locomotive Air Brake L1 Inspection

When the Locomotive Air Brake L1 Inspection link is selected, the Locomotive Air Brake L1 Inspection page is displayed ([Exhibit 146](#)). Currently, this same interface is used for Locomotive Air Brake (L1, L2 and L3) Inspection, Locomotive Annual Inspection, Locomotive Cab Signals Inspection, Locomotive Quarterly Inspection, and Locomotive RCL Inspection. Verify that the page title reflects the appropriate inspection/service.

Exhibit 146. Locomotive Air Brake L1 Inspection

Locomotive Air Brake L1 Inspection

+ Add Row Validate Submit Suspend Clear Cancel

*Equipment ID(s):	*Inspection Reporter:	*Inspection Performer:	*Inspection Conducted by:	*Inspection Certified by:	*Inspection Date Done:	*Location/SPLC:
	 	 	 	 	 	 
						
						
						

+ Add Row Validate Submit Suspend Clear Cancel

1. Complete the first five fields as described in Air Brake Test [Steps 5](#) and [6](#).
2. Use the calendar picker () to select the date the next locomotive inspection is scheduled.
3. (As needed for same entries) Use the down arrow icon () to repeat the entry for all successive fields.
4. When all required fields are entered, select one of the options from [Exhibit 137](#).

Locomotive Inspection Due Date Update

You must be authorized to update a locomotive inspection due date. See [Add Inspection Right](#).

When the Locomotive Inspection Due Date Update link is selected, the Update Locomotive Inspection Due Dates page is displayed ([Exhibit 147](#)).

Exhibit 147. Update Locomotive Inspection Due Dates

Update Locomotive Inspection Due Dates

+ Add Row Validate Submit Suspend Clear Cancel

*Equipment ID(s):	*Inspection Type:	*Scheduled Due Date:	*Inspection Due Date:
	Locomotive Air Brake L3 Inspection		
	Locomotive Air Brake L3 Inspection		
	Locomotive Annual Inspection		
	Locomotive Cab Signals Inspection		
	Locomotive Periodic Inspection		
	Locomotive RCL Inspection		

Four different inspection type updates can be submitted.

1. Enter the equipment IDs for which a specific update is needed. Equipment IDs may already be populated if this page was accessed with selections from a query ([Exhibit 32](#)).
2. From the drop-down list, select the locomotive inspection to be updated. [Exhibit 147](#) shows one selected.
3. Use the calendar picker (📅) to select the date the next Scheduled and Inspection Due Dates.
4. When all required fields are entered, select one of the options from [Exhibit 137](#).

Locomotive Storage Event

You must be authorized to update a locomotive inspection due date. See [Add Inspection Right](#).

The FRA Drop Dead Date is the date a locomotive would not be allowed to be on the road due to an expired inspection date. Locomotives not needed for moving trains are sometimes removed from the road for a period of non-use. When a locomotive is in storage, its FRA Drop Dead Date is extended for the period of storage (or to a specified new FRA Drop Dead Date).

When the Locomotive Storage Event link is selected, the Report Locomotive Storage Event page is displayed ([Exhibit 148](#)).


Exhibit 148. Report Locomotive Storage Event

1. Enter the **Equipment ID(s)** for which a storage event is to be reported. Refer to the [Equipment ID\(s\) description](#). Equipment IDs may already be populated if this page was accessed with selections from a query ([Exhibit 32](#)).
2. Select the appropriate radio button:
 - Number of Days in Storage
 - New FRA Drop Dead Date
3. Enter Storage Data:
 - For Number of days in storage, type a numeric entry (e.g., 90).
 - Use the calendar picker (📅) to select the New FRA Drop Dead Date.
4. When all required fields are entered, select one of the options from [Exhibit 137](#).

Company-Specific Equipment Groups

Company-Specific Equipment groups are private pools of equipment that are only available to the company specified. Umler allows you to assign and remove equipment from company-specific equipment groups.

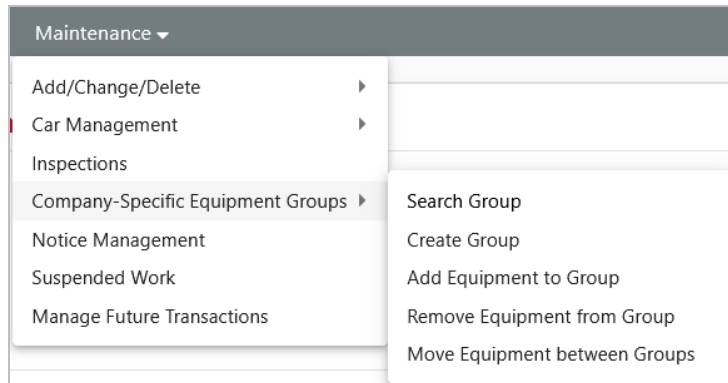Exhibit 149. Company-Specific Equipment Groups Submenu



[Exhibit 150](#) describes the options on the Company-Specific Equipment Groups submenu.

Exhibit 150. Company-Specific Equipment Groups Items and Descriptions

Menu Item	Description
<u>Search Group</u>	Allows a user to search for and view Company-Specific Equipment groups.
<u>Create Group</u>	Allows a user to create a new Company-Specific Equipment group.
<u>Add Equipment to Group</u>	Allows a user to add equipment to a Company-Specific Equipment group.
<u>Remove Equipment from Group</u>	Allows a user to remove equipment from a Company-Specific Equipment group.
<u>Move Equipment Between Groups</u>	Allows a user to move equipment between Company-Specific Equipment groups.

Search Group

The Search Group function allows users to search for company-specific equipment groups based on company-specific equipment group attributes, equipment attributes, and/or equipment ownership/control attributes.



The system displays only those company-specific equipment groups created by your company.

Use the following procedure to search for company-specific equipment groups:

1. From the main menu, select **Maintenance > Company-Specific Equipment Groups > Search Group**. The Search for Company-Specific Equipment Groups (Basic) page is displayed ([Exhibit 151](#)).

Exhibit 151. Basic Search for Company-Specific Equipment Groups

Search for Company-Specific Equipment Groups

Enter one or more fields to search Company-Specific Equipment Group information.

Q Search

Count

Clear

Basic

Group Fields

Results will include company-specific equipment groups matching ALL of the following criteria.

View *

Group View

Group ID(s)

Group Name

Group Description

Equipment ID(s)

Equipment Type Code(s)

Equipment Group(s)

Mechanical Designation(s)

Creator User ID

Last Updated User ID

Box

Gondola

Hopper

Tank

Results will include company-specific equipment groups matching ANY of the following Ownership/Control criteria.

Equipment Initials(s)

Umler Owner

Umler Company

Lessee

Stenciled Mark Owner

Output Options

Output to *

Browser

Maximum Number of Results (Browser Output Only) *

1000

Q Search

Count

Clear

- Complete search criteria as needed. Refer to [Exhibit 152](#) for field descriptions. *Red fields are mandatory.

Exhibit 152. Company-Specific Equipment Groups Field Descriptions

Field	Description
*View	Select group view or equipment view. In Group View , if no search criteria is entered, Umler displays all company-specific equipment groups created by your company. Best choice for deleting or editing a group. In Equipment View , you must specify <i>at least one</i> search parameter.
Group ID(s)	Identification number assigned to an equipment group (alphanumeric, with no spaces). Must be unique.
Group Name	Name given to an equipment group.
Group Description	Description given to an equipment group.
Equipment ID(s)	Enter the specific equipment IDs (e.g., ABCD123) or search with a range (e.g., ABCD123-999) or a wildcard. See Exhibit 23 for more information.
Equipment Type Codes	Enter the complete code (e.g., M500) in the single blank input field.
Equipment Group(s)	Used to indicate the general equipment group being sought. Multiple-selection text box. See Equipment Group(s) in Exhibit 22 .
Mechanical Designation(s)	Alphabetic AAR code assigned to the physical description of the unit. See the Umler Data Specifications Manual .
Creator User ID	System User ID used when Group was created.
Last Updated User ID	System User ID used when Group was last updated.
Equipment Initial(s)	The initials stenciled on the specified equipment.
Umler Owner	The Umler owners of the specified equipment.
Umler Company	The Umler company that owns the specified equipment.
Lessee	The company leasing the specified equipment.
Stenciled Mark Owner	The stenciled mark owners for the specified equipment.

3. (Optional) Select the **Group Fields** tab. The Search for Company-Specific Equipment Groups (Group Fields) page is displayed ([Exhibit 153](#)).
 - a. Each field can contain up to 80 characters.
 - b. Typical use might include specific commodities for the group (e.g., Paper Rolls for a certain group of boxcars). Searches can be done using these special fields; however, matches must be exact, including the field letter (i.e., something entered in field A must be searched for in field A).

Exhibit 153. Group Fields Search for Company-Specific Equipment Groups

Search for Company-Specific Equipment Groups

Enter one or more fields to search Company-Specific Equipment Group information.

Q Search

Count

Clear

Basic

Group Fields

Results will include company-specific equipment groups matching ALL of the following criteria.

Group Field A	Group Field B
Group Field C	Group Field D
Group Field E	Group Field F
Group Field G	Group Field H
Group Field I	Group Field J
Group Field K	Group Field L
Group Field M	Group Field N
Group Field O	Group Field P
Group Field Q	Group Field R
Group Field S	Group Field T
Group Field U	Group Field V
Group Field W	Group Field X
Group Field Y	Group Field Z

Q Search

Count

Clear

- In the ***Output to:** drop-down list, select **Browser** to have the search results displayed in the browser (default). Otherwise, select **CSV** (comma separated values).
5. Select ***Maximum Number of Results:** (Browser Output Only) from the drop-down list for the maximum number of result records to be returned (100, 500, 1000—default is 1000).
 6. Select a processing option:

Exhibit 154. Search for Company-Specific Equipment Groups Processing Options

Search	Executes the search and outputs to the Browser or to CSV as requested. The Company-Specific Equipment Group Search Results screen is displayed (Exhibit 155 for Group View or Exhibit 161 for equipment view).
Count	Executes the search and outputs a single line message with the count of records meeting the specified criteria. Similar to Exhibit 35 .
Clear	Clears any entries, resetting to a blank form.

Exhibit 155. Group View Company-Specific Equipment Groups Search Results

Company-Specific Equipment Group Search Results

Search Criteria

Search Results

Click on a Company-Specific Equipment Group ID to view/edit header or select one or more Company-Specific Equipment Group ID(s) and an action for Company-Specific Equipment Group management.

83 matches found. 83 available for display. 83 matches displayed on this page.

Delete Company-Specific Equipment...

✓ Apply

✕ Clear Filters

☐	Group ID	Group Name	Last Update User ID	Last Update Timestamp	Creator User ID	Creator Timestamp
☐	AUTOCSEG140939	AUTOCSEG140939	UMLRALL1	03/29/2023 12:04 AM	UMLRALL1	03/29/2023 12:04 AM
☐	AUTOCSEG16740	AUTOCSEG16740	UMLRALL1	03/29/2023 12:01 AM	UMLRALL1	03/29/2023 12:01 AM
☐	AUTOCSEG208106	AUTOCSEG208106	AUTOUMLR	03/28/2023 02:47 PM	AUTOUMLR	03/28/2023 02:47 PM
☐	AUTOCSEG217163	AUTOCSEG217163	AUTOUMLR	03/28/2023 10:54 AM	AUTOUMLR	03/28/2023 10:54 AM
☐	AUTOCSEG223469	UMLER AWS	AUTOUMLR	05/16/2023 12:19 AM	AUTOUMLR	05/16/2023 12:19 AM
☐	AUTOCSEG243284	AUTOCSEG243284	AUTOUMLR	04/28/2023 12:13 AM	AUTOUMLR	04/28/2023 12:13 AM
☐	AUTOCSEG24805	AUTOCSEG24805	AUTOUMLR	03/24/2023 12:54 AM	AUTOUMLR	03/24/2023 12:54 AM

7. Select the check boxes beside the Equipment Group IDs to be processed.

Choose from the following options:

- [Deleting a Group](#)
- [Viewing/Editing a Group](#)
- [Viewing Creator or Last Updated User IDs](#)
- Select the **Search Criteria** tab to run another search.

Deleting a Group

To delete a group, select the check box beside the group ID and select **Apply** in the action drop-down. The Confirm Delete of Company-Specific Equipment Group(s) page is displayed ([Exhibit 156](#)).

Exhibit 156. Confirm Delete of Company-Specific Equipment Group(s)

Confirm Delete of Company-Specific Equipment Group(s)

☒ Validate
 ☒ Submit
 ☐ Suspend

Group ID	Group Name
AUTOCSEG140939	AUTOCSEG140939
AUTOCSEG16740	AUTOCSEG16740
AUTOCSEG438613	UMLER AWS

☒ Validate
 ☒ Submit
 ☐ Suspend

To confirm the delete, select **Submit**. A data submission page is displayed (not shown). Select **Done**. The Company-Specific Equipment Groups link page is displayed ([Exhibit 157](#)).

Exhibit 157. Company-Specific Equipment Groups Links

Company Specific Equipment Groups

[Search for Company-Specific Equipment Groups](#)
[Create Company-Specific Equipment Group](#)
[Add Equipment to Company-Specific Equipment Groups](#)
[Remove Equipment from Company-Specific Equipment Groups](#)
[Move Equipment to Another Company-Specific Equipment Group](#)

Select the appropriate link or select an item from the main menu.

Viewing/Editing a Group

While on the Company-Specific Equipment Groups Search Results (Group View) page ([Exhibit 155](#)), select the Group ID link. The View Company-Specific Equipment Group page is displayed ([Exhibit 158](#)).

Exhibit 158. View Company-Specific Equipment Group

View Company-Specific Equipment Group

 Edit  Done

GroupID:	BOXA406	Group Description:	A406 BOXC IN POOL 7772952
Group Name:	BOXA4067772952	Group Field B:	NEWSPRINT
Group Field A:	PAPER ROLLS	Group Field D:	
Group Field C:		Group Field F:	
Group Field E:		Group Field H:	
Group Field G:		Group Field J:	
Group Field I:		Group Field L:	
Group Field K:		Group Field L:	
Group Field M:		Group Field N:	
Group Field O:		Group Field P:	
Group Field Q:		Group Field R:	
Group Field S:		Group Field T:	
Group Field U:		Group Field V:	
Group Field W:		Group Field X:	
Group Field Y:		Group Field Z:	
Creator User ID:	ABCUSER	Creator Timestamp:	04/17/2023 06:02 AM
Last Updated User ID:	ABCUSER	Last Updated Timestamp:	04/17/2023 06:02 AM

 Edit  Done

When finished viewing, select **Done** to return to the search results.

- To view user contact information, select the **User ID** links and refer to [Viewing Creator or Last Updated User IDs](#).
- To edit the Group, select **Edit**. The Edit Company-Specific Equipment Group page is displayed ([Exhibit 159](#)).

Exhibit 159. Edit Company-Specific Equipment Group

Edit Company-Specific Equipment Group

☒ Validate

☒ Submit

☐ Suspend

GroupID

BOXA406

Group Name *

BOXA406772952

Group Field A

PAPER ROLLS

Group Field B

Group Field C

Group Field D

Group Field E

Group Field F

Group Field G

Group Field H

Group Field I

Group Field J

Group Field K

Group Field L

Group Field M

Group Field N

Group Field O

Group Field P

Group Field Q

Group Field R

Group Field S

Group Field T

Group Field U

Group Field V

Group Field W

Group Field X

Group Field Y

Group Field Z

Creator User ID:

ABCUSER

Creator Timestamp:

04/17/2023 06:02 AM

Last Updated User ID:

ABCUSER

Last Updated Timestamp:

04/17/2023 06:02 AM

☒ Validate

☒ Submit

☐ Suspend

Edit fields as required and select **Submit**. A data submission page is displayed (not shown).
Select **Done**. The Company-Specific Equipment Groups link page is displayed ([Exhibit 157](#)).

Viewing Creator or Last Updated User IDs

When a User ID link is selected on a page, the User Contact Info page for that person is displayed ([Exhibit 160](#)).

Exhibit 160. User Contact Info

User Contact Info

User ID: ABCUSER

User Name: John Smith

User Phone: 1 919 651 5000

User Email: John.Smith@railinc.com

Done

To send the person an email, select the **email** link. Otherwise, select **Done** to return to previous page.

Exhibit 161. Equipment View Company-Specific Equipment Groups Search Results

Company-Specific Equipment Group Search Results

Search Criteria

Search Results

Select one or more Equipment ID(s) and an action for Company-Specific Equipment Group management.

1680 matches found. 1000 available for display. 1000 matches displayed on this page.

Add Equipment to Company-Specific...

Apply

Clear Filters

	Equipment ID	Group ID(s)	Equipment Group	Equipment Type Code	Mechanical Designation
☐	BNSF 721546	BOXA406	BOXC	A406	XP
☐	BNSF 721548	BOXA406	BOXC	A406	XP
☐	BNSF 721550	BOXA406	BOXC	A406	XP
☐	BNSF 721551	BOXA406	BOXC	A406	XP
☐	BNSF 721553	BOXA406	BOXC	A406	XP
☐	BNSF 721554	BOXA406	BOXC	A406	XP
☐	BNSF 721555	BOXA406	BOXC	A406	XP

Select the check boxes beside the Equipment IDs to be processed, choose either the Add or Remove action drop-down option, and select **OK**. Refer to:

- [Add Equipment to Group](#) or
- [Remove Equipment from Group](#)

Create Group

Use the following procedure to create a new Company-Specific Equipment Group:

1. From the main menu, select **Maintenance > Company-Specific Equipment Groups > Create Group**. The Create Company-Specific Equipment Group page is displayed ([Exhibit 162](#)).

Exhibit 162. Create Company-Specific Equipment Group

Create Company-Specific Equipment Group

☒ Validate☒ Submit☐ Suspend

GroupID *

Group Name *

Group Description

Group Field A

Group Field B

Group Field C

Group Field D

Group Field E

Group Field F

Group Field G

Group Field H

Group Field I

Group Field J

Group Field K

Group Field L

Group Field M

Group Field N

Group Field O

Group Field P

Group Field Q

Group Field R

Group Field S

Group Field T

Group Field U

Group Field V

Group Field W

Group Field X

Group Field Y

Group Field Z

☒ Validate☒ Submit☐ Suspend

2. Enter the two required fields (refer to [Exhibit 152](#)).
3. (Optional) Enter Group fields as described in Search Group [Step 3](#).
4. Select **Submit** to create the group. A data submission page is displayed (not shown). Select **Done**. The Company-Specific Equipment Groups link page is displayed ([Exhibit 157](#)).
5. No equipment is in the new group. Choose the Add Equipment to Company-Specific Equipment Group link and refer to [Add Equipment to Group](#).

Add Equipment to Group

Equipment cannot be added to a group from a regular Equipment Query. The query must be from Company-Specific Equipment Groups Search Results (Equipment View) page ([Exhibit 161](#)).

Use the following procedure to add equipment to a Company-Specific Equipment Group:

1. From the main menu, select **Maintenance > Company-Specific Equipment Groups > Add Equipment to Group**. The Add Equipment to Company-Specific Equipment Groups page is displayed ([Exhibit 163](#)).

Exhibit 163. Add Equipment to Company-Specific Equipment Groups

Add Equipment to Company-Specific Equipment Groups

Validate

Submit

Suspend

Cancel

Equipment ID(s) *	Group ID *
BNSF722191	BOXA406

Validate

Submit

Suspend

Cancel

2. Enter the **Equipment ID(s)**. If coming from a Group search results equipment view, the Equipment ID(s) field is populated with selected Equipment IDs.
3. Up to four Group ID equipment additions can be processed at one time on this page. Enter the known Group ID, or use the search icon (🔍) to search for a Group ID. The Company-Specific Equipment Group Lookup page is displayed ([Exhibit 164](#)).

Exhibit 164. Company-Specific Equipment Group Lookup

×

Company-Specific Equipment Group Lookup

Enter one or more fields to search Company-Specific Equipment Group information.

Search

Count

Clear

Cancel

Results will include company-specific equipment groups matching ALL of the following criteria.

Group ID(s)

Equipment ID(s)

Group Name

Equipment Type Code(s)

Group Description

Equipment Group(s)

Box
Gondola
Hopper

Maximum Number of Results (Browser Output Only)
1000

Mechanical Designation(s)

Results will include company-specific equipment groups matching ANY of the following Ownership/Control criteria.

Equipment Initials(s)

Umler Owner

Umler Company

Lessee

Stenciled Mark Owner

Search

Count

Clear

Cancel

- Enter criteria to locate the appropriate Group. Group fields are not available on the lookup page. Refer to [Exhibit 152](#) for field descriptions.
- Select **Search**. The Company-Specific Equipment Group Lookup Search Results page is displayed.

Exhibit 165. Company-Specific Equipment Group Lookup Search Results

Company-Specific Equipment Group Lookup
✕

Number of CSEG(s): 1
✕ Clear Filters

Group ID	Group Name	Last Update User ID	Last Update Timesta...	Creator User ID	Creator Timestamp
☒ BOXA406	BOXA406772952	MICHDEV	07/31/2023 10:51 AM	MICHDEV	07/31/2023 10:51 AM

✓ Select
✕ Cancel

- c. Select the radio button beside the appropriate Group ID and select **OK**. The Add Equipment to Company-Specific Equipment Groups page is redisplayed with the selected group ([Exhibit 166](#)).

Exhibit 166. Add Equipment to Company-Specific Equipment Groups Example

Add Equipment to Company-Specific Equipment Groups

✓ Validate
✓ Submit
⏸ Suspend
✕ Cancel

Equipment ID(s) *

BNSF722191

Group ID *

BOXA406 🔍

✓ Validate
✓ Submit
⏸ Suspend
✕ Cancel

4. Select **Submit** to add the equipment. A data submission page is displayed (not shown). Select **Done**. The Company-Specific Equipment Groups link page is displayed ([Exhibit 157](#)).

Remove Equipment from Group

Equipment cannot be removed from a group from a regular Equipment Query. The query must be from Company-Specific Equipment Groups Search Results (Equipment View) page ([Exhibit 161](#)).

Use the following procedure to remove equipment from a Company-Specific Equipment Group:

1. From the main menu, select **Maintenance > Company-Specific Equipment Groups > Remove Equipment from Group**. The Remove Equipment from Company-Specific Equipment Groups page is displayed ([Exhibit 167](#)).

Exhibit 167. Remove Equipment from Company-Specific Equipment Groups

Remove Equipment from Company-Specific Equipment Groups

→ Next✕ Cancel

Enter in Equipment IDs to remove from Company-Specific Equipment Groups and click the "Next" button.

Equipment ID(s) *

→ Next✕ Cancel

2. Enter the **Equipment ID(s)**. If coming from a Group search results (equipment view), the Equipment IDs are shown in the Confirm Removal of Equipment from Company-Specific Equipment Groups page is displayed ([Exhibit 168](#)).
3. Select **Next**. The Confirm Removal of Equipment from Company-Specific Equipment Groups page is displayed ([Exhibit 168](#)).

Exhibit 168. Confirm Removal of Equipment from Company-Specific Equipment Groups

Confirm Removal of Equipment from Company-Specific Equipment Groups

☑ Validate☑ Submit⏸ Suspend✕ Cancel

Select the group(s) from which you wish to remove the specified equipment and click the "Submit" button.

	Equipment ID	Group ID	Group Name	Last Update User ID	Last Update Timestamp
☐	RAIL0000285947	AUTOCSEG657159	AUTOCSEG657159	AUTOUMLR	Description

☑ Validate☑ Submit⏸ Suspend✕ Cancel

4. Select the checkbox beside each Equipment ID to be removed.

5. Select **Submit**. A data submission page is displayed (not shown). Select **Done**. The Company-Specific Equipment Groups link page is displayed ([Exhibit 157](#)).

Move Equipment Between Groups

Use the following procedure to move equipment from one Company-Specific Equipment Group to another:

1. From the main menu, select **Maintenance > Company-Specific Equipment Groups > Move Equipment between Groups**. The Move Equipment to Another Company-Specific Equipment Group page is displayed ([Exhibit 169](#)).

Exhibit 169. Move Equipment to Another Company-Specific Equipment Group

2. Enter the **Equipment ID(s)** to be moved.



Because the move option is not available in the action drop-down list in the Equipment view search results, you can choose to “Add” selected IDs and view the entire set of IDs in the Add Equipment to Company-Specific Equipment Groups page ([Exhibit 163](#)). The Equipment IDs field can be copied by placing the cursor in the box and pressing **Ctrl+A** to select them all and pressing **Ctrl+C** to copy all. Then without executing any Add function, choose the **Move Equipment between Groups** menu item, and paste (**Ctrl+V**) the copied Equipment IDs into the Equipment ID field on the Move page.

3. **From Group ID:** Enter the current Group ID or use the search icon (🔍) to search for a Group ID. Refer to Add Equipment to Group [Step 3](#) for instructions.
4. **To Group ID:** Enter the new Group ID or use the search icon (🔍) to search for a Group ID. Refer to Add Equipment to Group [Step 3](#) for instructions.
5. Select **Submit**. A data submission page is displayed (not shown). Select **Done**. The Company-Specific Equipment Groups link page is displayed ([Exhibit 157](#)).

Notice Management

The Notice Management function allows you to process informational, warning, and error notices via the Umler web interface. Each company's administrator defines how the Umler should inform your company (e.g., tickler preferences). Regardless of those preferences, you can manage the notices within Umler. Umler allows you to search for notices based on detailed search criteria, view notice details, fix errors related to notices, and suppress read, resolved, or unwanted notices.

Use the following procedure to manage notices:

1. From the main menu, select **Maintenance > Notice Management**. The Search Notices page is displayed ([Exhibit 170](#)).

Exhibit 170. Search Notices – Top Mandatory Fields

Search Notices

Enter the starting and ending date/time range to display notices that fall between the date range.

Search Count Reset Clear

Results will include notices matching ALL of the following criteria.

*** At least one of the input is required:**

Starting Date/Time
07/30/2023 12 01 ☒ AM ☐ PM

Ending Date/Time
07/31/2023 11 59 ☐ AM ☒ PM

☐ Search All Dates

Equipment ID(s)

Company-Specific Equipment Group(s)

*** Notice Type**

AFMC Inspection
AFMC Inspection Nullification
AFMC Inspection Removal
Add Company Specific Equipment Group
Add Equipment to Company Specific Equipment Group
Add a Pool Header
Add to Pool
Air Brake Nullification

*** Notice Level**

Error
Information
Warning

Notice Status *

Active

Notice Group *

Normal

2. Enter search criteria as appropriate. Red fields are mandatory. Field Descriptions for the top of the page are shown in [Exhibit 171](#).

Revised May 2026

142

Umler Version 6.5

Exhibit 171. Search Notices Field Descriptions – Top

Field	Description
*Starting Date/Time	Use the calendar picker () to select the dates to be queried. Note: Default Date/Time is two days starting at midnight the previous day and ending today at 11:59 PM. Enter a 2-digit hour (01–12), and minutes (00–59), and select the AM or PM radio button in the Time field. Note: Select the Search All Dates check box in order to search all dates.
Equipment ID(s)	Enter the specific equipment IDs (e.g., ABCD123) or search with a range (e.g., ABCD123-999) or a wildcard. See Exhibit 23 for more information.
Company-Specific Equipment Group(s)	Enter the current Group ID or use the search icon () to search for a Group ID. Refer to Add Equipment to Group Step 3 for instructions.
*Notice Type	Select the Notice Type. Multiple selections are allowed. The default is ALL.
*Notice Level	Select the Notice Level of Error, Information, and Warning. Multiple selection is allowed. The default is ALL. • Error—notices which have failed to pass business rules. Because of these errors, the related transactions have failed to update the Umler database. The system creates an error notice when a pool or equipment transaction is submitted that violates the business or security rules. • Information—notices which inform user of system processes. For example, an information notice is created to inform user of the completion of a bulk upload. The system creates informational notices for company-specific events. • Warning—warning notices created by the system to warn about company-specific events. For example, the system will warn a company prior to deleting one of its idle pool headers.
*Notice Status	Select the Notice Status of Active (default), Deleted, or Both. Note: Notices are not deleted, rather their status is just changed to “deleted”. When the issue mentioned in the notice has been successfully resolved the status changes to “deleted”.
*Notice Group	Select the Notice Group of Normal (default), Future Effective, or Conflict. Note: Unresolved conflicts can result in Umler enforcing AAR business rules against the equipment. Refer to the Umler Data Specifications Manual for information about these rules and conflict resolution.

Exhibit 172. Search Notices – Bottom Optional Fields

Event/Response Code(s)	Equipment Type Code(s)
Equipment Group(s)	Pool ID(s)
Box Car Chassis Container	
Mechanical Designation(s)	Notice ID(s)
User ID(s)	Element ID(s)
☐ Restrict results to only Element ID(s) entered	

Results will include notices matching ANY of the following Ownership/Control criteria.

Equipment Initial(s)	Umler Owner
Umler Company	Lessee
Stenciled Mark Owner	

In what format would you like your results?

* Output to	* Maximum Number of Results (Browser Output Only)
Browser	1000

3. (Optional) Enter the search criteria as appropriate. Field Descriptions for the bottom of the page are shown in [Exhibit 173](#).

Exhibit 173. Search Notices Field Descriptions – Bottom

Field	Description
Event/Response Code(s)	Enter a known Event/Response Code or use the search icon (🔍) to search for a code. The Element ID Lookup page is displayed. Note: Use a find (Ctrl+F) within the lookup page to locate the needed error.

Exhibit 174. Event/Response Codes

Select	Element ID	Element Name
☐	0000000001	The equipment ID entered does not exist.
☐	0000000002	The element value entered was not valid. The element value must be an acceptable value for the element ID was not defined as a valid value or did not fall in the specified range. For equipment, element values may be allowed for specific equipment groups but not allowed for other equipment groups.
☐	0000000003	The operation performed resulted in an invalid combination of Equipment Management Codes.
☐	0000000004	The Pool ID entered is not active.
☐	0000000005	The pool header entered is already active.
☐	0000000006	A mandatory field was not entered.
☐	0000000007	The value entered in this field must be numeric.
☐	0000000008	A Mark was entered that is not active.

Check the boxes beside the appropriate descriptions and select **Done**. The Search Notices page is redisplayed with the selected codes.

Equipment Type Code	Alphanumeric code (one alpha and three numeric) used to designate a specific type of equipment and attributes.
Equipment Group	Used to indicate the general equipment group being sought. See Equipment Group(s) in Exhibit 22 .
Pool ID(s)	Search for notices related to the specified pool ID(s).
Mechanical Designation(s)	Search for notices related to equipment with the specified mechanical designation(s).
Notice ID(s)	Search for notices with specific notice ID(s). This can be from online notices, or emails.
User ID(s)	Search for notices related to actions taken by a specified user ID(s).

Field	Description
-------	-------------

Element ID(s) Enter a known Element ID or use the search icon (🔍) to search for an ID. The Element ID Lookup page is displayed.

Note: Use a find (Ctrl+F) within the lookup page to locate the needed element.

Exhibit 175. Element ID Lookup Using Find

Check the boxes beside the needed element IDs and select **OK**. The Search Notices page is redisplayed with the selected IDs.

Restrict results to only Element ID(s)	Use this check box to restrict the results to only Element IDs.
Equipment Initial(s)	The initials stenciled on the specified equipment.
Umler Owner	The Umler owners of the specified equipment.
Umler Company	The Umler Company that owns the specified equipment.
Lessee	The company leasing the specified equipment.
Stenciled Owner Mark	The stenciled mark owners for the specified equipment.

In the ***Output to:** drop-down list, select **Browser** to have the search results displayed in the browser (default). Otherwise, select **CSV** (comma separated values).

- (For browser only) Set the ***Maximum Number of Results:** field to the maximum number of result records to be returned (100, 500, 1000). Default is 1000.
- Select one of the processing options shown in [Exhibit 176](#).

Exhibit 176. Search Notices Processing Options

Search	Executes the search and outputs to the Browser or to CSV as requested. See Online Notice Search Results or CVS Notice Search Results.
---------------	---

Count	Executes the search and outputs a single line message with the count of records meeting the specified criteria. See Exhibit 35 .
Clear	Clears any entries, resetting to a blank form.

Online Notice Search Results

If you have chosen to view search results online, the Notice Search Results page is displayed ([Exhibit 177](#)).

When notices are deleted or restored, the page does not reflect those changes unless refreshed (by executing the search again). To search again, select the **Search Criteria** tab and select **Search**.

Exhibit 177. Online Notice Search Results

Search Notices

Search Criteria

Search Results

1903 matches found. 1000 available for display. 1000 matches displayed on this page.

Delete Selected

✓ Apply

✕ Clear Filters

☐	ID	Creation Timesta...	Equipment ID	EG	ETC	MD	Group ID	Pool ID	Stenciled M...	Lessee
☐	57182669	12/22/2022 02:29 AM	RAIL 90004	BOXC	R510	RBL			RAIL	
☐	57182682	12/22/2022 02:29 AM	RAIL 90005	BOXC	R510	RBL			RAIL	
☐	57182683	12/22/2022 02:29 AM	RAIL 90006	BOXC	R510	RBL			RAIL	
☐	57182684	12/22/2022 02:29 AM	RAIL 90002	BOXC	R510	RBL			RAIL	
☐	57182685	12/22/2022 02:29 AM	RAIL 90003	BOXC	R510	RBL			RAIL	
☐	57182688	12/22/2022 02:29 AM	RAIL 90001	BOXC	R510	RBL			RAIL	
☐	57182696	12/22/2022 02:29 AM	RAIL 90014	BOXC	R510	RBL			RAIL	
☐	57182699	12/22/2022 02:29 AM	RAIL 90015	BOXC	R510	RBL			RAIL	

Options on this page include:

[View Notice Details](#)—Select the **ID** link. See [Exhibit 178](#).

[View User Information](#)—Scroll to the right and select the **User ID** link. See [Exhibit 160](#).

From the action drop-down list at the top right of the table:

Delete Selected—Check the boxes beside **Active** notices to be deleted (to change status to inactive), select **Delete Selected** (default) from the drop-down list, and select **Apply**. Delete can also be done while viewing notice details (see [Exhibit 178](#) and [Exhibit 179](#)).

Historical Lineage—Check the box beside notices of equipment with an EIN history, select **Historical Lineage** from the drop-down list, and select **Apply**.

Modify Equipment—Check the box beside one of the notices to be modified, select **Modify Equipment** from the drop-down list, and select **Apply**.

Restore Selected—Check the boxes beside **Deleted** notices to be restored (to change status to Active), select **Restore** in the drop-down list, and select **Apply**. Restore can also be done while viewing notice details (see [Exhibit 178](#) and [Exhibit 179](#)).

View Notice Details

When the **Notice ID** link on the Notice Search Results page ([Exhibit 177](#)) is selected, the Notice Details page is displayed ([Exhibit 178](#)).

Exhibit 178. Notice Details With Active Error

Notice Details

Previous
Next

ID: 57399379
Date/Time: 02/16/2023 08:55 PM
Equipment ID: RAIL0000090029
Equipment Group: BOXC
Mechanical Designation: RBL
Event Code: ABT0000001
Stenciled Mark Owner: RAIL
Maintenance Party Mark(s): RAIL

Type: ABT
Level: Error
Status: Active
Equipment Type Code: R510
Pool ID:
User: AUTOUMLR
Lessee:

	Pre Error Data	Error Data	New Data	Current Data	Reason - Response Code
Equipment Id	RAIL0000090029	RAIL0000090029	RAIL 90029	RAIL0000090029	
Air Brake Test Device					Air Brake Test Device (B523) must be reported for Air Brake Test inspection reported on or after December 10, 2020 Response Code:0000102958
Inspection Date Done	08/26/2009	08/26/2009	08/26/2009	08/26/2009	An inspection of this type already exists with a date done greater than or equal to the specified date done either on this equipment or on the prior. Response Code:0000000302
Inspection Performer	RAIL	RAIL	RAIL	RAIL	
Inspection Reporter	RAIL	RAIL	RAIL	RAIL	
Location/SPLC	465710000	465710000	465710000	465710000	

Validate
Submit
Delete
Done

In this notice, the new data entered did not meet business rules (reason written in red at right). The pool number is from CSXT (begins with 712), but the Pool Operator 1 is entered as BNSF. Either the Pool ID is incorrect or the Pool Operator 1.

With the proper authorization and the corrections known, the corrected input can be entered directly on this page in the new data column, validated and submitted.

To view User ID information, select the **User ID** link. See [Exhibit 160](#).

Use the **Previous** and **Next** buttons at the upper right to view details of the previous or next notice from the Notice Search Results list.

Processing options include:

Exhibit 179. Notice Processing Options

Validate	Validates data before submission to facilitate error correction. Fixing one error can produce another when business rules are applied.
Submit	Send the data to the system. Validation occurs first, so error correction can be done. If successful a message similar to Exhibit 143 is displayed.
Delete or Restore	Toggles the status of the notice. If the notice is active, only the Delete button appears. If the status is deleted, only the Restore button appears.
Done	Returns to the Search Results page (Exhibit 177).

CVS Notice Search Results

If you have chosen to view/save CSV search results, the search results are displayed in MS Excel ([Exhibit 180](#)).

Exhibit 180. CSV Notice Search Results in Excel

	A	B	C	D	E	F	G	H	I	J	K	L	M	N
1	7206320	SUMMARY	3/16/2009 9:56	BNSF0000	MISC	M800	MFT		TIC	340	Information		Active	BNSF
2	7206320	MESSAGE	A Conflict notice											
3	7206321	SUMMARY	3/16/2009 9:56	BNSF0000	MISC	M800	MFT		TIC	341	Information		Active	BNSF
4	7206321	MESSAGE	A conflict condition exists for the equipment BNSF 933508 since 02/20/2009. The current conflict severity is 1-Subject to Zero-Rating											
5	7208215	SUMMARY	3/16/2009 11:06	BNSF0000	STWH	Q813	ST		TIC	340	Information		Active	BNSF
6	7208215	MESSAGE	A Conflict notice											
7	7208894	SUMMARY	3/16/2009 13:22	BNSF0000	LOCO	D113	D		TIC	340	Information		Active	BNSF
8	7208894	MESSAGE	A Conflict notice											
9	7208907	SUMMARY	3/16/2009 13:52	BNSF0000	PSGR	M500	PA		TIC	340	Information		Active	BNSF
10	7208907	MESSAGE	A Conflict notice											
11	7208982	SUMMARY	3/16/2009 16:37	BNSF0000	VFLT	V971	FA		TIC	340	Information		Active	BNSF
12	7208982	MESSAGE	A Conflict notice											
13	7208985	SUMMARY	3/16/2009 16:42	BNSF0000	VFLT	V971	FA		TIC	340	Information		Active	BNSF
14	7208985	MESSAGE	A Conflict notice											
15	7209001	SUMMARY	3/16/2009 22:46		POOL			7123274	HA	HA000000	Error	TDJMW09	Active	
16	7209001	ELEMENT	P001		7123274	7123274	E	null	null	BASE	1			
17	7209001	ELEMENT	P011		BNSF			62	For Carrie E	null	null	BASE		1
18	7209002	SUMMARY	3/16/2009 22:55		POOL			7773276	HA	HA000000	Error	TDJMW09	Active	
19	7209002	ELEMENT	P001		7773276	7773276	E	null	null	BASE	1			
20	7209002	ELEMENT	P009		FT WORTH			36	Held-Shor E	null	null	BASE		1
21	7209002	ELEMENT	P004		TX			33	Pool Load E	null	null	BASE		1
22	7209003	SUMMARY	3/16/2009 22:58		POOL			7773277	HA	HA000000	Error	TDJMW09	Active	
23	7209003	ELEMENT	P001		7773277	7773277	E	null	null	BASE	1			
24	7209003	ELEMENT	P010		TX			47	Held-Shor E	null	null	BASE		1
25	7209003	ELEMENT	P004		TX			33	Pool Load E	null	null	BASE		1

If you chose to open the file rather than save it (refer to [Exhibit 32](#)), you have the option to save it as an Excel file while viewing. [Exhibit 181](#) contains information for reading CSV notice records.

- The information for each notice spans multiple lines.
- A notice always begins with a summary line.
- The summary line is followed by zero or more element lines. (If the notice involves specific elements of a unit, the notice contains an element line for each such element).

- The notice concludes with zero or more message lines. (If the notice includes messages that are not specific to any particular element, the notice contains a message record for each such message).
- Each notice occupies a minimum of two lines (SUMMARY and MESSAGE, or SUMMARY and ELEMENT, or all three).
- There are no labels on the exported Excel file headings.

Exhibit 181. CSV Notice Search Results CSV File Column Key

Column	Attribute Name	Definition
SUMMARY Lines		
A	Notice ID	The unique identifier for this notice.
B	Summary Record Indicator	A summary record indicates the beginning of the data for the next notice in the file. The value is always SUMMARY.
C	Timestamp	The date and time at which the system generated this notice.
D	Equipment ID	The equipment ID for the equipment (if any) related to this notice.
E	Equipment Group	The equipment group for the equipment (if any) related to this notice.
F	Equipment Type Code	The equipment type code for the equipment (if any) related to this notice.
G	Mechanical Designation	The mechanical designation for the equipment (if any) related to this notice.
H	Pool ID	The pool ID for the pool (if any) related to this notice.
I	Type	The type of notice.
J	Event Code	The event code for this notice.
K	Level	The level for this notice.
L	User ID	The User ID (if any) that originated the transaction resulting in this notice.
M	Status	The status for this notice.
N	Maintenance Party Mark	The mark of the maintenance party.

Column	Attribute Name	Definition
MESSAGE Lines		
A	Notice ID	The unique identifier for this notice.
B	Record Indicator	Indicates the beginning of the message data for the Notice ID record. The value is MESSAGE.
C	Message	The text of the message.
ELEMENT Lines		
A	Notice ID	The unique identifier for this notice.
B	Record Indicator	Indicates the beginning of the data for elements in the Notice ID record. The value is always ELEMENT.
C	Element ID	The identifier for the type of element.
D	Pre-transaction Data	The value of this element before the transaction that produced this notice.
E	Transaction Data	The value of this element specified by the transaction that produced this notice.
F	Current Data	The current value of this element.
G	Message 1	A message (e.g., an error message) regarding this element.
H	Message 2*	A message (e.g., an error message) regarding this element.
⋮		
Etc.	Message N*	A message (e.g., an error message) regarding this element.

* Each element record contains one or more messages.

Suspended Work

Many Umler Add, Modify, and update functions provide a processing option to **Suspend** the work. You may need to verify data or may not be able to resolve validation issues without guidance. When **Suspend** is chosen the Suspend Work page is displayed ([Exhibit 84](#)). Enter enough information to make the task easily recognizable for resuming the task.

When a user is ready to resume suspended work:

1. From the main menu, select **Maintenance > Suspended Work**. The Suspended Work page is displayed ([Exhibit 182](#)).

Exhibit 182. Suspended Work

Suspended Work				
				▶ Resume 🗑 Delete
✕ Clear Filters				
☐	Timestamp	User ID	Type	Description
☐	02/12/2020 09:55 AM	eftlb01	Restencil Equipment	restencil error
☐	02/12/2020 11:18 AM	TLTEST	Air Brake Test	UM-3896
☐	03/31/2020 09:21 AM	efkmm01	Air Brake Test	31 release
☐	08/27/2020 09:21 AM	efkmm01	Modify Equipment	testing release 8/27
☐	06/18/2021 02:13 PM	BSTXL01	Modify Equipment	*Suspending mod equip EOTD
☐	03/17/2022 12:00 AM	TERRYCAU	Modify Equipment	AARX 317 - 03172022
☐	06/16/2022 12:00 AM	TERRYCAU	Modify Equipment	06162022 Test
☐	07/28/2022 12:00 AM	TERRYCAU	Modify Equipment	Suspend Work - PROD FAIL 7/28/2022
☐	09/15/2022 12:00 AM	TERRYCAU	Modify Equipment	rail91522
☐	11/08/2022 12:00 AM	TERRYCAU	Modify Equipment	RAIL0000011822
☐	12/29/2022 12:00 AM	EVZQA12	Clone Equipment	

Default order is by oldest timestamp. To recall a recently suspended task, sort by Timestamp to bring the newest to the top of the display. Actions for this page include:

- [Resume Suspended Work](#)
- [Delete Suspended Work](#)

Resume Suspended Work

2. Check the box beside the task to be resumed and select **Resume**. The appropriate Umler page is displayed with a Transaction Retrieved message ([Exhibit 183](#)).

Exhibit 183. Update Pool Header Transaction Retrieved

Update Pool Header

 Transaction retrieved 

Validate Submit Suspend Reset Clear Cancel

Pool ID

7773282

Description *

Pool 3282

Extended Description

TEST Pool 3282 extended description

Reporter

CSXT

Loading Location *

BISHOP

State/Province *

GA - Georgia

Operator 1 *

AB

Pool Type Code *

J - J

Operator 2

123

Operator 3

123

Operator 4

123

☐ Now ☒ Future

On Future Date *

Transaction Description

123

Validate Submit Suspend Reset Clear Cancel

3. Complete the page in accordance with instructions for that task (For [Exhibit 183](#), this would be the [Update Pool Header](#) task).

Revised May 2026

153

Umler Version 6.5

Delete Suspended Work

If a decision is made to delete an incomplete task:

2. Check the box beside the task to be resumed and select **Delete**. The Confirm Delete Suspended Tasks page is displayed ([Exhibit 184](#)).

Exhibit 184. Confirm Delete Suspended Tasks

Confirm Delete Suspended Tasks

 Are you sure you want to delete the selected task(s)?

3. To delete the tasks, select **Delete**. Otherwise, select **Cancel**. The Suspended Work page is redisplayed, and the deleted tasks are no longer in the list.

Manage Future Transactions

The Manage Future Transactions function allows users to search for and delete any future effective transactions pertaining to equipment pools.

Use the following procedure to view future transactions:

1. From the main menu, select **Maintenance > Manage Future Transactions**. The Search Future Effective Transactions page is displayed ([Exhibit 185](#)).

Exhibit 185. Search Future Effective Transactions

Search Future Effective Transactions

Click on a future effective transaction ID to view future effective transaction details. Select one or more future effective transaction IDs and an action for transaction management.

Search Criteria

Search

Count

Clear

Results will include future effective transactions matching ALL of the following criteria.

Future Effective Transaction ID(s):

Description:

Starting Future Effective Date:

07/31/2023

Ending Future Effective Date:

12/31/9999

12:00 AM Eastern Time

11:59 PM Eastern Time

Transaction Type(s):

Add a Pool Header

Delete a Pool Header

Update a Pool Header

Pool Assignment/Unassignment

User ID(s):

Pool ID(s):

Equipment ID(s):

In what format would you like your results?

* Output to

Browser

* Maximum Number of Results (Browser Output Only)

1000

Search

Count

Clear

2. Enter the search criteria as appropriate. Red fields are mandatory. Field Descriptions for the top of the page are shown in [Exhibit 186](#).

Exhibit 186. Search Future Effective Transaction Descriptions

Field	Description
Future Effective Transaction ID(s)	ID assigned to the future transaction (if known).
Description	Description previously entered for the future transaction

Field	Description
Starting Future Effective Date	Use the calendar picker (📅) to select the dates to be queried. Note: Default Date is today starting at 12:00 AM.
Ending Future Effective Date	Use the calendar picker (📅) to select the dates to be queried. Note: Default Date is 12/31/9999 at 11:59 PM.
Transaction Type(s)	Select from four available choices.
User ID(s)	Search for future transactions entered by specified user ID(s).
Pool ID(s)	Type 7-digit pool IDs to search for future transactions related to those pools.
Equipment ID(s)	Enter the specific equipment IDs (e.g., ABCD123) or search with a range (e.g., ABCD123-999) or a wildcard. See Exhibit 23 for more information.

In the ***Output to:** drop-down list, select **Browser** to have the search results displayed in the browser (default). Otherwise, select **CSV** (comma separated values).

- (For browser only) Set the ***Maximum Number of Results:** field to the maximum number of result records to be returned (100, 500, 1000). Default is 1000.
- Select one of the processing options shown in [Exhibit 187](#).

Exhibit 187. Search Future Transaction Processing Options

Search	Executes the search and outputs to the Browser or to CSV as requested. See Exhibit 188 .
Count	Executes the search and outputs a single line message with the count of records meeting the specified criteria. See Exhibit 35 .
Clear	Clears any entries, resetting to a blank form.

Exhibit 188. Future Effective Transaction Search Results

Future Effective Transaction Search Results

Click on a future effective transaction ID to view future effective transaction details. Select one or more future effective transaction IDs and an action for transaction management.

Search Criteria

Search Results

3 matches found. 3 available for display. 3 matches displayed on this page.

Delete Future Effective Transaction

✓ Apply

☐	Future Effective Tran...	Equipment ID	Pool ID	Creation Timestamp	User	Type	Future Effective Date	Description
☐	469437	RAIL0000111006		07/27/2023 04:36 AM	AUTOUMLR	ECC	07/31/2023	
☐	469470	RAIL0000111002		07/28/2023 03:02 AM	AUTOUMLR	ECC	07/31/2023	
☐	469471	RAIL0000111003		07/28/2023 03:03 AM	AUTOUMLR	ECC	07/31/2023	

Actions for future transactions include:

To view the future transaction, select the **ID** link at the left. See [Exhibit 189](#).

To delete the transaction, check the box beside the appropriate IDs, select **Delete Future Effective Transaction** from drop-down list (only choice) in the top right, and select **Apply**. A confirmation page is displayed.

- To change the date of a future transaction, delete the incorrect transaction, and then create a new future transaction with the new date.

Exhibit 189. Future Effective Transaction Details

Future Effective Transaction Details:

Future Effective Transaction ID: 469437

Description:

Creation Timestamp: 07/27/2023 12:00 AM

Type: ECC

Future Effective Date: 07/31/2023

User: AUTOUMLR

Equipment ID: RAIL0000111006

Element ID	Element Name	Element Value
P001	Pool Number	9930006


Done

When finished viewing the details, select **Done** to return to the search results.

To confirm the deletion of a future transaction, select **Delete**. Otherwise, select **Cancel** to return to the search results.

Upload/Download

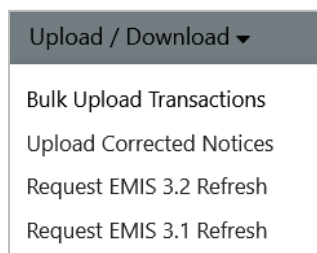Exhibit 190. Upload/Download Menu



[Exhibit 191](#) describes the tasks available on the Upload/Download menu.

Exhibit 191. Upload/Download Menu Items and Descriptions

Menu Item	Description
Bulk Upload Transactions	Allows you to upload CSV formatted records, such as pool assignments, Equipment Management codes, and car grade inspections. This includes both new and corrected records.
Upload Corrected Notices	Allows you to upload corrections or updates to CSV transactional records associated with received notices. This includes CSV-formatted text files.
Request Umler 3.2 Refresh	Allows you to resynchronize the company's local copy of the Umler pool and equipment data following an interruption of messaging or an error occurring at the company site for <i>Umler 3.2</i> . The refresh functionality is not intended to synchronize a company's local system with the complete Umler master file. The refresh functionality does not replace master data extracts.
Request Umler 3.1 Refresh	Allows you to resynchronize the company's local copy of the Umler pool and equipment data following an interruption of messaging or an error occurring at the company site for <i>Umler 3.1</i> . The refresh functionality is not intended to synchronize a company's local system with the complete Umler master file. The refresh functionality does not replace master data extracts.

Bulk Upload Transactions

Umler CSV transaction records in the correct format can be uploaded as a batch using the Bulk Upload Transactions function. When **Upload/Download > Upload Transactions** is selected, the Upload Umler Transactions page is displayed ([Exhibit 192](#)).

Exhibit 192. Upload Umler Transactions

Upload Umler Transactions

IMPORTANT NOTE: Umler allows comma delimited file uploads for various transactions. Each transaction type has a defined set of parameters specific to that transaction type. This option is intended for the advanced user, who must be granted specific Bulk Upload Access to perform this function by the company administrator. It is advised that you first test upload formats that you create in the test environment before attempting to use them in the Production environment. For additional instructions, please contact our customer support group at csc@railinc.com and you may also reference the [Bulk Upload Transactions CSV File Specifications](#).

To upload Umler transactions in CSV format:

1. Select the Browse button.
2. Select the appropriate directory.
3. Select the correct file.
4. Select Open.
5. Select Upload.

Choose File

No file chosen

[Retrieve csv format templates](#)

Upload

Cancel

To download the UmlerCSVTemplates.zip file, select the **Retrieve csv format templates** link. These templates can help you set up your files with the required fields prior to upload.

Once you are ready to upload your file, follow the online instructions at the top of the page.

When the upload has completed, the Upload Summary page is displayed (not shown). It contains the following information:

- At the top of the page, the system displays the summary information for the upload process.
- The system displays the total number of transactions processed from the uploaded file.
- The system displays the number of transactions successfully validated and applied to the system.
- The system displays the number of transactions that failed. A transaction might fail during parsing, validation, etc.
- At the bottom of the page, the system displays the details of any failed transactions. For each failure, the system displays the line number of the transaction (in the file) that failed and a description of the reason for failure.
- An email tickler is sent (if so configured—see [Configure Ticklers](#)) and the summary is stored in notice management.

Upload Corrected Notices

The system allows you to download error notices in CSV format. You can make the necessary corrections within the CSV file (see [CVS Notice Search Results](#)) and then upload the file to apply the corrections to the system. The system only processes notices that include elements. The system uses the value in the Transaction Data field of each element record to reprocess the transaction.

When **Upload/Download > Upload Corrected Notices** is selected, the Upload Corrected Error Notices page is displayed ([Exhibit 193](#)).

Exhibit 193. Upload Corrected Error Notices

Upload Corrected Error Notices

IMPORTANT NOTE: Umler allows comma delimited file uploads for various transactions. Each transaction type has a defined set of parameters specific to that transaction type. This option is intended for the advanced user, who must be granted specific Bulk Upload Access to perform this function by the company administrator. It is advised that you first test upload formats that you create in the test environment before attempting to use them in the Production environment. For additional instructions, please contact our customer support group at csc@railinc.com and you may also reference the [Bulk Upload Transactions CSV File Specifications](#).

To upload corrected error notices in CSV format:

1. Select the Browse button.
2. Select the appropriate directory.
3. Select the correct file.
4. Select Open.
5. Select Upload.

No file selected.

Follow the online instructions at the top of the page.

As with the upload just described, the system displays the processing results to you via the web interface and generates an informational tickler notice indicating the processing results.

Request Umler 3.2 Refresh

To limit excessive use of system resources (e.g., bandwidth, CPU cycles, etc.), the system restricts the amount of refresh data that users can request. The system allows users to specify the appropriate refresh data by equipment ID(s), pool ID(s), or date/time range.

When an authorized Umler 3.2 user selects **Upload/Download > Request Umler 3.2 Refresh**, the Refresh page is displayed ([Exhibit 194](#)).

Exhibit 194. Refresh

Refreshes can be done using [Equipment Characteristics](#), [Pool Data](#), or a [Date/Time Range](#).

Equipment Characteristics

1. Select the Equipment Characteristics radio button.
2. Enter the **Equipment IDs** to be refreshed. See [Exhibit 23](#) for information on entering multiple IDs.
3. Select **Submit** to refresh the equipment.

Pool Data

1. Select the Pool Data radio button.
2. Enter the **Pool IDs** to be refreshed. See [Exhibit 23](#) for information on entering multiple IDs.
3. Select pool options:
 - a. Pool Header only—refreshes general information contained in the specified pool headers
 - b. Pool Assignments only—refreshes equipment within the specified pools
 - c. Both—refreshes both specified pool headers and assignments
4. Select **Submit** to refresh the pool data.

Date/Time Range

1. Select the **Date/Time Range** radio button.
2. Set the **Starting Date/Time** for the refresh:
 - a. Use the calendar picker () to select the Starting Date.
 - b. Enter a 2-digit hour (01–12), and minutes (00–59).
 - c. Select the AM or PM radio button.
3. Set the Ending Date/Time for the refresh:
 - a. Use the calendar picker () to select the Ending Date.
 - b. Enter a 2-digit hour (01–12), and minutes (00–59).
 - c. Select the AM or PM radio button.
4. Select **Submit** to refresh the time range.


Request Umler 3.1 Refresh

When an authorized Umler 3.1 user selects **Upload/Download > Request Umler 3.1 Refresh**, the Refresh page is displayed ([Exhibit 194](#)).

Refer to [Request Umler 3.2 Refresh](#) for instructions—the process is identical.

Account Administration

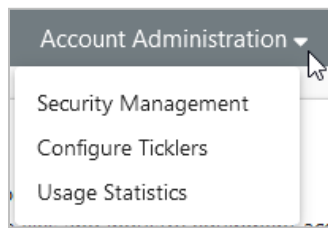Exhibit 195. Account Administration



[Exhibit 196](#) describes the tasks available on the Account Administration menu.

Exhibit 196. Account Administration Menu Items and Descriptions

Menu Item	Description
Security Management	Opens the Security Management page (Exhibit 197).
Configure Ticklers	Allows account administrators to specify which types of event notifications should be sent by Umler, and to whom.
Usage Statistics	Allows you to download usage statistics in CSV format.

Security Management

The security module ensures that only authorized users can access specific equipment and pools, report inspections, or perform other procedures within the system.

The Umler security module supports an administrator's ability to manage access rights for intra-company users, manage access rights given to other companies, manage access rights given by other companies, and transfer access rights to another company. When managing access rights for *intra-company* users, Umler security allows the administrator to add, edit, delete, and/or clone access rights. When managing access rights given to other companies, the Umler security module allows the administrator to view existing rights, grant new rights, and/or revoke existing rights. When managing access rights given by other companies, the Umler security module allows the administrator to assign and/or relinquish those rights to users within his company. This module also allows every user to view his access rights.

Note the distinction between a company, a SCAC, and Equipment Initials. For the purposes of this system:

- **Company:** can own one or more SCACs (Standard Carrier Alpha Code)
- **SCAC:** can own one or more Equipment Initials

Umler relies on the IRF (Road Mark Register) to define the relationship between SCACs and Equipment Initials.

Access rights are assigned in Umler by the company Umler administrator. Access rights include pool-related rights, equipment-related rights, inspection-related rights and view confidential data rights.

For each access right, the administrator must specify the following characteristics:

Timeframe of authority—The timeframe of authority defines the period (effective date/time to expiration date/time) during which the access right will exist.

Type of access—The administrator must specify the type of actions to which the access right applies:

Equipment Access Rights—For an equipment-related access right, the administrator specifies one or more of the following types of access:

- Update Equipment Management Codes
- Non-Owner Self-As-Lessee Removal
- Equipment - “Add to Pool”
- Equipment - “Remove from Pool”
- Update Equipment Maintenance Party
- Add Equipment
- Update Equipment
- Delete Equipment

Pool Access Rights—For a pool-related access right, the administrator specifies one or more of the following types of access:

- Add Pool Header
- Update Pool Header
- Delete Pool Header
- Pool Assignment / Unassignment

Inspection Access Rights—For an inspection access right, the administrator specifies timeframe, marks, and equipment for which you can report inspections.

View Confidential Data Access Rights—For inter-company rights only, a view confidential data access right, the administrator specifies timeframe, marks, and equipment for which you can view confidential data.

Range of equipment, pools, and inspection rights—For an equipment-related access right, the administrator specifies to which pieces of equipment the access right applies. The administrator restricts access to any one of the following:

All Equipment	The access right applies to all equipment controlled by the company.
SCAC(s)	The administrator may specify one or more SCACs (from the set of SCACs managed by the administrator) to which the access right applies.
Equipment Initials	The administrator may specify one or more equipment initials (from the set of car initials managed by the administrator) to which the access right applies.
Equipment Group(s)	The administrator may specify one or more equipment groups (e.g., box cars, tank cars, locomotives, etc.) to which the access right applies. See Equipment Group(s) in Exhibit 22 .
Equipment IDs or Equipment Series	The administrator may specify one or more equipment IDs to which the access right applies.

Range of pools—For a pool-related access right, the administrator specifies to which pools the access right applies. The administrator restricts access to one of the following:

All pools	The access right applies to all pools controlled by the company.
Pool ID(s)	The administrator may specify one or more pool IDs to which the access right applies.

When **Account Administration > Security Management** is selected, the Security Management page is displayed ([Exhibit 197](#)).

Exhibit 197. Security Management

Security Management

Welcome to the EMIS Security Management Module. What would you like to do?

Administer Access Rights Internal to My Company

[View My Access Rights](#)
[Manage Intra-Company User Access Rights](#)
[Manage Security Profiles](#)
[Add/Remove User to/from Security Profiles](#)

Administer Access Rights Involving Other Companies

[Manage Inter-Company Access Rights / Profiles Granted by My Company](#)
[Manage Inter-Company Access Rights Granted to My Company](#)
[Manage Inter-Company Profiles Granted to My Company](#)

Search User Access Rights

[Search User Access Rights](#)

Transfer Access Rights between Companies

[Manage Admin Users](#)

There are four security management task sections:

- [Administer Access Rights Internal to My Company](#)
- [Administer Access Rights Involving Other Companies](#)
- [Search User Access Rights](#)
- Transfer Access Rights Between Companies (Railinc Administrators only)

All access rights activities are listed on the Security Management page.

Administer Access Rights Internal to My Company

The following actions pertain to access rights internal to your company.

- [View My Access Rights](#) (available to all users)
- [Manage Intra-Company User Access Rights](#) (Company Administrators only)
- [Manage Security Profiles](#) (Company Administrators only)
- [Add/Remove User To/From Security Profiles](#) (Company Administrators only)

View My Access Rights

This security management option is available to all Umler users. On the Security Management page ([Exhibit 197](#)), select **View My Access Rights**. The View a User's Access Rights page is displayed ([Exhibit 198](#)).

Exhibit 198. View a User's Access Rights

View A User's Access Rights

Currently viewing access rights for:

Your Company's Umler Administrator: @railinc.com

Display : First 25 ▼ ✓ Apply ✕ Clear Filters

Select	Company	Effective Date	Expiration Date	Type	Description
☒	RAIL	02/13/2023	12/31/9999	Equipment	EQUIPMENT RIGHTS
☐	RAIL	02/13/2023	12/31/9999	Inspection	INSPECTION RIGHTS
☐	RAIL	02/13/2023	12/31/9999	Pool	POOL RIGHTS

👁 View 🏠 Done

To view the details of a specific access right, select the radio button beside the access and select **View**. The details of the access are displayed. [Exhibit 199](#) show the access details for the *pool* right access listed in [Exhibit 198](#).

Exhibit 199. Pool Access Right – View Only

Pool Access Right

Done

Details

Company: RAIL
Description: POOL RIGHTS

Timeframe of Authority

Effective Date: 02/13/2023 Expiration Date: 12/31/9999

Range of Pool

All Pools

Type of Access

Add a Pool Header
Update a Pool Header
Delete a Pool Header
"Pool Management" - Assignment / Unassignment

Done

Select the **Company link** to view the Company Contact information page (similar to [Exhibit 60](#)).

No other actions are available on this page. When finished viewing, select **Done**.

Manage Intra-Company User Access Rights

A company Umler administrator can update a user's access rights. The administrator can grant new access rights, modify existing access rights, delete existing access rights, or copy access rights from another user.



Before assigning access rights, check the user's existing rights to ensure rights are not duplicated or contradicted.

Use the following procedure to manage user access rights:

1. On the Security Management page ([Exhibit 197](#)), select **Manage Intra-Company User Access Rights**. The Update a User's Access Rights page is displayed ([Exhibit 200](#)).

Exhibit 200. Update a User's Access Rights

Update A User's Access Rights

Select the user to update.

✕ Clear Filters

Select	User ID	Name
☒	A_EMISCO	Admin Umler Company
☐	ASSET.IT	IT ASSET
☐	AUTOAPI	Umler Auto
☐	AUTOCEPM	Desai Bini
☐	AUTOCRMS	CRMS Auto
☐	AUTOEMIS	Emis Auto
☐	AUTORSA	qa ehms
☐	AUTOSYS	System Auto
☐	AUTOTNS	Testing Air
☐	AUTOUMLR	Umler Automation

2. Scroll and select the radio button beside the user to be updated. Then choose **Select**. The Update a User's Access Rights page is redisplayed with the selected user's access rights ([Exhibit 201](#)).

Exhibit 201. Update a User's Access Rights for Selected User

Update A User's Access Rights

Currently editing access rights for security profile: [MICHDEV](#)

✕ Clear Filters

Select	Company	Effective Date	Expiration Date	Type	Description
☒	RAIL	02/13/2023	12/31/9999	Pool	POOL RIGHTS
☐	RAIL	02/13/2023	12/31/9999	Equipment	EQUIPMENT RIGHTS
☐	RAIL	02/13/2023	12/31/9999	Inspection	INSPECTION RIGHTS

The following actions are possible:

- [Add Pool Right](#)
- [Add Equipment Right](#)
- [Add Inspection Right](#)
- [Edit](#)
- [Delete](#)
- [Clone Rights from another User](#)

ADD POOL RIGHT

Use this function to add pool rights. When **Add Pool Right** is selected, the Pool Access Right page is displayed for the selected user ID ([Exhibit 202](#)).

Exhibit 202. Pool Access Right for User ID

Pool Access Right

Currently editing access rights for: MICHDEV
 Edit the details of the access right.

Save

Cancel

Description of Access Right

Description *

Timeframe of Authority

Effective Date *

Expiration Date *

Range of Pool

☒ All Pools
 ☐ Pool ID(s)

Type of Access

Add a Pool Header
 Update a Pool Header
 Delete a Pool Header
 "Pool Management" - Assignment / Unassignment

Save

Cancel

1. Complete the fields (mandatory fields are in **red**):

Exhibit 203. Pool Access Right Field Descriptions

Field	Description
*Description	Enter a description of the access rights. It can be simple, like Pool Rights or specific, like BOXC Pools Only, or Hoppers and Gondolas Pool to indicate wider scope.
Timeframe of Authority	Specify the *Effective Date and the *Expiration Date for the granted pool right. The Effective date defaults to today's date and must be greater than or equal to today's date. The Expiration Date must be greater than or equal to the Effective Date.

Field	Description
Range of Pool	Select either the All Pools radio button (default) or the Pool ID(s) radio button. For Pool ID(s), enter either specific Pool IDs or a range.
Type of Access	Select one or more of the available access types (allowed activities) to assign (Press Ctrl key for multiple selections.): • Add a Pool Header • Update a Pool Header • Delete a Pool Header • Pool Assignment / Unassignment

2. When all fields are completed, select **Save**. The Update a User's Access Rights page is redisplayed with the new rights displayed.

ADD EQUIPMENT RIGHT

Use this function to add equipment rights. When **Add Equipment Right** is selected, the Equipment Access Right page is displayed for the selected user ID ([Exhibit 204](#)).

Exhibit 204. Equipment Access Right for User ID

Equipment Access Right

Currently editing access rights for: MICHDEV
Edit the details of the access right.

Save Count Equipment Cancel

Description of Access Right

Description *

Timeframe of Authority

Effective Date * 12/30/9999 Expiration Date *

Range of Equipment

☒ All Equipment: SCAC(s): Initial(s): Equipment Group(s): Equipment:

RAIL AA AARX RAIL BOXC CHSS CONT EOTD

Type of Access

Non-Owner Self-as-Lessee Removal
Equipment - "Add to Pool"
Equipment - "Remove from Pool"
Add Equipment
Modify Equipment
Delete Equipment

Save Count Equipment Cancel

1. Complete the fields (mandatory fields are in ***red**):


Exhibit 205. Equipment Access Right Field Descriptions

Field	Description
*Description	Enter a description of the access rights. It can be simple, like Equipment Rights or specific, like BOXC Equip, or Hopper and Gondola Equip to indicate wider scope. For equipment, it might include SCACs in the description.

Field	Description
Timeframe of Authority	Specify the *Effective Date and the *Expiration Date for the granted equipment right. The Effective date defaults to today's date and must be greater than or equal to today's date. The Expiration Date must be greater than or equal to the Effective Date.
Range of Equipment	Select either the All Equipment radio button (default) or: • SCAC(s) – Select one or more listed railroad marks. • Initial(s) – Select one or more listed equipment initials. • Equipment Group(s) – Select one or more listed equipment types. • Equipment – Enter specific equipment Marks and numbers (Equipment IDs). Press Ctrl key for multiple selections.
Type of Access	Select one or more of the available access types (allowed activities) to assign (Press Ctrl key for multiple selections.): • Non-Owner Self-As-Lessee Removal • Equipment - "Add to Pool" • Equipment - "Remove from Pool" • Add Equipment • Modify Equipment • Delete Equipment

2. (Optional) Select the **Count Equipment** button to determine the number of equipment units included in the rights assigned.

Exhibit 206. Count for Access Rights



3. When all fields are completed, select **Save**. The Update a User's Access Rights page is redisplayed with the new rights displayed.

ADD INSPECTION RIGHT

Use this function to add inspection rights. When **Add Inspection Right** is selected, the Inspection Access Right page is displayed for the selected user ID ([Exhibit 207](#)).

Exhibit 207. Inspection Access Right for User ID

Inspection Access Right

Currently editing access rights for: MICHDEV
 Edit the details of the access right.

Save Count Equipment Cancel

Description of Access Right

Description *

Timeframe of Authority

Effective Date * Expiration Date * 12/30/9999

Authorize reporting as the following marks / Authorize reporting for the following inspections

☒ All Marks: Mark(s):
☒ All Inspections: Inspections Types(s):

Range of Equipment

☒ All Equipment: SCAC(s): Initial(s): Equipment Group(s): Equipment:

Save Count Equipment Cancel

1. Complete the fields (mandatory fields are in ***red**):

Exhibit 208. Inspection Access Right Field Descriptions

Field	Description
*Description	Enter the Description of the access rights. It can be simple, like Inspection Rights or specific, like BOXC Inspection, or Hopper and Gondola Inspection to indicate wider scope.
Timeframe of Authority	Specify the *Effective Date and the *Expiration Date for the granted inspection right. The Effective Date defaults to today's date and must be greater than or equal to today's date. The Expiration Date must be greater than or equal to the Effective Date.

Field	Description
Authorize reporting as the following marks	Use the All Marks checkbox to (default) select all marks or uncheck this box and select individual listings under the Mark(s) heading. Press Ctrl key for multiple selections.
Authorize reporting for the following inspections	Use the All Inspections checkbox to select all inspection types (default) or uncheck this box and select individual listings under the Inspection Type(s) heading (refer to Exhibit 134). Press Ctrl key for multiple selections.
Range of Equipment	Select either the All Equipment radio button (default) or: • SCAC(s) – Select one or more listed railroad marks. • Initial(s) – Select one or more listed equipment initials. • Equipment Group(s) – Select one or more listed equipment types. • Equipment – Enter specific equipment Marks and numbers (Equipment IDs). Press Ctrl key for multiple selections.

2. (Optional) Select the **Count Equipment** button to determine the number of equipment units included in the rights assigned.
3. When all fields are completed, select **Save**. The **Update a User's Access Rights** page is redisplayed with the new rights displayed.

EDIT

Use to edit or view an existing access right.

Use the following procedure to edit (or view) user access rights:

1. On the **Security Management** page ([Exhibit 197](#)), select **Manage Intra-Company User Access Rights**. The Update a User's Access Rights page is displayed ([Exhibit 200](#)).
2. Scroll and select the radio button beside the user to be updated. Then choose **Select**. The **Update a User's Access Rights** page is redisplayed with the selected user's access rights ([Exhibit 201](#)).
3. Select the radio button beside the access right to be viewed or edited and select **Edit**. The <Pool, Equipment, or Inspection> Access Rights page is displayed accordingly. A statement indicates the User ID that is being edited. The page shows the existing settings.
4. If no changes are needed, select **Cancel** to return to the Update a User's Access Rights page, otherwise, continue.
5. Modify the content as described in Update Access Rights as described in [Edit](#) (Access rights):
6. When all changes have been made:
 - a. (Optional) Select the **Count Equipment** button to determine the number of equipment units included in the revised rights assigned. See [Exhibit 206](#).
 - b. Select **Save**. The **Update a User's Access Rights** page is redisplayed with the revised rights displayed.

DELETE

Use this option to delete an existing access right.

Use the following procedure to delete user access rights:

1. On the **Security Management** page ([Exhibit 197](#)), select **Manage Intra-Company User Access Rights**. The Update a User's Access Rights page is displayed ([Exhibit 200](#)).
2. Scroll and select the radio button beside the user to be updated. Then choose **Select**. The Update a User's Access Rights page is redisplayed with the selected user's access rights ([Exhibit 201](#)).
3. Select the radio button beside the access right to be deleted and select **Delete**. The Confirm – Delete an Access Right page is displayed ([Exhibit 209](#)).

Exhibit 209. Confirm - Delete an Access Right

Confirm - Delete an Access Right

 Are you sure you want to delete this access right?

Currently editing access rights for security profile: MICHDEV

 Delete
 Cancel

4. If unsure about the deletion select **Cancel**. Otherwise, select **Delete** to confirm. The Update a User's Access Rights page is redisplayed without the deleted access right listed.

CLONE RIGHTS FROM ANOTHER USER

Use this option to clone access rights from another user.

Use the following procedure to clone rights:


1. On the Security Management page ([Exhibit 197](#)), select **Manage Intra-Company User Access Rights**. The Update a User's Access Rights page is displayed ([Exhibit 200](#)).
2. Scroll and select the radio button beside the user to be updated. Then choose **Select**. The Update a User's Access Rights page is redisplayed with the selected user's access rights ([Exhibit 201](#)).
3. Select **Clone Rights from Another User**. The Select Access Right Source page is displayed ([Exhibit 210](#)).

Exhibit 210. Select Access Right Source


Select Access Right Source

Currently editing access rights for: MICHDEV

Select the user whose access rights will be cloned.

 Clear Filters

Select	User ID	Name
☐	ARTUROT	Torrecilla Arturo
☐	ASSET.IT	IT ASSET
☐	AUTOAPI	Umler Auto
☐	AUTOEMIS	Emis Auto
☐	AUTORSA	qa ehms
☐	AUTOSYS	System Auto
☐	AUTOTNS	Testing Air
☐	AUTOUMLR	Umler Automation
☒	AUTOWER	Tester QA

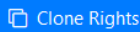 Clone Rights
 Cancel

Scroll and select the radio button beside the user whose access rights are to be cloned (copied). Then select **Clone Rights**. The **Confirm Clone Access Rights** page is displayed with the selected source user's access rights ([Exhibit 211](#)).

Exhibit 211. Confirm Clone Access Rights

Confirm Clone Access Rights

Currently editing access rights for security profile: [MICHDEV](#)
Are you sure you want to grant the following access rights ?

✕ Clear Filters

Company	Effective Date	Expiration Date	Type	Description
RAIL	11/07/2016	12/31/9999	Pool	Pool Rights
RAIL	11/07/2016	12/31/9999	Equipment	Equipment Rights
RAIL	11/07/2016	12/31/9999	Inspection	Inspection Rights

Confirm Clone Rights

✕ Cancel

If unsure about the rights, select **Cancel** to exit. Otherwise, select **Confirm Clone Rights**. The Update a User's Access Rights page is redisplayed with the new cloned rights. The effective date defaults to the current date.

Manage Security Profiles

The manage security profiles option allows a Company Umler Administrator to create security profiles for his/her company. A profile represents a collection of access rights. The Company Umler Administrator can then associate a profile to multiple users in one step, thus simplifying access rights management.

ABOUT COMBINING POOL AND EQUIPMENT ACCESS RIGHTS

A company administrator can restrict a user activity to certain pools, equipment groups, equipment initials, or equipment units (equipment initial/numbers).

By combining Pool Rights along with Equipment Rights for a user, the administrator can create tighter security around that user's access rights. For example, the administrator can restrict the equipment groups, equipment initials, or equipment units that a pool operator could assign to a pool.

Example 1:

- User is granted Pool Rights for All Pools.
 - User is also granted Equipment Rights for Gondolas only.
- Result:** The user has rights to all pools but can only assign Gondolas to those pools.

Example 2:

- BNSF User is granted Pool Right for a single specific Pool Id (NNNNNNN).
 - BNSF User is also granted Equipment Rights for Equipment Initial ATSF.
- Result:** The user has rights only to pool NNNNNNN and can only assign Equipment Initials of ATSF to that specific pool.

Use the following procedure to work with security profiles:

- On the Security Management page ([Exhibit 197](#)), select **Manage Security Profiles**. The Manage Security Profiles page is displayed ([Exhibit 212](#)).

Exhibit 212. Manage Security Profiles

Manage Security Profiles

Clear Filters

☐	ID	Name
☐	19508	SEC171108
☐	19505	SEC16055501
☐	19506	SEC171104
☐	19571	SEC230329
☐	19572	SEC230529
☐	19573	SEC230539
☐	11	SEC160555

2. Select from the following options:

- a. Select **Add** to add a new security profile. See [Adding a New Security Profile](#).
- b. Select the ID hyperlink of a displayed security profile to edit that profile. See [Editing a Security Profile](#).

Check the box beside a listed security profile and select **Clone** to clone an existing security profile. The Administrator should select the closest profile to the new one to be created. See [Cloning a Security Profile](#).

- d. Check the box beside a listed security profile and select **Delete** to delete that profile. See [Deleting a Security Profile](#).

ADDING A NEW SECURITY PROFILE

When **Add** is selected on the Manage Security Profiles page ([Exhibit 212](#)), the Add Security Profile page is displayed ([Exhibit 213](#)).

Exhibit 213. Add Security Profile

Add Security Profile

* Security Profile Name :

User:

Clear Filters

☐	User ID	User Name	Access Rights
☐	A_EMISCO	Admin Umler Company	View Individual Access Rights
☐	ASSET.IT	IT ASSET	View Individual Access Rights
☐	AUTOAPI	Umler Auto	View Individual Access Rights
☐	AUTOEMIS	Emis Auto	View Individual Access Rights
☐	AUTORSA	qa ehms	View Individual Access Rights
☐	AUTOSYS	System Auto	View Individual Access Rights
☐	AUTOTNS	Testing Air	View Individual Access Rights
☐	AUTOUMLR	Umler Automation	View Individual Access Rights

1. Enter the ***Security Profile Name**. It is suggested that these be role-related and intuitive. For example, Inspectors, Manager Full Rights, or Boxcar Pool Manager, etc.
2. (Optional) Check the boxes for **User IDs** to be the new security profile users. Assignments can be done later during the security profile edit.
 - a. If needed, select the **User ID** link to view contact information for that user.
 - b. Select **View Individual Access Rights** link to view access rights already assigned to that user.
3. Select **Save** to save the profile name. The Edit Security Profile page is displayed with a success message and additional buttons ([Exhibit 214](#)).
4. A new profile has no rights assigned. A profile ID is assigned automatically by Umler.

Exhibit 214. Edit Security Profile for New Profile

Edit Security Profile

 The security profile has been saved.

ID: 9981

* Security Profile Name :

User:

[Clear Filters](#)

☐	User ID	User Name	Access Rights
☐	AUTOEHMS	(RAIL) EHMS QA Automation	View Individual Access Rights
☐	EVIZIT01	Admin DDCTS	View Individual Access Rights
☐	A.EMISCO	Admin Umler Company	View Individual Access Rights
☐	TRAINFAX	Application TrainFax	View Individual Access Rights
☐	RESTAPI	Automation ApiTest	View Individual Access Rights
☐	GBRXMDRN	AWS GBRX	View Individual Access Rights

[Save](#)
[Save and Return](#)
[Cancel](#)

Access Rights

No rights currently assigned to profile.

[+ Add Pool Right](#)
[+ Add Equipment Right](#)
[+ Add Inspection Right](#)

5. Add Pool, Equipment, and Inspection rights and select **Save** as described in:
 - [Exhibit 203. Pool Access Right Field Descriptions](#)
 - [Exhibit 205. Equipment Access Right Field Descriptions](#)
 - [Exhibit 208. Inspection Access Right Field Descriptions](#)

- (Optional) Check the boxes beside those **User IDs** to be the new security profile users. Assignments can be done later during subsequent security profile edits.
- When all rights and users have been added, select **Save and Return** to save the created security profile and return to the Manage Security Profiles page. The new profile is listed.

EDITING A SECURITY PROFILE

When a profile **User ID** link is selected on the Manage Security Profiles page ([Exhibit 212](#)), the Edit Security Profile page is displayed ([Exhibit 215](#)).

Exhibit 215. Edit Security Profile for Existing Profile

Edit Security Profile

Inspection Right added successfully.

ID: 9981
 * Security Profile Name : User Guide Rights
 User:

☐	User ID	User Name	Access Rights
☐	AUTOEHMS	(RAIL) EHMS QA Automation	View Individual Access Rights
☐	EVIZITD1	Admin DDCTS	View Individual Access Rights
☐	A.EMISCO	Admin Umler Company	View Individual Access Rights
☐	TRAINFAX	Application TrainFax	View Individual Access Rights
☐	RESTAPI	Automation ApiTest	View Individual Access Rights
☐	GBRXMDRN	AWS GBRX	View Individual Access Rights

Access Rights

☐	ID	Company	Effective Date	Expiration Date	Type	Description
☐	1037687	RAIL	11/06/2023	12/30/9999	Pool	User Guide
☐	1037688	RAIL	11/06/2023	12/30/9999	Equipment	User Guide
☐	1037689	RAIL	11/06/2023	12/30/9999	Inspection	User Guide

Perform one of the following actions:

Add profile users—Check the boxes beside the **User IDs** and select **Save** to remain on the Edit Security Profile page or **Save and Return** to save the profile user additions and return to the Manage Security Profiles page.

Delete profile users—Uncheck the boxes beside the **User IDs** and select **Save** to remain on the Edit Security Profile page or **Save and Return** to save the profile user deletions and return to the Manage Security Profiles screen.

Edit existing access rights—Select the **View Individual Access Rights** link. The <Pool, Equipment, or Inspection> Access Rights page is displayed accordingly. Modify and **Save** the content as described in Update Access Rights as described in [Edit](#) (Access rights).

Add new pool rights, equipment rights, or inspection rights—Select the corresponding command button. Enter rights and **Save** as described in the following:

- [Exhibit 203. Pool Access Right Field Descriptions](#)
- [Exhibit 205. Equipment Access Right Field Descriptions](#)
- [Exhibit 208. Inspection Access Right Field Descriptions](#)

Delete access rights—Check the box beside the Pool, Equipment, or Inspection Rights to be removed and select **Delete**. A confirmation page is displayed with a choice to **Cancel** or **Delete**.

CLONING A SECURITY PROFILE

When you check the box beside the profile **ID** link on the Manage Security Profiles page ([Exhibit 212](#)) and select **Clone**, the Edit Security Profile page is displayed ([Exhibit 216](#)).

Exhibit 216. Clone a Security Profile

ID:

9981

* Security Profile Name :

User Guide Rights

User:

Clear Filters

☐	User ID	User Name	Access Rights
☐	AUTOEHMS	(RAIL) EHMS QA Automation	View Individual Access Rights
☐	EHV_SYS	Account EHV System	View Individual Access Rights
☐	EVIZITD1	Admin DDCTS	View Individual Access Rights
☐	A.EMISCO	Admin Umler Company	View Individual Access Rights
☐	TRAINFAX	Application TrainFax	View Individual Access Rights
☐	RESTAPI	Automation ApiTest	View Individual Access Rights
☐	GBRXMDRN	AWS GBRX	View Individual Access Rights

Save

Save and Return

Cancel

Access Rights

Clear Filters

☐	ID	Company	Effective Date	Expiration Date	Type	Description
☐	1037687	RAIL	11/06/2023	12/30/9999	Pool	User Guide
☐	1037688	RAIL	11/06/2023	12/30/9999	Equipment	User Guide
☐	1037689	RAIL	11/06/2023	12/30/9999	Inspection	User Guide

+ Add Pool Right

+ Add Equipment Right

+ Add Inspection Right

Delete

The unnamed new security profile contains exactly the same rights as its source and also has the same user population.

Use the following procedure to complete the cloning process:

1. Enter the new cloned **Security Profile Name**.
2. Unselect All users in the **User ID** field.

3. (Optional) Check the box beside the **User IDs** that are to be the new security profile users. Profile users can also be added later during an edit session.
4. Update Access Rights as described in [Edit](#) (Access rights).
5. When all users and right have been adjusted, select **Save**. The Manage Security Profiles page is displayed with the new, cloned profile. Umler automatically assigns a Profile ID.


DELETING A SECURITY PROFILE

When you check the box beside the profile **ID** link on the Manage Security Profiles page ([Exhibit 212](#)) and select **Delete**, the Confirm Delete of Security Profile(s) page is displayed ([Exhibit 217](#)).

Exhibit 217. Confirm Delete of Security Profile(s)

Confirm Delete of Security Profile(s)

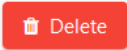 Are you sure you wish to delete the selected security profile(s)? 

If unsure about the deletions, select **Cancel**. Otherwise, select **Delete**. The Manage Security Profiles page is redisplayed with a success message, and the deleted profiles are not listed.

Add/Remove User To/From Security Profiles

This function allows the administrator to add/remove multiple security profiles *for a single user*. If more than one user is involved, it can be quicker to edit the security profiles and assign multiple users during the edit session.


Use the following procedure to add/remove user to/from security profiles:

1. On the Security Management page ([Exhibit 197](#)), select **Add/Remove User to/from Security Profiles**. The Add/Remove User to/from Security Profiles page is displayed ([Exhibit 218](#)).



Exhibit 218. Add/Remove User To/From Security Profiles

Add/Remove User to/from Security Profiles

Please select a user and click the "Select" button.



Select	User ID	Name
☐	JPOUCHER	Poucher Justin
☐	JRSYSTEM	Roberts Josh
☐	KBENNETT	Bennett Karin
☐	KMSURG23	McMillan Kenya
☐	LRBDEV	Nair Anoop
☐	madDEV	MADDEN SHAWN
☐	MAYUREEC	Chinnari Mayuree
☒	MICHDEV	Ferrar Michelle
☐	MONEMIS	Knowles Chris
☐	MOREROLE	MENG DONGMEI

2. Select the radio button beside the **User ID** to be added or removed as a profile user and select. The second Add/Remove User to/from Security Profiles page is displayed ([Exhibit 219](#)).

Exhibit 219. Add/Remove User To/From Security Profiles Add/Remove Windows

Add/Remove User to/from Security Profiles

Add or remove Security Profiles for User: [MICHDEV](#)

Available Profiles:

- SEC171128
- SEC171128
- SEC220648
- SEC230329
- SEC230529
- SEC230539
- SEC160555
- SEC230630
- SEC160452
- SEC160452
- SEC160452
- SEC230932
- SEC230933

Profiles Currently Assigned to this User:

User Guide Rights

The user being modified is listed below the page title.

3. Add or remove profiles:

- To **add** a profile, select/highlight a profile from the Available Profiles window and select the right arrow (). The selected profile moves to the Profiles Currently Assigned to this User window.

To **add all** profiles to the user, select the double right arrow (➡). No profile selection is necessary.

- To **remove** a profile, select/highlight a profile the Profiles Currently Assigned to this User window and select the left arrow (⬅).

To **remove all** profiles from the user, select the double left arrow (⬅⬅). No profile selection is necessary.

4. Select **Save** to save changes and return to the Security Management page. A successful update message is displayed.

Administer Access Rights Involving Other Companies

An administrator grants access rights—to equipment, inspections, and pools, as well as access to confidential data controlled by his/her company (*grantor*)—to another company (*grantee*).

The grantor's administrator selects a grantee (by company) from the list of Umler-participating companies. The administrator updates the grantee's access rights to the grantor's data. The grantor's administrator can grant new access rights to the grantee or revoke any of the grantee's existing access rights.

A “handshake” between companies is required for Inter-Company access rights. A grantee must accept a grant before it becomes effective.

The following actions are for access rights involving other companies and are available only to Company Administrators:

- [Manage Inter-Company Right/Profiles Granted by My Company](#)
- [Manage Inter-Company Access Rights Granted to My Company](#)
- [Manage Inter-Company Profiles Granted to My Company](#)
- [Special SSO Security Request for Non-Participating Companies](#)
- [View Status of Special Umler SSO Requests](#)

Manage Inter-Company Right/Profiles Granted by My Company

This function allows a grantor administrator to grant access rights for equipment, inspections, and pools controlled by his/her company as well as access to confidential data.

Use the following procedure to work with access rights granted to other companies:

1. On the Security Management page ([Exhibit 197](#)), select **Manage Inter-Company Right/Profiles Granted by My Company**. The Inter-Company Right/Profiles Granted by My Company page is displayed ([Exhibit 220](#)).

Exhibit 220. Inter-Company Access Rights Granted by My Company

Inter-Company Access Rights Granted by My Company

Select the company whose access rights you want to edit.

Select	Company	Company Name
☐	ABCU	ABC MOBILE STORAGE
☐	AOK	ARKANSAS-OKLAHOMA RAILROAD INC
☐	BNSF	BNSF RAILWAY COMPANY
☐	C006	WATCO COMPANIES INC
☐	NS	NORFOLK SOUTHERN RAILWAY COMPANY (NORFOLK SOUTHERN)
☐	SUMX	SUMXSUMITOMO CORPORATION OF AMERICAS
☐	UP	UNION PACIFIC RAILROAD COMPANY
☐	WSOR	WISCONSIN & SOUTHERN RAILROAD LLC

☐ Add a company...

This page shows existing rights by Company. If a new company is to be added, select the radio button beside the **Add a company** drop-down list. The list becomes active ([Exhibit 221](#)). Locate the company and select. The list closes with the selection showing.

Exhibit 221. Add a Company

2. Otherwise, select the radio button beside the existing company listed whose access is to be added to or revised.

3. Choose one of the following options:

[Grant Access Rights](#)—Opens the Update Access Rights page for the selected company ([Exhibit 222](#)).

[Grant Profiles](#)—Opens the Manage Security Profiles page for the selected company ([Exhibit 225](#)).

GRANT ACCESS RIGHTS

When the administrator selects a grantee and selects **Grant Access Rights** on the Inter-Company Right/Profiles Granted by My Company page, the Update Access Rights page is displayed.

Exhibit 222. Update Access Rights

Select	ID	Effective Date	Expiration Date	Type	Description	Status
☒	118483	04/29/2011	05/09/2011	Equipment	GATX Equipment rights for RAIL	Expired
☐	1019162	02/21/2023	12/31/9999	View Confidential Data	Tuong Test12	Accepted
☐	1023763	05/11/2023	12/31/9999	Inspection	GATX inspection	Accepted

All existing rights for the selected company are shown. Access rights can have the statuses shown in [Exhibit 223](#).

Exhibit 223. Access Rights Statuses

Status	Description
Accepted	Access rights accepted by the grantee company.
Declined	Access rights declined by the grantee company.
Expired	Access rights have lapsed due to timeframe.
Pending	Access granted by administrator's company, but not accepted or declined currently.
Relinquished	Access right accepted by grantee, but then surrendered.
Revoked	Access rights removed by the grantor company.

Actions allowed on this page include:

Add Pool Right—Opens the Pool Access Right page (similar to [Exhibit 202](#)). Refer to [Add Pool Right](#). The new pool right might include the grantee's mark as part of the description.

Add Equipment Right—Opens the Add Equipment Right page (similar to [Exhibit 204](#)). Refer to [Add Equipment Right](#). The new equipment right might include the grantee's mark as part of the description.

Add Inspection Right—Opens the Inspection Access Right page (similar to [Exhibit 207](#)). Refer to [Add Inspection Right](#). The new inspection right might include the grantee's mark as part of the description.

Add View Confidential Data Right—Opens the View Confidential Data Access Right page ([Exhibit 224](#)). Refer to [Add Equipment Right](#) for instructions. The new confidential equipment right might include the grantee's mark as part of the description. A limited Timeframe of Authority can be imposed as well.

Exhibit 224. View Confidential Data Access Right

View Confidential Data Access Right

Currently editing access rights for: GATX

Edit the details of the access right.

Save

Count Equipment

Cancel

Description of Access Right

Description *

Timeframe of Authority

Expiration Date *

Effective Date *

12/30/9999

Range of Equipment

☒ All Equipment:
 SCAC(s):
 Initial(s):
 Equipment Group(s):
 Equipment:

RAIL

AA
AARX
RAIL

BOXC
CHSS
CONT
EOTD

Save

Count Equipment

Cancel

View—Select the radio button beside the grantee access to be viewed and select **View**. A read-only page (similar to [Exhibit 199](#)) opens. When finished viewing, select **Done** to return to the Update Access Rights page.

Revoke—Select the radio button beside the grantee access to be revoked and select **Revoke**. A confirmation page is displayed. If unsure about revoking the rights, select **Cancel**. Otherwise, select **Revoke**. The Update Access Rights page is redisplayed with the access right status shown as revoked.

Done—Returns User to the Inter-Company Right/Profiles Granted by My Company page ([Exhibit 220](#)).

GRANT PROFILES

When the administrator selects a grantee and selects **Grant Profiles** on the Inter-Company Right/Profiles Granted by My Company page, the Manage Security Profiles page is displayed ([Exhibit 225](#)). If no security profiles (groups of rights) have been established with this company previously, the list shown is empty (no profiles).

Exhibit 225. Manage Security Profiles

ID	Name	Status
☐ 9457	KMC123	Pending

The grantor administrator can do the following tasks:

Security Profile ID link—For Pending profiles, selecting the Security Profile ID link opens the Edit Security Profile page (similar to [Exhibit 215](#)). Refer to [Editing a Security Profile](#). No “User” section is included when editing profiles for other companies, since the user population is unknown. Modification of the various rights and dates are the same.

Add—Add a new security profile for the grantee company. The Add Security Profile page is displayed (similar to [Exhibit 213](#)). The Security Profile Name should include the grantor’s Mark, since, once accepted by the grantee, the profile is included in the profiles available for assigning to grantee users. Refer to [Adding a New Security Profile](#). No “User” section is included when creating profiles for other companies, since the user population is unknown. Assignment of the various rights and dates are the same.

Revoke—Check the box beside the profile to be revoked and select **Revoke**. There is NO warning prior to the revocation, and the status changes to revoked.

Select **Done** to return to the Security Management page.

Manage Inter-Company Access Rights Granted to My Company

This function allows the grantee administrator to accept, decline, relinquish, and assign users to access rights granted by other companies.

Use the following procedure to work with access rights granted by other companies:

1. On the Security Management page ([Exhibit 197](#)), select **Manage Inter-Company Access Rights Granted to My Company**. The Inter-Company Access Rights Granted to My Company page is displayed ([Exhibit 226](#)).

Exhibit 226. Inter-Company Access Rights Granted to My Company

Inter-Company Access Rights Granted to My Company

View

Done

Clear Filters

Select	ID	Grantor	Effective Date	Expiration Date	Type	Description	Status
☒	5920	AMTK	04/07/2006	12/31/9999	Pool	999 pool righthst for Railinc	Relinquished
☐	107381	AARE	08/07/2019	12/31/9999	Equipment	equipment rights	Accepted
☐	1031110	TOPX	11/20/2023	12/30/9999	Equipment	EVZQA11_RAIL	Relinquished
☐	1031111	A125	11/20/2023	12/30/9999	Equipment	EVIZQA1_RAIL	Accepted
☐	1092701	NS	06/08/2025	08/20/2025	Equipment	uniqueDescription1122	Pending
☐	1092871	NS	06/15/2025	07/15/2025	Equipment	Right20250615225302	Expired
☐	1093523	ATW	06/30/2025	12/31/9999	Equipment	Equip Rights	Accepted
☐	1093524	ATW	06/30/2025	12/31/9999	View Confidential Data	Conf Rights	Accepted

View

Done

Delete

The status of each access right is described in [Exhibit 223](#).

2. To remove an access right, select the radio button beside the appropriate access and select **Delete**. A confirmation page displays. Select **Delete** again to delete the access right.

Exhibit 227. Delete Confirmation

Confirm - Delete An Access Right

Are you sure you want to delete the selected access right?

✕ Delete

✕ Cancel

To view an access right, select the radio button beside the appropriate access and select **View**. The View <Type> Access Right page is displayed ([Exhibit 228](#)). The title of the View page reflects the type of access granted (Pool, Equipment, Inspection, or Confidential Data).

Exhibit 228. View <Type> Access Right

View Confidential Data Access Right

Details

Status: Pending

Company: [UP](#)

Description: 7955 all equipments

Timeframe of Authority

Effective Date: 10/17/2023 Expiration Date: 12/31/9999

Range of Equipment

All Equipment:

☒ Accept ☒ Decline ☒ Done

Please make a selection below:

☐ Lease Agreement

☐ Sold

Depending on the type of access granted and its status, available actions vary.

Exhibit 229. Status-Based Actions for View

Status	Actions Available					
	Accept	Assign to User	Assign to Profile	Decline	Done	Relinquish
Accepted		✓	✓		✓	✓
Declined					✓	
Expired					✓	
Pending	✓			✓	✓	
Relinquished					✓	
Revoked					✓	

Accept—Accept the grantor’s **Pending** access right. The status changes to **Accepted** and new actions are available (see [Exhibit 229](#)).

Decline—Declines the grantor’s **Pending** access right. The status changes to **Declined** and no further actions are available (see [Exhibit 229](#)).

Assign to User—For **Accepted** access rights, opens the Intra-Company User List ([Exhibit 230](#)). See [Assign to User](#). Only one user can be assigned at a time. If multiple users need this right, the administrator may choose to assign to a profile instead.

Assign to Profile—Allows the administrator to add an **Accepted** access right to an existing security profile. Opens the Manage Security Profiles page ([Exhibit 212](#)). See [Assign to Profile](#).

Relinquish—Allows the administrator to surrender an **Accepted** access right. The status becomes **Relinquished** and new actions are available (see [Exhibit 229](#)).

ASSIGN TO USER

When the administrator views an *accepted* access right and selects **Assign to User**, the Intra-Company User List is displayed ([Exhibit 230](#)).

Exhibit 230. Intra-Company Users List

Intra-Company Users List

Select the user to update.

✕ Clear Filters

Select	User ID	Name
☒	ADMNSRGE	Test ADMUSR
☐	ASSET_IT	IT Asset
☐	AUTOAPI	API AUTO
☐	AUTOCEPM	Admin App
☐	AUTOTNS	Testing Air

✓ Select

🏠 Done

1. Scroll and select the radio button beside the appropriate user. Scroll to the bottom of the page (press **End**) and choose **Select**. The View <Type> Access Right page is displayed with the selected user identified under the page title ([Exhibit 231](#)).

Exhibit 231. View <Type> Access Right User Assignment Example

Pool Access Right

Currently assigning a right to: [AUTOCEPM](#)
Edit the details of the access right.

[Save](#) [Done](#)

Description of Access Right

Access Right ID (Assigned from inter-company)
4813

Description *

all pools rights to Railinc

Timeframe of Authority

Effective Date * Expiration Date *

03/23/2006 12/31/9999

Range of Pool

☒ All Pools ☐ Pool ID(s)

Range of Pool

Add a Pool Header
Update a Pool Header
Delete a Pool Header
"Pool Management" - Assignment / Unassignment

[Save](#) [Done](#)

- Adjust the allowable timeframe if the grantor's Effective Date begins before the current date.
- To assign the right to the user, select **Save**. The View <Type> Access Right page is redisplayed with a success message.

ASSIGN TO PROFILE

If an accepted right is needed by several users, the administrator can choose to add the right to an existing company security profile. The access right would then apply to all users of the profile. When the administrator views an *accepted* access right and selects **Assign to Profile**, the Intra-Company Security Profile List page is displayed ([Exhibit 232](#)).

Exhibit 232. Intra-Company Security Profile List

Intra-Company Security Profile List

Select the security profile to update.

Select	ID	Name
☒	11	SEC160555
☐	19574	SEC230630
☐	19475	SEC160452
☐	19476	SEC160452
☐	19671	SEC050316
☐	19704	SEC070441

1. Select radio button beside the security profile where the grantor right is to be added and choose **Select**. The <Type> Access Right page is displayed ([Exhibit 233](#)). The ID of the security profile that is being added to is identified under the page title. In [Exhibit 233](#), the security profile ID is 11.

Exhibit 233. <Type> Access Right

View Confidential Data Access Right

Currently assigning a right to security profile: 11
Edit the details of the security profile access right.

Description of Access Right

Access Right ID (Assigned from Inter-company)
940845

Description *

Confidential Data Rights

Timeframe of Authority

Effective Date * Expiration Date *

11/07/2016 12/31/9999

Range of Equipment

☒ All Equipment:

SCAC(s): Initial(s): Equipment Group(s): Equipment:

AARE AARE BOXC CHSS CONT EOTD

2. Adjust the allowable timeframe if the grantor's Effective Date begins before today.

3. To assign the right to the profile select **Save**. The <Type> Access Right page is redisplayed with a success message.
4. Use the Intra-Company Manage Security Profiles function to add multiple users to the adjusted security profile. See [Editing a Security Profile](#).

Manage Inter-Company Profiles Granted to My Company

This function allows the grantee administrator to accept, decline, relinquish, and assign users to security management profiles granted by other companies.

Use the following procedure to access security profiles granted by other companies to the grantee:

1. On the Security Management page ([Exhibit 197](#)), select **Manage Inter-Company Profiles Granted to My Company**. The Manage Security Profiles page is displayed ([Exhibit 234](#)).

Exhibit 234. Manage Security Profiles for Inter-Company

Manage Security Profiles

✖ Clear Filters

	ID	Name	Status
☐	384	30-Day Temp View Confidential	Pending
☐	385	Temp Inspection Rights for RAIL	Relinquished
☐	383	Temp View Confidential	Revoked

✓ Accept

⊘ Decline

🏠 Done

Profiles that are in **Pending** status can be processed.

To decline the profile, check the box beside the profile and select **Decline**. The status becomes **Declined**. Nothing more can be done with the profile.

To accept the Pending profile, check the box beside the profile and select **Accept**. The status becomes **Accepted**, a success message is shown, and the profile ID is a hyperlink.



Umler also lists this inter-company security profile in the Available Profiles on the Add/Remove User to/from Security Profiles page ([Exhibit 219](#)). See [Add/Remove User To/From Security Profiles](#) for additional instructions.

Exhibit 235. Manage Security Profiles Updated

Manage Security Profiles

✓ Selected Profiles status has been successfully updated. ✕

✕ Clear Filters

	ID	Name	Status
☐	384	30-Day Temp View Confidential	Accepted
☐	385	Temp Inspection Rights for RAIL	Relinquished
☐	383	Temp View Confidential	Revoked

✓ Accept ✕ Decline 🏠 Done

4. To immediately add users, select the profile **ID** link. The Edit Security Profile page for the inter-company profile is displayed ([Exhibit 236](#)).

Exhibit 236. Edit Security Profile for Inter-Company

Edit Security Profile

ID: 619

* Security Profile Name : 30-Day Temp View Confidential

User:

✕ Clear Filters

☐	User ID	User Name	Access Rights
☐	AUTOCEPM	Admin App	View Individual Access Rights
☐	ehmstst	Admin Ehms	View Individual Access Rights
☐	AUTOAPI	API AUTO	View Individual Access Rights
☐	UMLRAUTO	AUTOMATION UMLER	View Individual Access Rights

📁 Save 📁 Save and Return ✕ Cancel

Access Rights

✕ Clear Filters

☐	ID	Company	Effective Date	Expiration Date	Type	Description
☐	107581	AARE	02/03/2020	12/31/9999	View Confidential Data	DDCTS testing

5. Check the box beside the User IDs who need to have the new inter-company profile assigned and select **Save**. For more information about Editing Security Profiles, see [Editing a Security Profile](#).

Special SSO Security Request for Non-Participating Companies

This function can be used to request full SSO Umler Administrative rights on behalf of another company (hereafter called the Approver). The Approver might be a very small railroad without access to SSO/Umler and has contracted with an agency or other road (hereafter called the

Requestor) to handle its equipment-related tasking. This process serves as a Letter of Authorization (LOA).

To be able to act on behalf of the Approver:

- The Requestor must submit a valid request.
- The Approver must approve the request.
- The Railinc Umler Administrator must verify the request approval in Umler.
- The Railinc Umler Administrator must establish the road mark authorizations in SSO.
- The Railinc Umler Administrator must implement the approved request in Umler.
- The Requestor (company Admin) must assign a Requestor contact for the Approver marks in FindUs.Rail.
- The Requestor (company Admin) must assign appropriate rights to their Umler users.

These tasks are described elsewhere in this guide (or in the [SSO and Launch Pad Administrator Guide](#)). Refer also to FindUs.Rail at <https://findusrail.railinc.com/>. Notification emails are sent throughout the process.

1. On the Security Management page ([Exhibit 197](#)), select **Special SSO Security Request from Non-Participating Companies**. The Inter Company Authorization Request page is displayed ([Exhibit 237](#)).

Exhibit 237. Inter Company Authorization Request

Inter Company Authorization Request

This is a special request for full SSO Umler Administrative Rights from a company that does not participate in SSO. Request is to manage all user and equipment transactions for the requested Mark(s). Special SSO requests are subject to a \$50 processing fee per Mark requested

Request Authorization for Mark(s) *
(Please provide a Mark or list of Marks separated by commas)

RAIL, AARE

Approver Routing Information

(Please provide the following information regarding the approver)

Name *
John Smith

Company Name *
Railinc

Email Address *
john.smith@railinc.com

Phone Number *
919-651-5000

Address 1 *
7001 Weston Parkway

Address 2

City *
Cary

State/Province *
NC

Zip Code *
27513

Country *
United States

This authorization is requested through the following date *
11/06/2025

Message to the approver
For documentation

2. Complete the required fields.
 - a. **Request Authorization for Marks**—Enter the marks being requested
 - b. **Name**—Enter the name of the Approver. (e.g., John Doe)
 - c. **Company Name**—Company Name of Approver (e.g., Very Small Railroad, Inc.)
 - d. **Email Address**—Email for Approver (e.g., John.Doe@VerySmallRR.com)
 - e. **Phone Number**— Approver’s phone number in AAA XXX-NNNN format
 - f. **Address 1**—Mailing address of Approver (Address line 2 as needed)
 - g. **City**—City of Approver
 - h. **State/Province**—Use 2-character where possible
 - i. **ZIP Code**—ZIP code for address

- j. **Country**—Country of Approved (e.g., US)
 - k. **This authorization is requested through the following date**—Use calendar picker to choose an end date. For no end date, use 12-31-9999.
 - l. (Optional) **Message to the Approver**—Appropriate comments (e.g., “Let us know if you need other marks handled.”)
3. Select **Submit**. A confirmation message is displayed ([Exhibit 238](#))

Exhibit 238. Inter Company Authorization Request Confirmation

Inter Company Authorization Request Confirmation

✓ Request has been submitted successfully. Please note the reference number for the request - 88 ✕

🏠 Done

- a. A confirming email is sent to the requestor.

An email is sent to the approver. The approver email contains a link to a website (not shown) where the request can be viewed and then either rejected or approved.

View Status of Special Umler SSO Requests

Once an Intercompany Authorization Request has been submitted, the requestor can check the status of the requests.

Use the following procedure to check the status:

1. On the Security Management page ([Exhibit 197](#)), select **View Status of Special Umler SSO Request**. The Search Special Umler SSO Requests page is displayed ([Exhibit 239](#)).

Exhibit 239. Search Special Umler SSO Requests

Search Special Umler SSO Requests

Search Requests submitted by your Company. Enter Criteria below to search by Approval Status or by Mark (or list of Marks separated by a comma).

Approver Status ▼

All

User Mark //

🔍 Search
✕ Cancel

2. Enter search criteria.
 - a. Approver Status can be:
 - All (finds everything, recommended)
 - Pending
 - Approved
 - Rejected

- b. User Mark (specific known marks for an Approver)
3. Select **Search**. The Search Special Umler SSO Requests page is redisplayed ([Exhibit 240](#)).

Exhibit 240. Search Special Umler SSO Requests Results

Search Special Umler SSO Requests

Search Criteria

Search Results

The following requests were submitted by your company. Data can be sorted by clicking on a column header.

Clear Filters

R.	Requested Date	Requested by	Requested Marks	Sent to	Approver Status	Implemented Sta...	Expiration Date
88	11/06/2023	John Smith	RAILAARE	john.smith@railinc.com	Pending		11/06/2025

This page is for viewing only. As needed, select the **Search Criteria** tab to modify the search criteria and do a different search. To exit the page, select another menu item.

Search User Access Rights

An administrator can search for access rights by Access Right (Pool, Equipment, Inspection, and View Confidential Data), by Type (specific activities), by User ID, by status (active and inactive), and by timeframe.

Use the following procedure to search User Access Rights:

1. On the Security Management page ([Exhibit 197](#)), select **Search User Access Rights**. The Search Access Rights page is displayed ([Exhibit 241](#)).

Exhibit 241. Search Access Rights

Search Access Rights

Search

Cancel

Results will include rights matching ALL of the following criteria.

User ID(s):

Access Right(s):

Equipment

Inspection

Pool

View Confidential Data

Type Of Access:

"Pool Management" - Assignment / Unassignment

AFMC Inspection

Add Equipment

Add a Pool Header

Air Brake Test

Autorack Certification

Autorack Inspection

Autorack Repair

Car Grade Inspection

Delete Equipment

Status:

☐ Active

☐ Inactive

Timeframe of Authority

Effective Date

11/06/2023

Expiration Date

12/31/9999

Search

Cancel

Exhibit 242. Search Access Right(s) Field Descriptions

Field	Description
User ID(s)	Search for access rights assigned to specific users by entering user ID(s) in this field. Separate multiple IDs using the delimiters shown in Exhibit 23 (generally a single space).
Access Right(s)	Select one or more available access rights: Equipment, Inspection, Pool, and View Confidential Data. Hold Ctrl key to make multiple selections.

Field	Description
Type of Access	Select one or more available types of access. Hold Ctrl key to make multiple selections.
Status	Default is to have neither Status selected. Check Active to search only currently effective access rights. Check Inactive to search expired rights.
Timeframe of Authority	Specify the Effective Date and the Expiration Date for the access right. The Effective date defaults to today's date. The Expiration Date must be greater than or equal to the Effective Date. <i>If a Status box is checked, this field is unavailable.</i>

Viewing Specific Users' Rights

To see what access rights a specific user currently has, enter the user ID in the **User ID(s)** field, check **Active Status** and select **Search**. The Search Access Rights Results page is displayed ([Exhibit 243](#)). To modify searches, select the **Search Criteria** tab, revise the criteria, and reselect **Search**.

Exhibit 243. Search Access Rights Results For a Specific User

Search Access Rights Results								
Search Criteria		Search Results						
								Clear Filters
User Right/Profile ID	Name	Access Right Type	Effective Date ↓	Expiration Date	Last Updated Date	Last Updated By	All Assets	Right Source
1026811	Surge Test	Pool	2023-05-10	9999-12-30	2023-05-11	SURGEADM	false	User
1026812	Surge Test	Equipment View	2023-05-10	9999-12-30	2023-05-11	SURGEADM	false	User
1026813	Surge Test	Inspection	2023-05-10	9999-12-30	2023-05-11	SURGEADM	No	User

The results list contains a Right Source column that identifies whether the access right is sourced from the user, or a security profile. The **User Right ID/Profile ID** column contains the unique IDs assigned by Umler for these rights or profiles as selectable links.

To view the details of the access rights, select **User Right/Profile ID** link in the first column. Depending on whether the link represents a right or a profile, the <Type> Access Right (view-only) or the Edit Security Profile page for the selected link is displayed ([Exhibit 244](#)).

All access right detail pages via Search are read-only, so to remove individual access rights for the user, refer to [Manage Intra-Company User Access Rights](#).

Exhibit 244. Edit Security Profile For a Specific ID

Edit Security Profile

ID: 1932

* Security Profile Name : 30-Day Temp View Confidential

User:

Clear Filters

☐	User ID	User Name	Access Rights
☒	AUTDEHMS	(RAIL) EHMS QA Automation	View Individual Access Rights
☐	EHV_SYS	Account EHV System	View Individual Access Rights
☐	EVZIT01	Admin DDCTS	View Individual Access Rights
☐	A_EMISCO	Admin Umler Company	View Individual Access Rights
☐	TRAINFAX	Application TrainFax	View Individual Access Rights
☐	RESTAPI	Automation ApiTest	View Individual Access Rights
☐	GBRXMDRN	AWS GBRX	View Individual Access Rights

Save

Save and Return

Cancel

Access Rights

Clear Filters

☐	ID	Company	Effective Date	Expiration Date	Type	Description
☐	1028266	RAIL	10/09/2023	12/31/9999	Equipment	30-Day Temporary View Equip Rights

The administrator can choose to unassign the user from this profile by unchecking the **User ID** and selecting **Save**. To see the details of the specific access rights, the administrator can select the **ID** link(s) shown in the Access Rights tab to view a read-only version ([Exhibit 245](#)). Select **Cancel** to return to the Edit page.

Exhibit 245. Equipment Access Right Read-Only

Equipment Access Right

Currently editing access rights for security profile: 1932
Edit the details of the security profile access right.

Cancel

Description of Access Right

Access Right ID (Assigned from Inter-company)
1028266

Description
30-Day Temporary View Equip Rights

Timeframe of Authority

Effective Date
10/09/2023

Expiration Date
12/31/9999

Range of Equipment

☒ All Equipment:

SCAC(s):
AA

Initial(s):
AA

Equipment Group(s):
BOXC
CHSS
CONT
EOTD

Equipment:

Type of Access

Non-Owner Self-as-Lessee Removal
Update Equipment Maintenance Party
Equipment - "Add to Pool"
Equipment - "Remove from Pool"
Update Equipment Management Codes

Cancel

Searching by Rights

An administrator can search for users who have specific rights assigned to them (or even specific types of access).

On the Search Access Rights page, select search criteria. In [Exhibit 246](#), inspection access rights are included in the criteria for locomotive-related tasks. Check **Active** status and select **Search**. The results are shown in [Exhibit 247](#).

Exhibit 246. Search Access Rights – Locomotive Inspection Example

Search Access Rights

Q Search X Cancel

Results will include rights matching ALL of the following criteria.

User ID(s):

Access Right(s):

- Equipment
- Inspection
- Pool
- View Confidential Data

Type Of Access:

- Locomotive L3 FastBrake Quick Service Valve Inspection
- Locomotive Out of Service
- Locomotive Periodic Inspection
- Locomotive RCL Inspection
- Modify Equipment
- Non-Owner Self-as-Lessee Removal
- Qualified Locomotive Manual Inspection
- Reflectorization Event
- Service Brake Valve Inspection
- Update a Pool Header

Status:

☒ Active

☐ Inactive

Q Search X Cancel

Exhibit 247. Search Access Right Results – Locomotive-related Inspections

Search Access Rights Results

Search Criteria Search Results

X Clear Filters

User Right/Profile ID	Name	Access Right Type	Effective Date	Expiration Date	Last Updated Date	Last Updated By	All Assets	Right Source
107942	Kevin Meyer	Inspection	2020-12-01	9999-12-30	2020-12-02	BSKXM05	No	User
107944	Carlos Carbajal	Inspection	2020-12-03	9999-12-30	2020-12-04	NamKam	No	User
107956	Tavon Littles	Inspection	2020-12-09	9999-12-30	2020-12-10	TMLTEST	No	User
107959	Tavon Littles	Inspection	2020-12-09	9999-12-30	2020-12-10	TMLTEST	No	User
108020	Laura Vachon	Inspection	2021-02-11	9999-12-30	2021-02-12	tdldir01	No	User
108057	Kenya McMillan	Inspection	2021-03-14	9999-12-30	2021-03-15	NamKam	No	User
108063	EHMS EHMS	Inspection	2021-03-28	9999-12-30	2021-03-29	BSKXM05	No	User
108073	Kevin Meyer	Inspection	2021-04-18	9999-12-30	2021-04-19	BSKXM05	No	User
108074	Anthony Randall	Inspection	2021-04-21	9999-12-30	2021-04-22	BSAXR02	No	User
108152	Cameron Stringfellow	Inspection	2021-07-21	9999-12-30	2021-07-22	emisadm1	No	User
108185	Tracy Brewer	Inspection	2021-08-10	9999-12-30	2021-08-11	eftib01	No	User
108188	Tracy Brewer	Inspection	2021-08-11	9999-12-30	2021-08-11	eftib01	No	User
108192	Tracy Brewer	Inspection	2021-08-11	9999-12-30	2021-08-11	eftib01	No	User
108233	UMLER AUTOMATION	Inspection	2021-09-20	9999-12-30	2021-09-21	UMLRAUTO	No	User
108237	Kenya McMillan	Inspection	2021-10-03	9999-12-30	2021-10-04	NamKam	No	User

There is one security profile for the specified rights and 22 individual access rights that contain at least one of the specified rights and tasks. To view the details for the profile or rights, select the links in the left column. Refer to the [Viewing Specific Users' Rights](#) for information about link detail pages.

Transfer Access Rights Between Companies

These tasks are for Railinc Administrators only.

When large groups of equipment are transferred from one company to another, the Umler record rights must also be transferred to allow further changes to the record (e.g., modify, pool assignment/unassignment) by the new company.

Manage Access Rights Transferred by My Company



Ensure the Company requesting to transfer the equipment to another road understands that once the equipment is accepted by the other road, the requesting company can no longer update those transferred Umler records or see any confidential data (regardless of the stencil mark)—the transfer is immediate.

Use the following procedure to release equipment in Umler to another road:

1. From the main menu, select **Account Administration > Security Management**. The Security Management page is displayed ([Exhibit 197](#)).
2. Select the **Manage Access Rights Transferred by My Company** link. The Access Rights Transferred by My Company page is displayed ([Exhibit 248](#)).

Exhibit 248. Access Rights Transferred by My Company

Access Rights Transferred by My Company

Currently viewing access right transfers for: BNSF

[Create New Access Right Transfer](#) [View](#) [Done](#)

Clear Filters

Sel...	ID	Transferee	Issue Date	Status
☒	195	CSXT	11/07/2023	Accepted

[Create New Access Right Transfer](#) [View](#) [Done](#)

3. Select **Create New Access Right Transfer**. The Transfer Access Right page is displayed ([Exhibit 249](#)).

Exhibit 249. Transfer Access Right

Transfer Access Right

Specify the company to which you will permanently transfer access rights.

 Transfer  Cancel

Target Company

CSXT - CSX TRANSPORTATION

Specify the access rights you will permanently transfer. You can specify the access rights by SCAC(s), car initial(s), equipment ID(s) or pool ID(s).

Access Rights

☐ SCAC(s) ☐ Initial(s) ☒ Equipment ID(s) ☐ Pool ID(s)

BNSF

ATSF
BN
BNAZ

BNSF666028

 Transfer 

4. Select the **Target Company** from the drop-down list.
5. Select the type of access being transferred. In [Exhibit 249](#), BNSF is transferring equipment ID BNSF666028 to CSXT.

Select **Transfer**. The Confirm Transfer page is displayed ([Exhibit 250](#)).

Exhibit 250. Confirm Transfer

Confirm Transfer

 You cannot undo this action. Are you sure you want to permanently transfer access rights for these assets to CSXT? 

 Transfer 

Range of Equipment/Pool

Equipment ID(s): BNSF0000666028

 Transfer 

7. Select **Transfer** a second time. The Transfer Pending page is displayed ([Exhibit 251](#)).

Exhibit 251. Transfer Pending

Transfer Pending	
Detail	
Transfer ID:	195
Transferor ID:	BNSF
Transferee ID:	CSXT
Time of Transfer Issue	
Issue Date:	11/07/2023
Time of Transfer Response	
Response Date:	
Range of Equipment/Pool	
Equipment ID(s):	BNSF0000666028
Status	
Pending	
 Done	

The equipment status remains Pending until the other mark accepts the transfer (described in [Manage Access Rights Transferred to My Company](#)).

8. Select **Done**.

Manage Access Rights Transferred to My Company

Use the following procedure to accept or reject records or rights being transferred to the authorized user's mark:

1. From the main menu, select **Account Administration > Security Management**. The Security Management page is displayed ([Exhibit 197](#)).
2. Select the **Manage Access Rights Transferred to My Company** link. The Transfer Access Right page is displayed ([Exhibit 252](#)).

Exhibit 252. Access Rights Transferred to My Company

Access Rights Transferred to My Company

 View  Done

 Clear Filters

Sel...	ID	Transferor	Issue Date	Status
☒	3	NS	05/10/2004	Accepted
☐	15	NS	03/31/2006	Accepted
☐	195	BNSF	11/07/2023	Pending

 View  Done

[Exhibit 252](#) shows one pending transfer.

Select the radio button for the pending transfer and select **View**. The Accept or Decline Transfer of Access Rights page is displayed ([Exhibit 253](#)).

Exhibit 253. Accept or Decline Transfer of Access Rights

Accept or Decline Transfer of Access Rights

The following access right transfer is currently pending your acceptance. Accept or decline this transfer.

 Accept  Decline  Cancel

Detail

Transfer ID: 195

Transferor ID: [BNSF](#)

Transferee ID: CSXT

Time of Transfer Issue

Issue Date: 11/07/2023

Time of Transfer Response

Response Date:

Range of Equipment/Pool

Equipment ID(s): BNSF0000666028

Status

Pending

 Accept  Decline  Cancel

To accept the transfer, select **Accept**. The Access Right Transfer page is displayed with the Status set to Accepted ([Exhibit 254](#)).

To decline the transfer, select **Decline**. The Access Right Transfer page is displayed with the Status set to Declined (similar to [Exhibit 254](#)).

- c. To exit without choosing, select **Cancel** to return to the Access Rights Transferred to My Company page ([Exhibit 252](#)).

Exhibit 254. Access Right Transfer

Access Right Transfer

 Transferred access right accepted successfully. 

 Done

Detail

Transfer ID: 195

Transferor ID: [BNSF](#)

Transferee ID: CSXT

Time of Transfer Issue

Issue Date: 11/07/2023

Time of Transfer Response

Response Date: 11/07/2023

Range of Equipment/Pool

Equipment ID(s): BNSF0000666028

Status

Accepted

 Done

4. Select **Done** to return to the Access Rights Transferred to My Company page ([Exhibit 252](#)).

Configure Ticklers

The Configure Ticklers function allows account administrators to specify which types of event notifications should be sent by Umler, and to which email addresses.

Use the following procedure to configure ticklers:

1. From the main menu, select **Account Administration > Configure Ticklers**. The Configure Ticklers page is displayed ([Exhibit 255](#)).

Exhibit 255. Configure Ticklers

Configure Ticklers

Specify the e-mail address to receive notifications of the following events: (Use commas to separate multiple e-mail addresses.)

Save
Reset
Clear
Cancel

Enabled	Event Code	Event	E-Mail Address
☒	110	Warnings prior to deleting an idle pool header.	
☐	120	Equipment is dropped from a pool due to an update to equipment characteristic.	
☒	121	Maintenance Party updated for equipment.	
☒	130	A pool assignment reported by a non-owner fails.	
☒	190	A bulk upload by your company completes processing. (The notice contains the processing results for the uploaded transactions.)	@railinc.com
☒	200	Another company grants an inter-company access right to your company.	@railinc.com
☒	210	Another company revokes an inter-company access right from your company.	
☒	220	Another company accepts an inter-company access right granted by your company.	

⋮

☒	731	Informational Conflict (B355) Populated with Y Flag for Component Conflict sent to Performer	
☒	740	Air Brake Test has been nullified that had an Air Brake Test Device equal to P	
☒	750	Wheelset Component ID associations required for all applicable locations	
☐	760	Notification sent when Umler Equipment Validation Request is created	
☒	810	Notify Railinc Umler business when billable records exceeds 50,000 for a given month	
☐	820	Notify SS Owner when a VFLT has been deleted	
☐	821	Notify SS Owner when SS Rebuilt Date has changed	
☒	CFLT	Conflict creation/status warning notifications for the equipment.	@bnsf.com, @railinc.com

Save
Reset
Clear
Cancel

2. Select the check box beside the appropriate types of messages.

For each message type selected, enter at least one email address. Separate multiple email addresses by a comma. Optionally, check the box **not** to send “no change” ticklers.

4. When all ticklers have been specified, select **Save**. A success message is displayed at the top of the page.
5. To exit the page, select another Umler menu item.


Usage Statistics

This function can be used by Company Administrators to monitor billable requests like web services and CSV downloads.

Use the following procedure to monitor usage statistics:

1. From the main menu, select **Account Administration > Usage Statistics**. The Usage Statistics page is displayed ([Exhibit 256](#)).

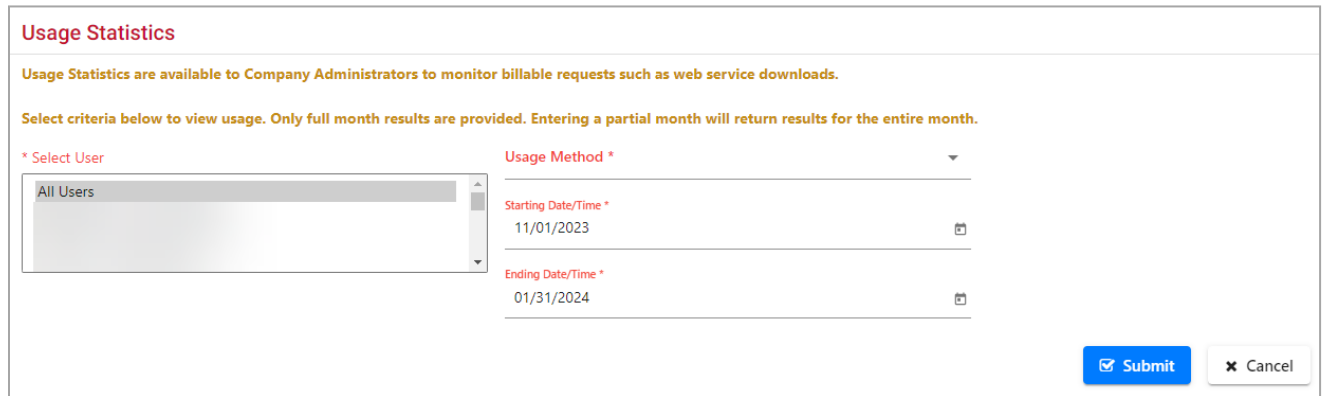Exhibit 256. Usage Statistics



The screenshot shows the 'Usage Statistics' form. At the top, it says 'Usage Statistics' in red. Below that, a note states: 'Usage Statistics are available to Company Administrators to monitor billable requests such as web service downloads.' A sub-note says: 'Select criteria below to view usage. Only full month results are provided. Entering a partial month will return results for the entire month.' The form has two main sections. The left section is labeled '* Select User' and contains a multi-select dropdown menu with 'All Users' selected. The right section is labeled 'Usage Method *' and has a dropdown menu. Below this, there are two date/time fields: 'Starting Date/Time *' with the value '11/01/2023' and 'Ending Date/Time *' with the value '01/31/2024'. Both date fields have calendar icons. At the bottom right, there are two buttons: a blue 'Submit' button with a checkmark icon and a grey 'Cancel' button with an 'x' icon.

2. Select the users in the **Select User** field (multiple selection is allowed).
3. Select from the Usage Method drop-down list: **Web Services**, **CSV Downloads** or **Blue Card**.
4. Select the **Starting** and **Ending Date/Time**. Only whole months can be processed. 3-month limit.
5. Select **Submit**. The results are displayed online ([Exhibit 257](#)).

Exhibit 257. Usage Statistics Search Results

Usage Statistics

Search Criteria

Search Results

Usage Summary :

Transaction Type	Mon-Year	Billable Records
EQUIP_QUERY	Nov-2023	440
EQUIP_QUERY	Oct-2023	4411
EQUIP_QUERY	Sep-2023	353
TRANS_LOG_QUERY	Nov-2023	4803
TRANS_LOG_QUERY	Oct-2023	14924
TRANS_LOG_QUERY	Sep-2023	23520


Usage Details :

User ID	Transaction Type	Mon-Year	Billable Records
AUTOUMLR	EQUIP_QUERY	Nov-2023	7
AUTOUMLR	EQUIP_QUERY	Oct-2023	4393
AUTOUMLR	EQUIP_QUERY	Sep-2023	353
AUTOUMLR	TRANS_LOG_QUERY	Nov-2023	4803
AUTOUMLR	TRANS_LOG_QUERY	Oct-2023	6692
AUTOUMLR	TRANS_LOG_QUERY	Sep-2023	23520
CREGNONA	TRANS_LOG_QUERY	Oct-2023	8232
DEVQAMT	EQUIP_QUERY	Nov-2023	157

Contact List

When the **Contact List** is selected, the Railinc [FindUs.Rail application](#) opens in a new window or tab ([Exhibit 258](#)).

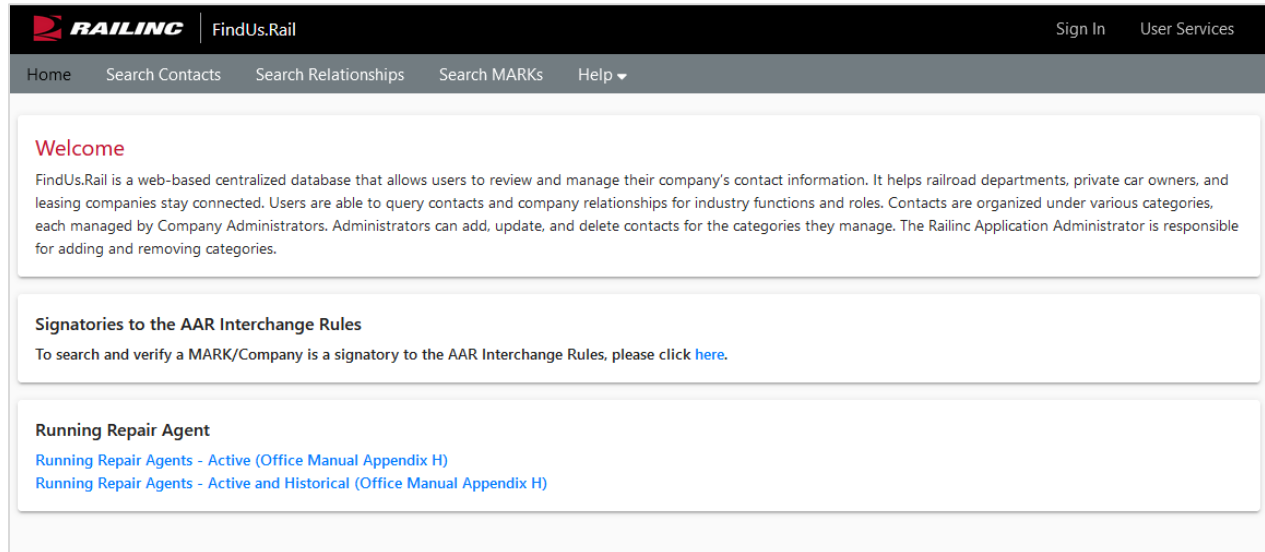Exhibit 258. FindUs.Rail



The Umler Contact List has been incorporated into Railinc's FindUs.Rail application. Refer to [FindUs.Rail](#) for the most recent Umler contact information.

See the [FindUs.Rail product page](#) on Railinc.com for details. The appearance of the FindUs.Rail website is subject to change. It is beyond the scope of this document to discuss to use of FindUs.Rail. Once within the application, select the **Help** menu item for online assistance.

Component Tracking/Registry

The Component Tracking functions are described in the [Umler Component Tracking User Guide](#), which can be accessed from [References](#). See the [Component Tracking product page](#) for details.

Semi-Annual Billing

Umler is used for the safe and efficient placement, movement, and interchange of cars for railroad carriers and customers. Equipment registered in Umler is subject to registration fees. Any equipment involved in Interchange Service is required to be in Umler. Equipment no longer in use should be deleted from Umler to avoid registration fees.

The invoice will require payment for equipment registered in Umler as of January 1 or July 1. The equipment must be deleted before January 1 or July 1 in order for the car owner to NOT be charged.

[Equipment Query](#) provides a quick and easy way to query Umler data and find all equipment registered under your assigned reporting marks.

Umler Semi-Annual Registration Fee

Invoices are based on all equipment registered in the Umler file under your assigned reporting marks effective on January 1 and July 1 each year, regardless of equipment status.

The Umler per car maintenance fee is billed to Stenciled Mark Owners in February and August. For more information, refer to the [Railinc Price List](#).

- UMMBLRP10 Fleet of 1-81 units – flat fee
- UMMBLRP30 Fleet more than 82 units – per unit fee

It is the responsibility of each owner or their agent to maintain the accuracy of their Umler registration with respect to their fleet.

AAR Technical Services User Fee

Invoices are based on 7 equipment groups: Box, Gondola, Hopper, Tank, Flat, Intermodal Flat, and Vehicular Flat in Active or Inactive statuses only.

The AAR Technical Services User Fee is administered by Railinc and is billed to all the Umler owners in January and July. Refer to the *AAR Field Manual* Appendix E Miscellaneous Fees for pricing details.

- AARTCHUSR Fleet of 1-45 units – flat fee
- AARTCHUSR Fleet more than 46 units – per unit fee

It is the responsibility of each owner or their agent to maintain the accuracy of their Umler registration with respect to their fleet.

AAR Intermodal User Fee

Invoices are based on 3 equipment groups: Trailers, Containers, and Chassis in Active or Inactive statuses only.

The AAR Intermodal User Fee is administered by Railinc and is only billed to the Umler owners in January and July. Refer to the *AAR Field Manual* Appendix E Miscellaneous Fees for pricing details.

- AARINTRMDL – price for each piece of equipment

Help

Umler provides several forms of help from within the application. Select the [References](#) menu item for access to all Umler-related training materials on Railinc.com.

Field help links for Umler equipment elements are available on certain pages like Display Unit and Modify pages.

Field Help

Field help is available for selected pages, notably the Add or Modify Equipment pages, where specific information available in the [Umler Data Specifications Manual](#) is needed to complete certain fields.

To view helpful details about a particular element, select its **ID** link. Umler opens a new browser window with specific information related that field.

Exhibit 259. Umler Elements Field Help

Display Unit

Search

LDLT_MISC

Load Limit for Miscellaneous Cars (Weight) ●

The maximum permissible weight of the commodity that can be loaded into the equipment, reported in pounds

Mandatory

Range of Values for LDLT

Minimum	Maximum
8000	999900

NOTES:

- For connected unit cars report the sum of the load limits for all units in the set.

RAILINC

Legal Notices | Terms of Use | Umler Reference Materials
© 2023 Railinc Corp. All rights reserved.

[General](#) [Weight](#)

[Brake System Components](#) [Miscellaneous](#) [Inspection](#) [Default Presentation Group](#)

Gross Rail Load/Weight	A266		263000 lb
Tare Weight	A259		75000 lb
Load Limit	LDLT	●	188000 lb

The portion of the [Umler Data Specifications Manual](#) for the selected car type element is displayed. If the material is larger than the default window size, scroll bars are provided. To enlarge the print, select the magnifying glass in the lower right. When finished viewing the element, close the window (select the upper right **X**, or press **Alt+F4**).


To print the help, press **Ctrl+P** while viewing and send to local printer.

References

When the **References** menu item is selected, the [Umler product page](#) on Railinc.com opens to all Umler-related training materials. Scroll through this entire page for links to the most recent training materials ([Exhibit 260](#)), including:

- Umler User Guide
- Umler Data Specifications Manual
- Umler Demos and Webinars
- Umler Quick Guides
- Umler Industry Reference and Load Files
- Umler Change Request Form
- Umler Train II Messaging Specifications Manual

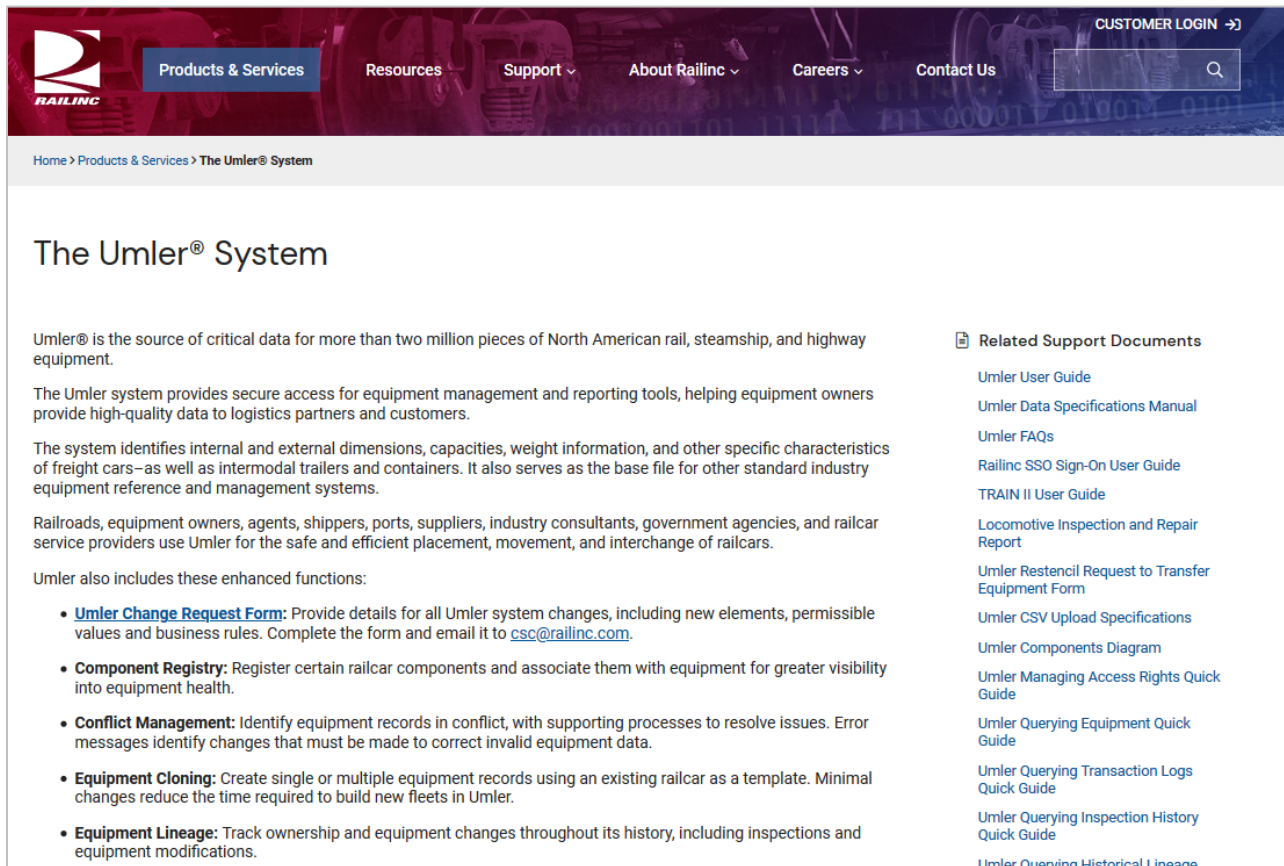Exhibit 260. The Umler Product Page on Railinc.com



The Umler® System

Umler® is the source of critical data for more than two million pieces of North American rail, steamship, and highway equipment.

The Umler system provides secure access for equipment management and reporting tools, helping equipment owners provide high-quality data to logistics partners and customers.

The system identifies internal and external dimensions, capacities, weight information, and other specific characteristics of freight cars—as well as intermodal trailers and containers. It also serves as the base file for other standard industry equipment reference and management systems.

Railroads, equipment owners, agents, shippers, ports, suppliers, industry consultants, government agencies, and railcar service providers use Umler for the safe and efficient placement, movement, and interchange of railcars.

Umler also includes these enhanced functions:

- **Umler Change Request Form:** Provide details for all Umler system changes, including new elements, permissible values and business rules. Complete the form and email it to csc@railinc.com.
- **Component Registry:** Register certain railcar components and associate them with equipment for greater visibility into equipment health.
- **Conflict Management:** Identify equipment records in conflict, with supporting processes to resolve issues. Error messages identify changes that must be made to correct invalid equipment data.
- **Equipment Cloning:** Create single or multiple equipment records using an existing railcar as a template. Minimal changes reduce the time required to build new fleets in Umler.
- **Equipment Lineage:** Track ownership and equipment changes throughout its history, including inspections and equipment modifications.

Related Support Documents

- [Umler User Guide](#)
- [Umler Data Specifications Manual](#)
- [Umler FAQs](#)
- [Railinc SSO Sign-On User Guide](#)
- [TRAIN II User Guide](#)
- [Locomotive Inspection and Repair Report](#)
- [Umler Restencil Request to Transfer Equipment Form](#)
- [Umler CSV Upload Specifications](#)
- [Umler Components Diagram](#)
- [Umler Managing Access Rights Quick Guide](#)
- [Umler Querying Equipment Quick Guide](#)
- [Umler Querying Transaction Logs Quick Guide](#)
- [Umler Querying Inspection History Quick Guide](#)
- [Umler Quervino Historical Lineage](#)

To view a document on Railinc.com, select the link. The document opens in a new window.

To download a PDF of a document, click the link and select the download button, which may be different depending on your browser (example of the download button in Chrome) and save the document to your computer:



Index

- AAR Field Manual, 10
- accept, 190
 - granted profile, 194
 - granted right, 190
 - record transfer, 208
- Accept button, 14
 - description, 14
 - usage, 190
- Accepted status, 187
- access, 16
 - by equipment groups, 164
 - by equipment IDs, 164
 - by equipment initials, 164
 - by pool, 165
 - by SCAC, 164
 - equipment, 164
 - inspection, 164
 - pool, 164
 - range of equipment, 164
 - range of pools, 165
 - requesting, 16
 - view confidential data, 164
- access right, 163
 - add equipment right, 171
 - add inspection right, 173
 - add pool right, 169
 - clone, 176
 - combined, 177
 - Count Equipment, 172
 - delete, 175
 - description, 163
 - edit, 175
 - from other companies, 189
 - grant, 186
 - grantor tasks, 185
 - manage others, 167
 - search, 200
 - status, 187
 - timeframe of authority, 164
 - transfer, 205
 - type, 164
 - view own, 166
- account administration, 163
- action drop-down, 39
 - car management query, 49
 - company-specific equipment groups, 130
 - equipment query, 39
 - notice management, 147
- add, 71
 - company-specific equipment group, 135
 - equipment, 71
 - equipment right, 171
 - equipment to company-specific equipment group, 137
 - grantee, 186
 - grantee security profile, 188
 - inspection right, 173
 - pool right, 169
 - security profile, 178
 - to pool, 109
 - view confidential data access, 187
- Add Equipment Right button, 14
 - description, 14
 - usage, 171
- Add Inspection Right button, 14
 - description, 14
 - usage, 173
- Add Pool Right button, 14
 - description, 14
 - usage, 169
- Add View Confidential Data Right button, 14
 - description, 14
 - usage, 187
- Add-Back equipment, 77
- Add-Back Multiple equipment, 79
- administrator, 21
 - company, 21
 - Railinc, 13
 - Umler, 21
- air brake test, 114, 115
- All Saved Queries, 41
- annual inspection, 122
- application title, 11
- Assign to Profile button, 14
 - description, 14
 - usage, 190
- Assign to User button, 14
 - description, 14
 - usage, 190
- autorack inspection, 119
- Basic tab, 34
- broadcast refresh, 161
 - Umler 3.1, 162
 - Umler 3.2, 161
- button
 - command (Umler-specific), 14
 - Expand All, 14
 - Umler-specific, 14
- car grade inspection, 103
 - from Maintenance Inspection menu, 120
 - from Maintenance menu, 103
- Car Management, 98
 - create pool header, 99
 - delete pool header, 102
 - remove lessee, 103
 - report car grade inspection, 103
 - submenu, 98
 - update equipment management codes, 103
 - update pool assignments, 108
- Car Management Query, 43
 - Equipment View, 43
 - Pool View, 48
- change equipment group, 90
- check box
 - appearance toggle, 13
 - Differing elements only, 13
 - Flat View, 13
 - Show database values, 13
 - Show database values (Comparison), 67
 - Show database values (Display), 24
 - Spanish language, 13
 - Umler-specific, 13
- clone, 75
 - access right, 176
 - equipment, 75
 - security profile, 181
- Clone button, 14
 - description, 14
 - usage, 178
- Clone Rights button, 14
 - description, 14

- usage, 176
- Clone Rights from Another User button, 14
 - description, 14
 - usage, 176
- code, 29
 - equipment management, 103
 - event response, 145
 - mechanical designation, 29
 - Rule 260, 29
- Collapse All button, 14
 - description, 14
 - usage, 24
- company, 16
 - contact, 57
 - selecting, 16
- company-specific equipment group, 125
 - add equipment, 137
 - create, 135
 - delete, 131
 - edit, 131
 - Equipment View, 128
 - field descriptions, 128
 - group fields tab, 128
 - Group View, 128
 - move equipment between, 141
 - remove equipment, 140
 - search, 126
 - submenu, 125
 - task overview, 125
 - view, 131
- compare equipment unit, 66
- components by location, 82
- confidential data
 - grant right to view, 187
- Confirm Clone Rights button, 14
 - description, 14
 - usage, 177
- conflict, 18
 - query to view, 33
 - viewing, 18
- contact, 10
 - company, 57
 - find other, 21
 - FindUs.Rail, 213
 - Railinc, 10
 - user, 57
- contact list, 213
- contact us link, 12
- content area, 12
- copyright, 12
- correct element errors, 73
- count (obtain in query), 41
- Count Equipment button, 14
 - description, 14
 - for access rights, 172
- create, 99
 - company-specific equipment group, 135
 - PDF (for displayed Record), 24
 - pool header, 99
- Create PDF link, 24
- CSC, 10
- CSV, 40
 - from query, 40
 - inspection history, 63
 - notice query results, 149
- Customer Success Center (Railinc), 10
- Customize Query Output tab, 33
- decline, 190
 - granted profile, 194
 - granted right, 190
 - record transfer, 209
- Decline button, 14
 - description, 14
 - usage, 190
- Declined status, 187
- delete, 42
 - access right, 175
 - company-specific equipment group, 131
 - equipment, 94
 - pool header, 102
 - query, 42
 - reason, 95
 - security profile, 182
 - suspended work, 154
- delimiter, 30
- Differing elements only, 67
- display unit, 23
- due date update (inspection), 123
- edit, 131
 - access right, 175
 - company-specific equipment group, 131
 - security profile, 180
 - security profile for grantee, 188
- EIN, 29, 45
 - change rebuilt equipment, 29, 45
 - inspection history, 59
 - transaction log, 55
 - unique identifier, 29, 45
- element, 72
 - conditional, 73
 - mandatory, 72
 - select for modify multiple equipment, 84
- Element Selection button, 14
 - description, 14
 - usage, 85
- element value criteria, 55
 - in Query, 33
 - in View Conflict Query, 33
 - inspection history, 61
 - transaction logs, 55
- email, 10
 - special SSO requests, 196
 - tickler, 210
 - to user ID, 134
 - Umler access notification, 16
 - Umler administrator, 21
 - Umler support, 10
- equipment, 17
 - add, 71
 - add right, 171
 - Add-Back, 77
 - clone, 75
 - company-specific group, 29
 - comparison, 66
 - delete, 94
 - Equipment Validation Requests, 19
 - group, 29, 71
 - lookup single, 17
 - maintenance party, 93
 - modify multiple, 84
 - modify single, 81
 - Multiple Add-Back, 79
 - restencil multiple, 89
 - restencil single, 87
 - restricted, 29
 - single lookup, 18
- Equipment Group, 29
 - change, 90
 - field values, 29
- Equipment ID, 28

- CSEG query, 128
- delimiter, 30
- in Manage Future Transactions, 156
- in query, 28
- in Search Notices, 143
- query formats, 30
- wildcard, 30
- Equipment Identification Number, 29, 45
 - in Inspection History, 59
 - in Query, 29, 45
 - in Transaction Log, 55
- Equipment Initials, 163
- Equipment Maintenance Party (update), 93
- equipment management code, 103
 - MD, 104
 - MR, 104
 - MRR, 104
 - PC, 104
 - SG, 104
 - TC, 104
 - TCC, 104
 - update, 103
 - UR, 104
- Equipment Type, 29
 - complete code, 29
 - partial code, 29
- Equipment Validation Requests, 19
- Equipment View, 43
 - Car Management Query, 43
 - Company-Specific Equipment Groups Search, 128
- error, 73
 - correction, 73
 - element, 73
 - notice, 143
- event notifications, 210
- event response code, 145
- Expand All button, 14
 - description, 14
 - usage, 24
- expire
 - access rights status, 187
- export, 40
 - query results, 40
- field description, 28
 - Car Management Query, 44
 - Equipment Query, 28
- field help, 217
- find other contacts, 21
- FindUs.Rail, 213
- Flat View, 24
- future transaction, 51
 - create pool header, 101
 - delete, 156
 - delete pool header, 102
 - manage, 155
 - pool assignment, 109
 - pool unassignment, 110
 - update pool header, 51
 - view, 156
- Go button, 14
 - description, 14
 - usage, 83
- grant, 186
 - access right, 186
 - equipment right, 187
 - inspection right, 187
 - pool right, 187
 - profile, 188
 - view confidential data right, 187
- Grant Access Right button, 14
 - description, 14
 - usage, 186
- Grant Profiles button, 14
 - description, 14
 - usage, 188
- granted profile, 194
 - accept, 194
 - decline, 194
 - management, 194
- granted right, 188
 - accept, 190
 - assign to profile, 192
 - assign to user, 191
 - decline, 190
 - management, 189
 - relinquish, 190
 - revoke, 188
 - view, 188
- grantee, 185
 - add new, 186
 - definition, 185
- grantor (definition), 185
- group ID, 128
- Group View, 128
- Held-Short Location
 - Create Pool Header, 100
- help
 - field, 217
 - overview, 217
- historical lineage, 63, 65
- Home/Welcome page, 16
- icon
 - Umler-specific, 15
- information notice, 143
- inspection, 103
 - add right, 173
 - air brake, 114, 115
 - air brake test device, 96, 116
 - autorack, 119
 - car grade, 103, 120
 - date done, 96, 114, 115, 120
 - due date update, 123
 - locomotive air brake, 122
 - locomotive annual, 122
 - locomotive cab signals, 122
 - locomotive quarterly, 122
 - locomotive RCL, 122
 - overview, 111
 - performer, 96, 114, 115
 - record, 111
 - reporter, 96, 114, 115
- inspection history, 59
 - export CSV link, 62
 - query, 59
 - summary result, 62
- Launch Pad, 12
- legal, 12
- legal notices, 12
- lessee, 32
 - definition, 32
 - remove, 103
- letter of authorization, 195
- link, 11
 - contact us, 12
 - Create PDF, 24
 - Launch Pad, 12
 - navigational, 11
 - sign out, 12
- LOA, 195
- Loading Location, 44

- Car Management Query, 44
- Create Pool Header, 100
- location SPLC, 114, 116, 120
 - for Air Brake Test, 114, 116, 120
- locomotive inspection, 122
- locomotive storage event, 124
- log in, 16
- log off, 17
- logo (Railinc), 11
- Lookup tab, 24
- maintenance menu, 68
- manage future transaction, 155
- Maximum Number of Results field, 33
- MD, 104
- mechanical designation, 29
 - Car Management Query, 45
 - Company-Specific Equipment Groups, 128
 - equipment query, 29
 - transaction log, 54
- Mechanical Restriction, 106
- Mechanical Restriction Reason, 106
- menu, 12
 - account administration, 163
 - application, 12
 - maintenance, 68
 - references, 12, 218
 - Security Management, 165
- message area, 12
- modify, 81
 - multiple equipment, 84
 - single equipment, 81
- monitor usage, 211
- move equipment (company-specific equipment group), 141
- MR, 104
- MRR, 104
- My Saved Queries, 41
- navigational link, 11
- non-SSO user requests
 - check status, 198
 - create, 195
- notice, 142
 - CSV export, 149
 - CSV file column key, 149
 - details, 148
 - Error, 143
 - group, 143
 - Information, 143
 - level, 143
 - management overview, 142
 - status, 143
 - type, 143
 - upload correction, 160
 - Warning, 143
- Operator, 44
 - Car Management query, 44
 - Pool Header maintenance, 100
- page title, 12
- PC, 104
- Pending status, 187
- pool, 165
 - add right, 169
 - range, 165
- pool assignment, 108
 - from query, 109
 - removal using query, 110
 - to multiple pools, 109
 - to one pool, 108
 - update, 108
- pool control, 104
- pool header, 48
 - create, 99
 - delete, 102
 - fields, 100
 - update, 50
 - view, 49
- Pool ID, 29
 - Car Management Query, 44
 - Create Pool Header, 100
 - Equipment Query, 29
 - transaction log, 54
- Pool Maintenance Code
 - Create Pool Header, 100
- Pool Type, 44
 - Car Management Query, 44
 - Create Pool Header, 101
- Pool View (Car Management Query), 48
- privacy rights, 12
- quarterly inspection, 122
- query, 22
 - action drop-down, 39
 - browser or CSV, 33, 129, 146, 156
 - Car Management, 43
 - count, 41
 - Count, 37
 - customize output, 33
 - delete, 42
 - display unit, 23
 - equipment, 28
 - export to CSV, 40
 - historical lineage, 63, 65
 - inspection history, 59
 - menu, 22
 - Notices, 156
 - Notices (Management), 146
 - online results, 39
 - processing options, 37
 - reuse, 42
 - save, 42
 - saved query table, 42
 - Search, 37
 - sort by fields, 34
- Railinc Customer Success Center, 10
- Railinc logo, 11
- RCL inspection, 122
- record transfer, 205
 - accept, 208
 - decline, 209
 - receipt, 207
 - release, 205
 - view, 208
- reference documents, 218
- references, 12
- refresh, 161
 - Umler 3.1, 162
 - Umler 3.2, 161
- Relinquish button, 14
 - description, 14
 - usage, 190
- relinquish granted right, 190
- Relinquished status, 187
- remove, 103
 - from pool, 110
 - lessee, 103
- Reporter, 44
 - Car Management Query, 44
 - Create Pool Header, 100
- restencil
 - multiple equipment, 89
 - single equipment, 87
- Restore button, 14

- description, 14
- usage, 149
- resume suspended work, 152
- revoke, 188
 - granted rights, 188
 - granted security profile, 188
- Revoke button, 14
 - description, 14
 - usage, 188
- Revoked status, 187
- Rule 260 code, 29
- save query, 42
 - function, 42
- Saved Queries, 41
 - All Saved Queries, 41
 - My Saved Queries, 41
 - tab, 41
- SCAC, 163
- search, 22
 - access right, 200
- Search Criteria tab, 39
- Security Management, 163
 - Inter-company rights, 185
 - Intra-company rights, 166
 - menu (page), 165
 - overview, 163
- security profile, 177
 - add, 178
 - add all to user, 184
 - add for grantee, 188
 - add grant, 190
 - add/remove users, 182
 - clone, 181
 - definition, 177
 - delete, 182
 - delete access rights, 181
 - edit, 180
 - edit grantee, 188
 - from other companies, 194
 - grant, 188
 - manage, 177
 - name, 179
 - remove all from user, 184
 - revoke granted, 188
- select (in this document), 9
- SG, 104
- show database values, 13
 - Comparison, 67
 - Display, 24
 - overview, 13
- Show Equipment button, 15
 - description, 15
 - usage, 49
- sign out link, 12
- Sign-On Information, 11
- single equipment lookup, 18
- Single Sign On (SSO), 16
- Spanish language option, 17
- Special Umler SSO Requests
 - Approver approving, 198
 - Approver rejecting, 198
 - checking status, 198
 - LOA, 195
 - Requestor search, 198
 - submitting for non-user, 195
- SPLC lookup, 114, 116, 120
- Standard Carrier Alpha Code, 163
- statistics (usage), 211
- Status, 187
 - Accepted, 187
 - Declined, 187
 - Expired, 187
 - Pending, 187
 - Relinquished, 187
 - Revoked, 187
- storage event (locomotive), 124
- support, 10
- suspended work, 152
 - delete, 154
 - resume, 152
- Switch View button, 15
 - description, 15
 - usage, 82
- system generated, 104
- tab
 - Basic, 34
 - Customize Query Output, 33
 - Lookup, 24
 - Saved Queries, 41
 - Search Criteria, 39
- TC, 104
- TCC, 104
- terminology, 9
- terms of service, 12
- ticklers, 210
 - configure, 210
 - email addresses, 210
 - no change, 210
- timeframe of authority, 164
- title, 11
 - application, 11
 - page, 12
- transaction (bulk Umler upload), 159
- transaction log, 52
 - search, 52
 - viewing result, 57
- transfer, 205
 - receipt by company, 207
 - release to company, 205
- Transfer button, 15
 - description, 15
 - usage, 206
- transportation code, 104
- transportation condition code, 104
- type of access, 164
- Umler, 9
 - 3.1 refresh, 162
 - 3.2 refresh, 161
 - administrator, 21
 - application menu, 13
 - display record, 23
 - Home/Welcome page, 16
 - icons, 15
 - requesting changes, 10
 - support, 10
 - transaction upload, 159
- Umler User Guide, 218
- Umler™ Component Registry, 214
- Umler™ Data Specifications Manual, 10
 - description, 10
 - in Reference Documents, 218
- Umler™ Industry Reference and Load Files, 218
- update, 50
 - pool header, 50
- upload, 158
 - notice corrections, 160
 - Umler transactions, 159
- UR, 104
- usage statistics, 211
- Use Spanish for Error Messages and Properties, 13

- user, 16
 - assign access rights, 167
 - assign granted right, 190
 - assign security profile, 182
 - SSO, 16
- user contact info, 134
- user defined routing, 104
 - definition, 104
 - drop-down, 106
- User ID link, 134
- validation requests
 - viewing, 19
- view, 49
 - company-specific equipment group, 131
 - components by location, 82
 - conflicts, 18
 - equipment validation requests, 19
 - granted right, 189
 - granted rights, 188
 - pool header, 49
 - record transfer, 208
 - status of special SSO requests, 198
- view confidential data
 - grant right, 187
- warning notice, 143
- web interface, 10
 - page layout, 11
 - Umler-specific elements, 13
- wildcard, 30